





Setting the Time

- 1. Pull the crown out to the third position.
- 2. Turn the crown to set the current time and the daylight tracker.
- 3. Push the crown back to the first position.

Setting the Date

- 1. Pull the crown out to the second position.
- 2. Turn the crown clockwise to set the date (DO NOT set date between 9:00pm 2:00am).
- 3. Push the crown back to the first position. All done!

Setting the Dual Time Gmt

- 1. Pull the crown out to the second position.
- 2. Turn the crown counter-clockwise to set the GMT.
- 3. Push the crown back to the first position. You're set.

Warranty

Xeric gladly offers a limited warranty covering defects in materials and manufacturing for a period of one (1) year after the original purchase date from an authorized Xeric retailer. This warranty does not cover batteries, case, crystal, crown, pushers, straps, or any changes that occur during use and not from manufacturing or assembly. This warranty is considered void if you open your caseback, push the buttons underwater, or expose your watch to moisture beyond the recommendation of the watch's water resistance rating. Proof of purchase is required for all warranty claims, so please save a copy of your receipt. Xeric reserves the right to not accept a warranty claim if a watch has evidence of excessive wear or misuse. Xeric reserves the right to repair or replace any watch returned for service at our option.

Additional Info

For warranty questions or service requests, please visit **xeric.com**.

Battery type: SR920SW

Designed in California. Assembled in China



Water Resistance Guide 3 ATM = Not intended for any exposure to water. 5 ATM = Splash Resistant Suitable for washing hands or light rain. 10 ATM = Water Sports Suitable for swimming, surfing, etc. 30 ATM = Scuba Diving Suitable for extreme ocean depths. Brought to you by WATCHISMO LABS REIMAGINING TIME & SPACE

