





given an initial manual winding to power up the mainspring. [Approximately 40 clockwise turns of the crown]

# Time Setting

Gently pull the crown to the time setting mode (second position) to adjust the hands. Once you've set the time, push the crown back to the handwinding mode (first position). All done!

# Miyota Mov't Info

• Number of Jewels: 21

XERIC

- Accuracy: -20/+45 Seconds per Day
- Rotor Winding Direction: Counterclockwise, 800 Rotations per Day

# Please Read Before Use

Prior to setting the time, the Decypher Automatic movement must be

We recommend manually winding the Decypher each time you wear it.

· Vibration Frequency of 21,600 BPH

• Power Reserve: Up to 42 hours

• Posture Difference: Under 50 Seconds

### Warrantv

Xeric gladly offers a limited warranty covering defects in materials and manufacturing for a period of one (1) year after the original purchase date from an authorized Xeric retailer. This warranty does not cover batteries, case, crystal, crown, pushers, straps, or any changes that occur during use and not from manufacturing or assembly. This warranty is considered void if you open your caseback, push the buttons underwater, or expose your watch to moisture beyond the recommendation of the watch's water resistance rating. Proof of purchase is required for all warranty claims, so please save a copy of your receipt. Xeric reserves the right to not accept a warranty claim if a watch has evidence of excessive wear or misuse. Xeric reserves the right to repair or replace any watch returned for service at our option.

### Additional Info

For warranty questions or service requests, please visit xeric.com.

Designed in California. Assembled in China



Water Resistance Guide 3 ATM = Not intended for any exposure to water. 5 ATM = Splash Resistant Suitable for washing hands or light rain. 10 ATM = Water Sports Suitable for swimming, surfing, etc. 30 ATM = Scuba Diving Suitable for extreme ocean depths.