


XERIC

HALOGRAPH II CHRONO

www.xeric.com

Halograph II Chrono

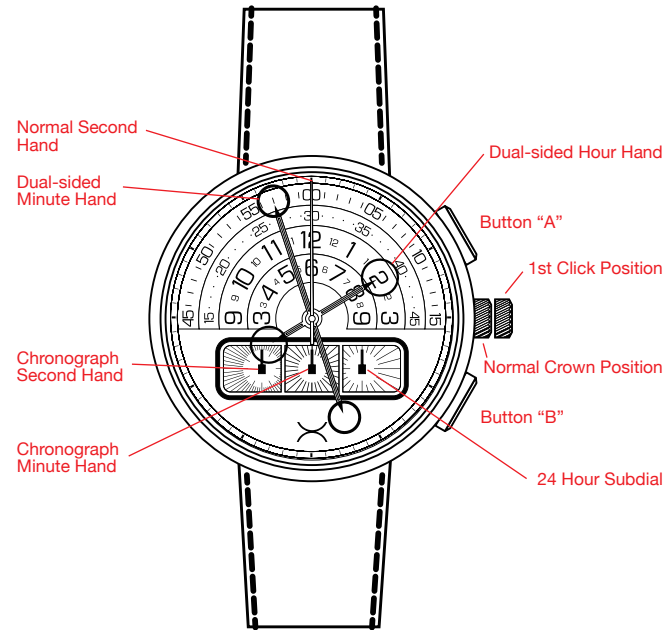

XERIC

1

Halograph II Chrono Details



316L Surgical-Grade Stainless Steel



Ultra-Reliable Miyota Quartz Chronograph. Made in Japan



Accuracy of +/- 20 sec/month



Anti-reflective Sapphire Crystal



U.S. Horween or Italian Leather Strap



Swiss Super-LumiNova Hands



5 ATM Water Resistance

XERIC

2

SETTING THE TIME

1. Pull the crown out to the 1st Click Position.
2. Turn the crown to set hour and minute hands.
3. Push the crown back to the normal position. All done!

USING THE CHRONOGRAPH

The Halograph II Chrono stopwatch is able to measure and display time in 1 second increments up to the maximum of 29 minutes 59 seconds. The Halograph II Chrono stopwatch will automatically stop after running continuously for 30 minutes.

MEASURING TIME WITH THE HALOGRAPH II CHRONO STOPWATCH

1. Press button "A" to start the stopwatch.
2. The stopwatch will start and stop each time button "A" is pressed.
3. Press button "B" to reset the stopwatch and the Halograph II Chrono stopwatch minute and second discs will return to their ZERO positions.

ADDITIONAL INFO

Battery type: SR621SW
Designed in California.
Assembled in PRC from international suppliers

XERIC

3

ADJUSTING THE STOPWATCH

This procedure should be performed when the stopwatch second hand does not return to the ZERO second position after the stopwatch has been reset.

1. Pull the crown out to the 1st Click Position.
2. Press button "A" to set the stop watch second disc to the ZERO position.
*The stopwatch minute disc is synchronized with stopwatch second disc.
*The stop watch second disc can be advanced rapidly by continuously pressing button "A".
3. Once the discs have been zeroed, reset the time and return the crown to its normal position.

WARRANTY


Xeric gladly offers a limited warranty covering defects in materials and manufacturing for a period of one (1) year after the original purchase date from an authorized Xeric retailer. This warranty does not cover batteries or any changes that occur during use and not from manufacturing or assembly (scratches, cracks, etc. on the case, crystal, or straps, crowns, or pushers). This warranty is considered void if you open your caseback, push the buttons underwater, or expose your watch to moisture beyond the recommendation of the watch's water resistance rating. Proof of purchase is required for all warranty claims and service requests, so please save a copy of your receipt. Xeric will not accept a warranty claim or repair request if a watch has evidence of excessive wear or misuse. Xeric reserves the right to repair or replace any watch returned for service at our option.

XERIC

4

Water Resistance Guide

- 3 ATM = Not intended for any exposure to water.
- 5 ATM = Splash Resistant
Suitable for washing hands or light rain.
- 10 ATM = Water Sports
Suitable for swimming, surfing, etc.
- 30 ATM = Scuba Diving
Suitable for extreme ocean depths.

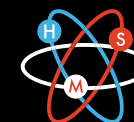

Brought to you by
WATCHISMO LABS
REIMAGINING TIME & SPACE