





Water Resistance

3 ATM = Not intended for any exposure to water.

Suitable for washing hands or light rain.

Suitable for swimming, surfing, etc.

Suitable for extreme ocean depths.

5 ATM = Splash Resistant

10 ATM = Water Sports

30 ATM = Scuba Diving

Time Setting

- 1. Pull out the crown to the First Position (first click) when the second hand is at the 12 o'clock position.
- 2. Turn the crown to set the hour hand and minute hand to the correct time.
- 3. Push the crown back to the Normal Position. All done!

Seiko VH31 Mov't Info

Center second hand moves in 1/4 second increments which resembles mechanical movements.

- · Country of Origin: Japan
- Number of Jewels: 2
- Frequency: 32,768 Hz
- · Accuracy: -/+15 seconds per month
- Battery Life: Up to 12 months
- · Battery size: SR920SW

XERIC

Warrantu

Xeric gladly offers a limited warranty covering defects in materials and manufacturing for a period of one (1) year after the original purchase date from an authorized Xeric retailer. This warranty does not cover batteries, case, crystal, crown, pushers, straps, or any changes that occur during use and not from manufacturing or assembly. This warranty is considered void if you open your caseback, push the buttons underwater, or expose your watch to moisture beyond the recommendation of the watch's water resistance rating. Proof of purchase is required for all warranty claims, so please save a copy of your receipt. Xeric reserves the right to not accept a warranty claim if a watch has evidence of excessive wear or misuse. Xeric reserves the right to repair or replace any watch returned for service at our option.

Additional Info

For warranty questions or service requests, please visit **xeric.com**.

Designed in California, Leather from U.S.A., Assembled in China.

XERIC

WATCHISMO LABS