





Please Read Before Use

*Prior to setting the time, the Voyager Automatic must be given an initial manual winding with crown in Hand Wind Position to wind up the mainspring [Approximately 55 clockwise turns of the crown]. Hand Wind

How to Set Time

- 1. Unscrew the crown to the Hand Wind position.
- 2. Pull out the crown to the First Click position.
- 3. Turn the crown to set hour and minute hands.
- 4. Important: Depress the crown to go back into the Hand Wind position.
- 5. Now while applying some pressure, turn the crown clockwise to screw down the crown to the Locked Position. This must always be done in order to maintain proper water resistance.

Seiko TMI NH38A Movement

• Number of Jewels: 24

XÉRÌC

- Vibration Frequency of 21,600 BPH
- Power Reserve: Up to 42 hours
- Accuracy: -20/+40 Seconds per Day
- · Rotor Winding Direction: Bidirectional, 800 Rotations per Day

Position is achieved by unscrewing the screw-down crown.

Warrantu

Xeric gladly offers a limited warranty covering defects in materials and manufacturing for a period of one (1) year after the original purchase date from an authorized Xeric retailer. This warranty does not cover batteries, case, crystal, crown, pushers, straps, or any changes that occur during use and not from manufacturing or assembly. This warranty is considered void if you open your caseback, push the buttons underwater, or expose your watch to moisture beyond the recommendation of the watch's water resistance rating. Proof of purchase is required for all warranty claims, so please save a copy of your receipt. Xeric reserves the right to not accept a warranty claim if a watch has evidence of excessive wear or misuse. Xeric reserves the right to repair or replace any watch returned for service at our option.

Additional Info

For warranty questions or service requests, please email us at contact@xeric.com.

Designed in California. Assembled in PRC from international suppliers



Water Resistance Guide

3 ATM = Not intended for any exposure to water.

Suitable for washing hands or light rain.

10 ATM = Water Sports

Suitable for swimming, surfing, etc.

30 ATM = Scuba Diving

Suitable for typical diving depths.

100 ATM = Deep-sea Immersion

Suitable for extreme ocean depths.

