

 CROSSBEATS

# BLAZE<sup>B600</sup>



---

USER MANUAL

## Safety and Important Instructions

- Place the Soundbar in a cool, dry and clean place, free from vibrations.
- Do not place any objects such as vases full of liquid, on top of the Soundbar.
- If liquid or a foreign object enters the Soundbar, stop using it immediately, turn it off and remove the plug from the mains supply.

**Warning: There is uninsulated "dangerous high voltage" inside the Soundbar. To prevent electric shock, do not remove the cover or the rear plate yourself.**

 
- **Do not open the housing or try to repair the Soundbar by yourself otherwise the warranty will become invalid.**

Only use a soft, dry cloth to clean the Soundbar. In extreme cases, mild detergents poured onto the soft cloth can be used to remove stubborn dirt.

## Product Overview



Side Panel

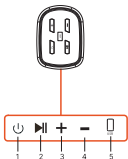


1. On/Off/Mode
2. Play/Pause
3. Next/Increase Volume
4. Prev/Decrease Volume
5. 1GB-32GB USB input interface


## Rare Panel



 1. AUX input interface
2. Optical digital audio inout interface
3. HDMI(ARC) input interface
4. External subwoofer output interface

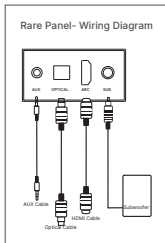

# Remote Control

 






## Battery Installation



- |                  |                     |
|------------------|---------------------|
| 1.ON/OFF         | 8.MODE              |
| 2.MUTE           | 9.BASS+             |
| 3.PLAY/PAUSE     | 10.REPEAT           |
| 4.PREV           | 11.TREBLE +         |
| 5.DECEASE VOLUME | 12.NEXT             |
| 6.TREBLE-        | 13. INCREASE VOLUME |
| 7.BASS-          | 14.EQ               |

## Modes and operating instructions

The LED indicator on the soundbar shows the current mode, which correspond to the source the oundbar is playing from.

Indicator	Status
whit 	AUX
e 	OPTICAL
whit white 	BLUETOOTH
e white 	HDMI(ARC)
white 	USB

### Bluetooth mode

- Press the MODE Button repeatedly to switch to bluetooth mode, after the white indicator will blink and will display BT mode along with the BT mode sound.
- Turn on the Bluetooth on your device and search for CB-Blaze B600 Once found, click on it to pair.

If the pairing is successful, the unit will make a sound connected.



## Optical Input Mode



For this mode an optical audio connecting cable is needed (not include in the list of accessories).

- Connect one end of the optical audio connecting cable to the optical output interface, and the other end to the optical input interface of the Device.
- Press 'MODE' key repeatedly to switch to optical mode, after which the white indicator will show 'OPT' mode on the soundbar along with the Optical mode sound.
- Play your sound source equipment (like a TV or computer) with the soundbar.

## USB Mode



- Insert a USB memory device to the USB port.
- Press mode button repeatedly on the remote control to switch to USB mode.
- Ensure that your USB is stored with MP3 Audio.
- Use the controls on the soundbar or remote control to make adjustments  
Pause/Play and switch between  
Previous/Next Track.
- Replay: Replay single track by

 


pressing

Replay Key once or all tracks by  
pressing Replay key twice.



## HDMI ARC Mode

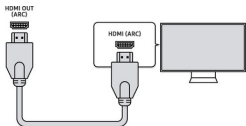

- Connect one end of the HDMI(ARC) audio connecting cable to the HDMI output interface, and the end to the HDMI input interface of the soundbar.
- Switch the sound source by pressing the mode key repeatedly or the HDMI('ARC') key on the remote control, connection will be indicated with the white light with 'ARC' on the soundbar.
- To switch to HDMI mode, after which the white indicator showing the 'ARC' mode, Set the sound source audio to HDMI setting.
- Play your round source equipment with the device

## AUX IN Mode



 
A 3.5 audio connecting cable is required (included in the list of accessories).

- Connect one end of the 3.5 audio connecting cable to the audio output interface and the other end to the 3.5 AUX input interface of the soundbar.
- Change the Sound Source by pressing the MODE Key repeatedly to switch to 'AUX' mode after which the white indicator shows with 'AUX' mode status on the soundbar.
- Play the audio from sound source equipment.

## Placing your soundbar

• Place the Soundbar on the table

• Wall mount the Soundbar



## Troubleshooting

### No power supply

Check the adaptor connection to the Soundbar as well as mains supply. Check whether the Soundbar is turned on.

### No sound

- Check whether the volume is turned to the minimum.
- Check whether the mute key is turned Off.
- Check whether the correct audio source has been selected.

## Troubleshooting

### **Remote control does not work.**

- Check whether the battery power is low; if yes, replace the battery.
- Check whether the remote control receiver on the main Soundbar is sheltered.

### **No sound when bluetooth is connected for the first time**

Check whether Bluetooth is paired with the unit

### **Note**


If the problem still cannot be resolved after going through the above checks, please contact Crossbeats Support team.

**Do not open the housing to try to repair the unit yourself otherwise the warranty will become invalid.**



 +91 9611293293

 +91 9611293293

 [support@crossbeats.com](mailto:support@crossbeats.com)