

 CROSSBEATS



# Groov Buds

USER MANUAL

## Product Overview -

1. Touch Area
2. Microphone
3. LED light
4. Charging pin
5. Ear tips
6. Charging port



## Power On –

Take out the earbuds from the charging case, it will automatically Power On.

OR

Press and hold on the earbuds for 2 to 3 secs, to Turn On the earbuds

## How to wear –

1. Put on the earbuds properly as shown in the picture, and adjust them to fit.
2. The microphone should be pointing towards your mouth to avoid bad calling or listening experience.



## Power Off –

Place the earbuds back in the charging case, the earbuds will power off automatically.

## Charging –



1. Peel off the sticker at the bottom of the earbuds
2. Place the earbuds back in the charging case
3. Connect and use the Type-C cable provided in the box for charging
4. Full charge in less than 60 mins.

## First time pairing –

1. Take out the earbuds from the charging case
2. The earbuds will auto Power On
3. Search for 'CB-Groov Buds' in your Phone's BT list
4. Click to pair.

## Switch between the connected devices –

1. Turn off the Bluetooth on the connected device
2. Earbuds will enter the connection mode
3. On a different device, go to the BT list
4. Select 'CB-Groov Buds' to connect

## Mono Pairing –

1. For Mono mode, take out either of the earbuds when already paired
2. The music will automatically play in that particular earbud

## Reset –

1. Place the earbuds in the charging case
2. Tap on both the earbuds for 5 times, and the white LED will blink for 5 times
3. And the earbuds enter the pairing mode (AND)
4. Go to your phone's BT list and delete the 'CB-Groov Buds' profile.

## LED lights on the earbuds –

(While the Earbuds are charging)

When the earbud is getting charged – Solid Red

Fully charged – the light turns white

(While the case is getting charged)

The case is getting charged – The White LED will blink

Fully charged – Turns solid White

LED turns white for 4secs – Once you place the earbuds in the case

Low Battery (Case) – White light will blink for 4secs.

## Controls –

### Left Earbud –

- Previous track – Press and hold (2sec)
- Voice assistant – Tap X 3
- Decrease Volume – Tap X 1

### Right Earbud –

- Next track – Press and hold (2sec)
- Game/Music Mode – Tap X 3
- Increase Volume – Tap X 1

### Left/Right –

- Play/Pause – Tap X 2
- Call Reject – Press and hold (2sec)
- Call Answer/End – Tap X 2


## CHARGING GUIDELINES




- Use only 10W adapters for charging your earbuds Case.
- Caution against using high-power mobile adapters (beyond 10W), as this may lead to charger faults.
- Using adapters with higher power ratings can result in malfunctions and reduce the lifespan of device and your chargers.
- Users can contact customer support for any further assistance or clarification on concerns related to charging and power adapters.





 +91 96112 93293

 +91 96112 93293

 [support@crossbeats.com](mailto:support@crossbeats.com)