



# NEOPODS

---

USER MANUAL

## OVERVIEW

1. Touch controls
2. Microphone
3. Charging case LED
4. LED lights indicators
5. Charging Pin
6. USB-C Charging Port



## POWER ON

Take out the earbuds from the charging case, it will automatically Power On.

OR

Press and hold on the earbuds for 3 to 4 secs, to Turn On the earbuds

## POWER OFF

Place the earbuds back in the charging case, the earbuds will power off automatically.

## CHARGING

- Connect and use the Type-C cable provided in the box for charging
- Full charge in less than 60 mins.



## LED INDICATORS ON EARBUDS

- Red light – Earbuds charging
- Blue light flashes – when taken out of the charging case
- Solid white – Pairing
- Off – Earbuds fully charged
- Red light flashes every 0.2 secs – Earbuds low battery



## FIRST TIME PAIRING

- Take out the earbuds from the charging case
- The earbuds will auto Power On
- Search for 'CB-NeoPods 100' in your Phone's
- BT list



## MONO PAIRING

- For mono mode, take out either of the earbuds when already paired
- The music will automatically play in that particular earbud

## CONTROLS

### Left Earbud –

- Previous track – Tap X 2
- Voice assistant – Tap X 3
- Volume – Press and hold (2sec)

### Right Earbud –

- Next track – Tap X 2
- Game/Music Mode – Tap X 3
- Volume – Press and hold (2sec)

### Left/Right –


- Play/Pause – Tap X 1
- Call Reject – Press and hold (2sec)
- Call Answer/End – Tap X 1


## RESET


Place the earbuds in the charging case  
Go to your phone's BT list and delete the  
'CB-NeoPods100' profile to reset the  
earbuds.

NOTE: Remove/Delete the existing 'CB-Neobuds' profiles  
from the phone's Bluetooth list.

[www.crossbeats.com](http://www.crossbeats.com)

 +91 8050056565

 +91 8050056565

 [support@crossbeats.com](mailto:support@crossbeats.com)