

Adapt Standard User Manual

Dense



Caution!

The device may get hot
Use it in a well-ventilated space


Important

Read all the instructions and the safety information on the user manual before you first operate your Adapt.


- Only use the USB cables specified by Dense.
- Do not attempt to modify or repair Adapt by yourself. Adapt requires professional repair service when it is damaged.
- Keep Adapt away from water, all sources of liquids, and a wet weather/humid environment.
- Keep Adapt away from a fire, high heat, and direct sunlight.
- Do not use Adapt during lightning storms.
- Clean or wipe Adapt with a dry cloth only.
- Handle it with care and avoid mechanical shocks.
- Use adapt in a well-ventilated environment and do not place it in a confined space.
- Listening at a high volume for a long time may damage your hearing. To avoid the risk, lower your device volume and take breaks between long exposures to high volume levels.
- Do not connect Adapt to a power supply, battery chargers, and batteries.
- If Adapt becomes too hot during the operation, stop using the product and disconnect Adapt from the source device.

What's in the Box

Your package comes with the Adapt Standard, USB-C cable, and User Guide.

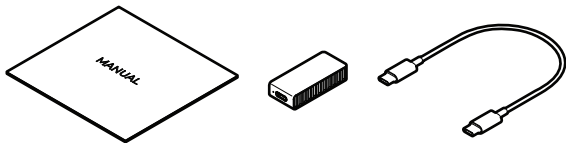

How to Use Adapt

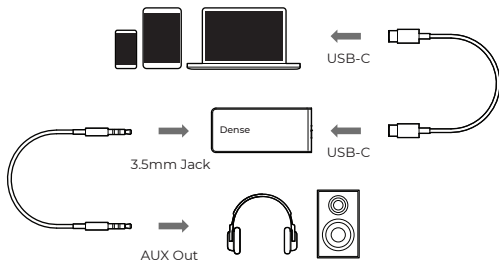

MAKE SURE TO LOWER THE DEVICE VOLUME TO 20%
after successfully connecting Adapt to any source devices.

Android Device Setup

Connect Adapt to the device with the USB Type C Cable specified by Dense. The device should automatically detect Adapt. If the Android device uses a micro USB port, OTG(On-The-Go) Cable or converter is required for the Android device to recognize the Adapt.

iOS Device Setup

Connect Adapt to the device with the USB Type C Cable specified by Dense. The device should automatically detect Adapt. **If the iOS device uses 8 pin Lightning connector, Camera Connection Kit by Apple is required for the iOS device to recognize the Adapt.**

macOS Device Setup

Connect Adapt to the device with the USB-C Cable specified by Dense. The device should automatically detect Adapt.
If you don't hear any sound/music playing from the headphone, go to the system preference and check the Audio output tab in the sound setting and make sure Adapt is set as the default playback device.

Windows Device Setup

Connect Adapt to the device with the USB-C cable specified by Dense. The device should automatically detect Adapt. If you don't hear any sound/music playing from the headphone, go to the control panel and check the playback tab in the sound setting. Find Adapt in the playback device list and right-click it to set the device as the default playback device.

Set the device at the highest sampling rate for the first time setup. Right-click on the playback device → Properties → Advanced Tab → select the highest bit rate and sampling rate available in the Default format section for the best sound performance.

If Adapt is not recognized or the device driver is not found, Please visit Dense audio homepage at www.denseaudio.com and download the latest driver setup file.

Adapt Standard Technical Specification

Sampling Rate	44.1kHz, 48kHz, 88.2kHz, 96kHz, 176.4kHz, 192kHz.
Bit Depth	16bit, 24bit.
Lossless formats	DSD64, DoP, FLAC, ALAC, AIFF, WAV.
Digital inputs	USB Type C connection.
Analog output	1.2Vrms. 3.5mm Audio port.
Dimensions	1.73"(44mm) x 0.83"(21mm) x 0.4"(10mm). Weight: 0.5oz (15g).

Disposal and recycling information



The symbol indicates the product should not be disposed of with household waste. Please follow your local environmental laws and guidelines when the product reaches its end of life.

FCC Compliance Statement



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CE Compliance Statement



This device complies with the EN55035 RED and EN55032 EMC Directives.

Hearing Loss



Listening to sound at high volumes for an extended period may permanently damage your hearing. To avoid the risk, lower your device volume and take breaks between long exposures to high volume levels.

Limited Warranty Summary

Dense warrants the included hardware product against defects in materials and workmanship for one year from the date of original purchase. This warranty is non-transferable and is limited to the original purchaser. Dense does not warrant against damages caused through accident, misuse, nor normal wear and tear. Contact Dense or a Dense authorized service provider for a repair service. Shipping and handling charges may apply, except where prohibited by applicable law. Dense may, at its option, use new or refurbished or used parts in good working condition to repair or replace any hardware product. Any replacement hardware product will be warranted for the remainder of the original warranty period or thirty [30] days, whichever is longer or for any additional period of time that may be applicable in your jurisdiction.

Please refer to the information on the Dense homepage for more information about your Adapt at www.denseaudio.com.



© 2019 Dense