

THANK YOU
for purchasing
the #1 safe
in America!

LIMITED LIFETIME WARRANTY

USE & CARE MANUAL

To register your warranty go to

WWW.LIBERTYSAFE.COM

Click on the **REGISTER WARRANTY** button
on the home page to complete registration
and print out warranty confirmation.

You will need the serial number of your safe to register

LIBERTY SAFE AND SECURITY PRODUCTS' LIMITED LIFETIME WARRANTY

Limited Lifetime Warranty: Liberty Safe and Security Products, Inc. (Liberty) is proud of the workmanship of the product you have just purchased. Liberty warrants that each new safe will be free from defects in material and workmanship for the lifetime of the original purchaser. If there is a defect in either materials or workmanship during your lifetime, we will repair or replace your safe at no cost to purchaser. Liberty will also repair or replace at no cost to the warranted party, any warranted safe that is damaged during a fire, break-in or break-in attempt during the lifetime of the original purchaser if the homeowner's insurance policy will not cover the damage. The lifetime warranty does not include the lock or painted surface.

Lock and Painted Surface Warranty: Locks and painted surfaces are warranted to be free from defects in workmanship and materials for a period of five years from the date of purchase.

Electrical Items Warranty: Light fixtures, transformers, cords, and light switches are warranted to be free from defects in workmanship and materials for a period of 1 year from the date of purchase.

Liberty's obligation under the Limited Lifetime Warranty is limited to the repair (including labor) or replacement of any product that proves to be defective or damaged during a fire, break-in or break-in attempt, with a product of like size and type. Claims shall be made under this warranty by calling 800-247-5625 or writing to Liberty Safe and Security Products, 1199 West Utah Avenue, Payson, Utah 84651. Any claims made for fire, break-in or break-in attempts must be accompanied by a copy of your homeowners insurance statement of coverage, and a report made by the police. A claim must be made within six months of the break-in.

Liberty takes seriously its obligation to stand behind its product with this warranty as long as the safe is properly installed and cared for as instructed in the Owner's Use and Care Manual. The warranty does not apply to safes or parts that have been misused, neglected or subjected to unusual or extreme conditions and/or environments, or to unreasonable wear and tear. Changing or modifying the safe in ways that affect its intended use will void this warranty.

As a special service to you, the limited lifetime warranty can be transferred to subsequent purchasers or owners with the prior written consent from Liberty. Simply contact our Customer service team with your request. Liberty reserves the right to deny a request or transfer for any reason.

Limitation of Remedies: In no case shall Liberty be liable for any special, incidental, or consequential damages based upon breach of warranty, breach of contract, negligence, strict tort, or any other legal theory. Such damages include, but are not limited to, loss of profits, loss of savings or revenue, loss of the contents of the safe or vault door, loss of use of the safe or vault door, or any associated equipment, cost of capital, cost of any substitute equipment, facilities or services, downtime, the claims of third parties including customers, and injury to property.

Warranty Registration Card: The attached registration card showing the serial number of the product and original purchaser information must be mailed to Liberty within thirty (30) days of purchase to validate this warranty. Online registration must also be completed within (30) days of purchase. Failure to register the product shall void any warranty.

No Other Warranties: This agreement is understood to be the complete and exclusive agreement between the parties, superseding all prior agreements, oral or written, and all other communications between the parties relating to the subject matter of this agreement. No employee of Liberty or any other party is authorized to make any warranty in addition to those made in this agreement.

THIS WARRANTY PERTAINS ONLY TO THE LIBERTY SAFE ITSELF, AND DOES NOT EXTEND TO THE CONTENTS OF THE SAFE. FOR OPTIMAL SECURITY AND PROTECTION, SAFES SHOULD BE BOLTED TO THE FLOOR. PLEASE REFER TO YOUR USE & CARE MANUAL FOR DETAILS ON ANCHORING YOUR SAFE TO THE FLOOR.

Disclaimer of Warranty:

THE ABOVE WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH EXTENDS BEYOND THE WARRANTY SPECIFIED ABOVE, AND IN NO EVENT SHALL THIS WARRANTY BE DEEMED TO COVER INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND.

Venue and Choice of Law: *Any claims arising from this limited warranty shall be resolved in the State of Utah and Utah law will apply to any dispute.*

Congratulations on your purchase of your new security safe designed by America's #1 gun safe company—Liberty Safe! To insure proper set up and installation, **PLEASE READ THIS USE AND CARE MANUAL** before opening your safe.



SAFETY PRECAUTIONS

The safe door is heavy. Do not open the door with the safe on an uneven or unstable floor. Hanging on an open door may cause the safe to tip forward when not lag-bolted to the floor, resulting in serious injury or death to yourself or others. If you have or have occasion to have small children in your home, please make sure you never leave your safe unsecured. It is possible for small children to climb inside your safe and become locked in. This could result in serious injury or death.


INSPECT YOUR SAFE

Inspect your safe for shipping damage as soon as you receive it. If you find any damage, please contact the delivery company (or carrier) immediately. Any damage not noted upon delivery must be reported within fifteen (15) days or there will be no recourse.

SERIAL NUMBER & MASTER COMBINATION (See opening instructions before proceeding)



PLEASE NOTE: For Tactical 24 Gun Safe, use the Electronic Lock Opening Instructions on page 8 before proceeding.

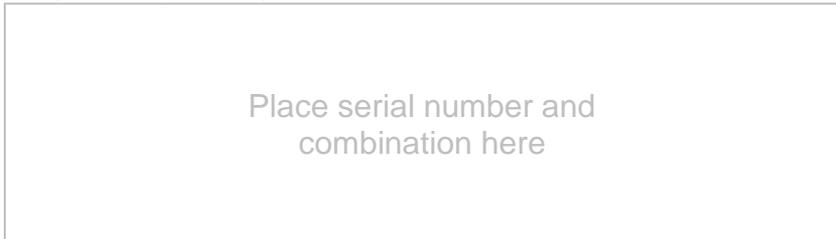

Your safe's **serial number** is located in two (2) locations on the safe. One is located on the top of the safe, back right side. The second is located just inside the door by the locking bars. Compare the serial number in this manual with the serial number on the safe. All serial numbers should match. If they do not, contact your local dealer or Liberty Safe immediately. **You will need your safe serial number when contacting customer service about your safe.**



PLEASE NOTE: Record your safe's serial number and combination and store in a secure location ***OTHER THAN YOUR SAFE.***

Contents:

1 – Safe Packet (Owner manual with registration card)

One of the following Interiors

3-in-1 Interior

- 2 – Side Shelf
- 1 – Gun Rack Cover
- 1 – Gun Rack
- 1 – Top Shelf
- 1 – Center Divider
- 8 – Shelf Clip


All Gun Interior

- 1 – Top Shelf
- 1 – Gun Rack

Tactical Safe Interior


- 6 – Side Shelf
- 2 – Utility Tray Shelf
- 1 – EZ Gun Rack
- 1 – Collector Gun Rack
- 1 – Center Divider
- 40 – Shelf Clip
- 1 – Gun and Optic Case
- 1 – .50 Caliber Ammo Can
- 1 – .30 Caliber Ammo Can
- 1 – 2.5" Utility Tray
- 1 – 3.5" Utility Tray

Standard 12, 18 & 24 Gun Safe

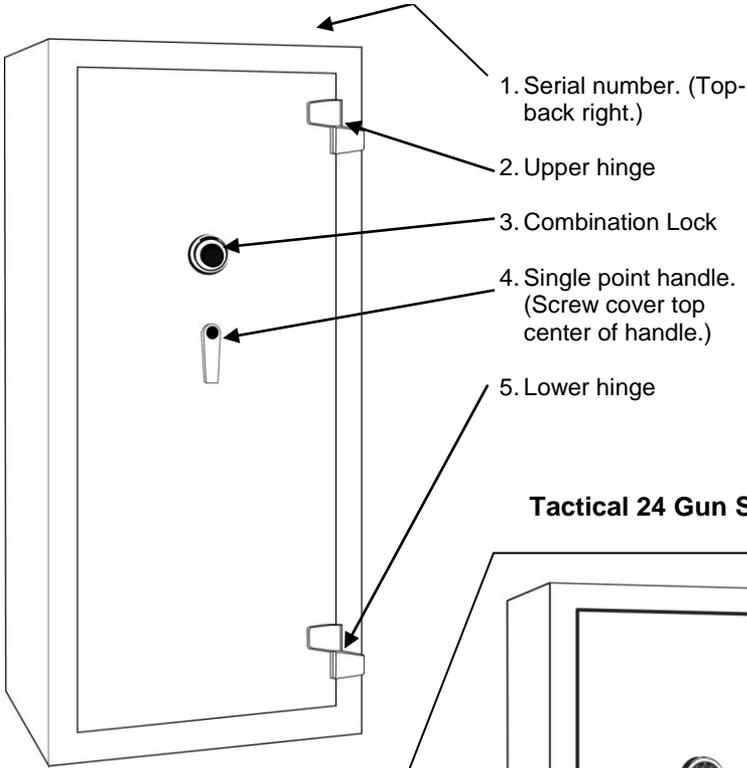


1. Serial number. (Top-back right.)
2. Upper hinge
3. Combination Lock
4. Single point handle. (Screw cover top center of handle.)
5. Lower hinge

Tactical 24 Gun Safe

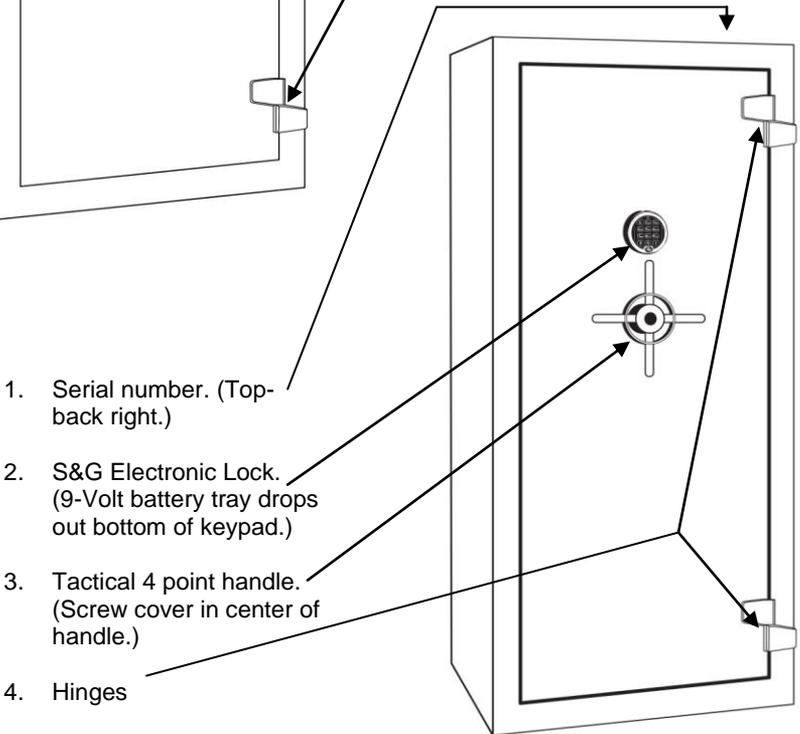


1. Serial number. (Top-back right.)
2. S&G Electronic Lock. (9-Volt battery tray drops out bottom of keypad.)
3. Tactical 4 point handle. (Screw cover in center of handle.)
4. Hinges

All gun Interior

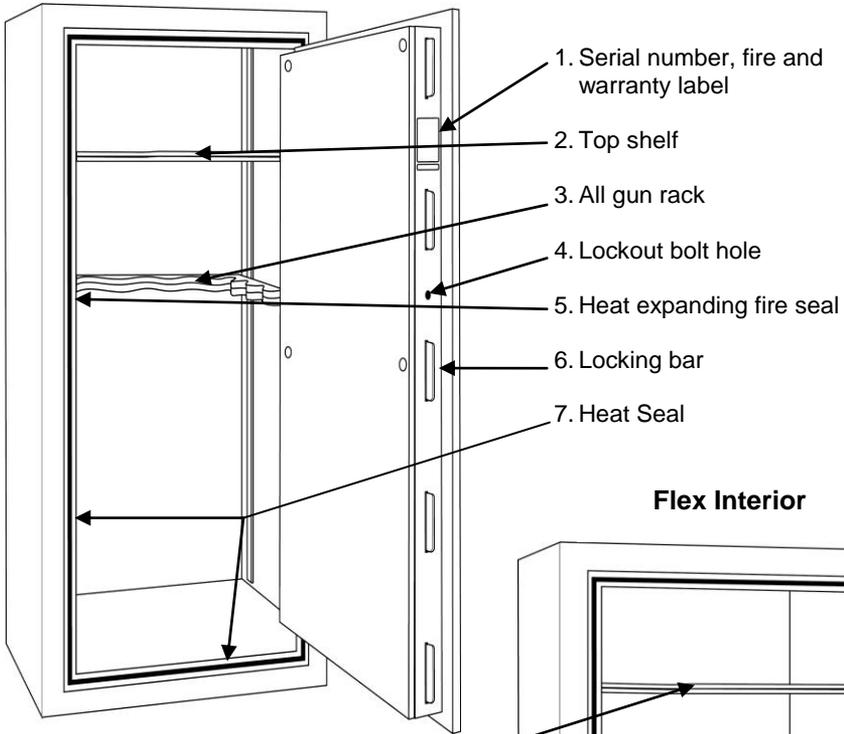

Flex Interior

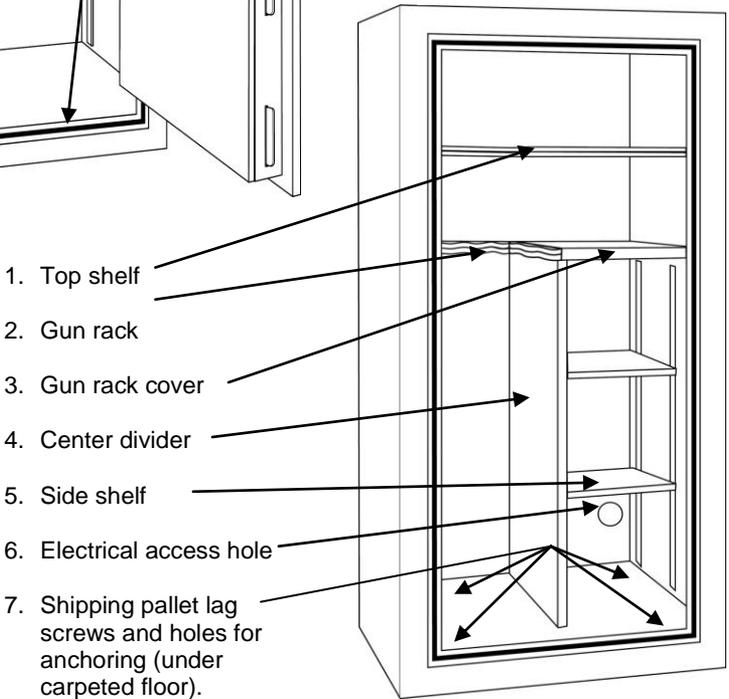

Tactical 24 Interior

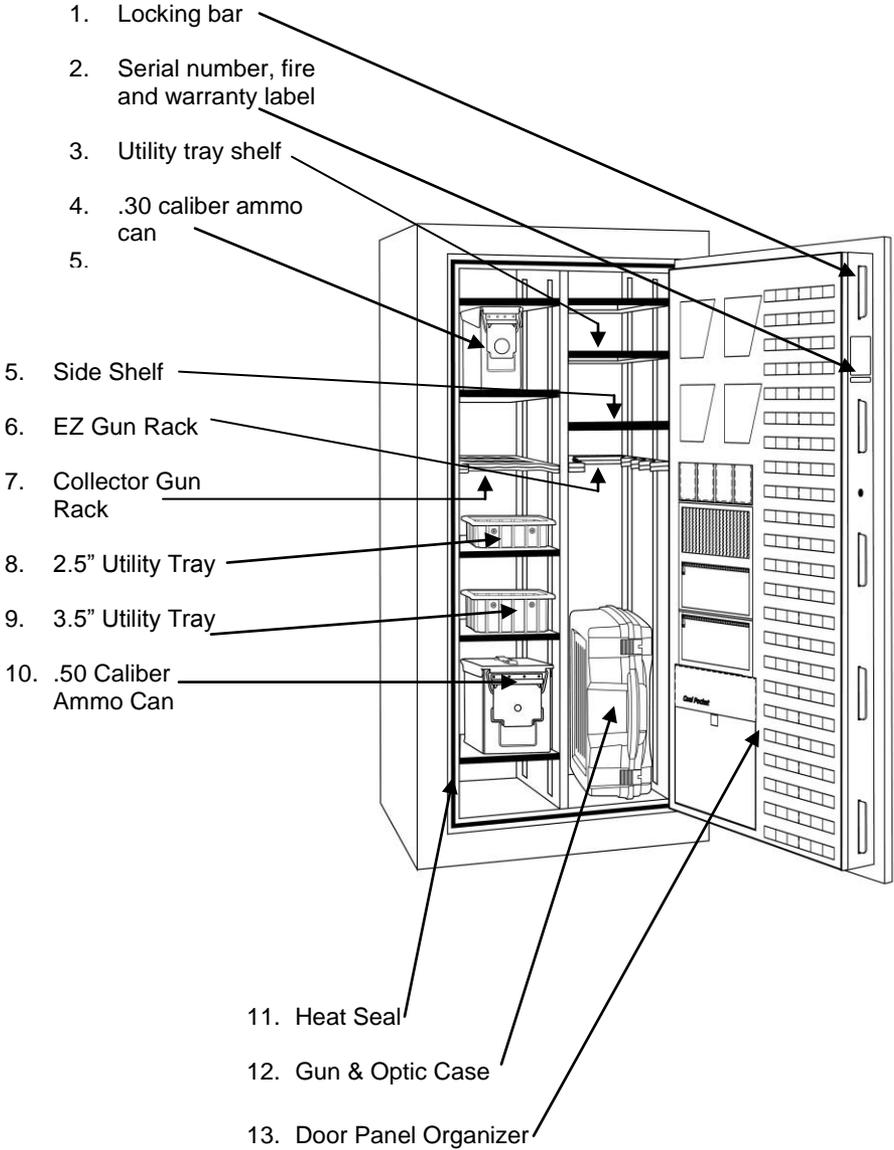


TABLE OF CONTENTS

Safety Pre-Cautions.....1

Contents.....2

Serial Number and Combination.....2

Product Specification.....3-5

Opening Your Safe.....7

Combination Lock Opening Instructions.....7

Electronic Lock Operating Instructions.....8-11

Moving Your Safe.....11

Placement of Your Safe.....11

Removing the Safe from Pallet.....11

Anchoring Your Safe.....12

Using and Maintaining Your Safe.....12

Loading Your Safe.....12

Lost Combination.....12

Troubleshooting Guide.....13-14

Frequently Asked Questions.....14

Warranty Claims and Repairs.....15

Accessories.....15-18

OPENING YOUR SAFE

OPENING SAFE FOR THE FIRST TIME

NOTICE: Your safe is shipped with the combination open and dial fixed with rubber gum. You will need to do this before verifying your combination. It is preferred to verify your safe combination with the door open. If there are problems, it is easier to service the lock or mechanism with the door open. Before verifying your combination, you will need to extend the door bolts while the door is open. Next remove the rubber gum from the dial so that the dial turns freely. Keep door open. You can now verify your combination.

VERIFYING THE COMBINATION

The combination lock on your safe has been set randomly at the factory. After completely dialing the combination provided with your safe, turn the safe handle and open door. With the door open it is recommended that you verify the combination opens a few times before using the safe. It is also strongly recommended to do this again after moving the safe to its permanent location.

COMBINATION LOCK OPENING INSTRUCTIONS

The lock requires accurate alignment with the index mark (located at twelve noon on the dial ring). Always turn the dial slowly and steadily when entering your combination to avoid dialing past your numbers. **Never spin the dial rapidly back and forth as this may cause damage to the lock.** If you go past any number - even if by only a half a number - the entire combination must be re-dialed. To verify your combination, follow the four steps below. Copy your combination numbers from page 2 to the spaces below.



Step 1
Turn counterclockwise (LEFT) at least 4 times aligning the 1st # to the index at 12 o'clock.

1st # _____



Step 2
Turn clockwise (RIGHT) passing the 2nd # twice. Stop on the 2nd # the third time it aligns with the index at 12 o'clock.

2nd # _____



Step 3
Turn counterclockwise (LEFT) passing the 3rd number once. Stop on the 3rd # the second time it aligns with the index at 12 o'clock.

3rd # _____



Step 4
Turn clockwise (RIGHT) until the dial stops (about 87). You will feel some resistance at about 95. Keep turning until the dial completely stops at about 87.

Step 5 – If combination is entered correctly, you will be able to easily turn the safe handle and open the safe.

⚠ IF COMBINATION DOES NOT WORK, DO NOT CLOSE THE DOOR! Try Again. Refer to the TROUBLE SHOOTING GUIDE in the back of this manual for more help.

Electronic Locks

NL LOSS PREVENTION ELECTRONIC LOCK INSTRUCTIONS



⚠ WARNING! All Electronic locks are set at the factory to 123456 . For security purposes, you should change this combination to your own, new combination number. (See instructions below)

GENERAL INFORMATION

The lock operates with a six-digit code. When pressed, each key is confirmed with an audio and LED signal. After entry of a valid code a double signal will follow. An invalid entry is followed by a long signal. After 10 seconds without entry, current code being entered will be cancelled.

The lock comes standard with a night light. To activate the light, press the light bulb on the lower left side of the keypad before entering your code.

OPERATING - NL LOSS PREVENTION LOCK

Opening:

Enter code (Factory User code = 1-2-3-4-5-6), unlock door and open. If not opened within 3 seconds, the lock secures automatically. If code entry failed on first attempt wait 20 seconds before re-entering.

Locking:

Close door and turn handle fully to closing position. The lock is secured. Verify locked status by trying to turn handle back.

Manipulation protection:

Entry of four consecutive invalid codes in to keypad will block keypad for 5 minutes. During this period, the LED flashes every 10 seconds and any key pressed causes a long signal. After expiration, entry of two more invalid codes, restarts the 5 minute blocking period.

Security reference:

All codes are to be securely stored. Do not use personal data (i.e. birthdays, telephone numbers etc.) as the code.

CHANGING THE COMBINATION - NL LOCK (SHOULD BE DONE WITH SAFE DOOR OPEN)

Press and Hold Key [0] until your hear a double signal. The LED remains on during the following actions:

- Enter old code (double signal)
- Enter new code (double signal) and repeat new code (double signal)
- Try new code
- In case of entry errors (long signal), the old code remains valid.

BATTERY LOW WARNING AND BATTERY CHANGE

A series of signals indicates that the battery is weak and must be replaced. Use only 9V ALKALINE—batteries! The battery compartment is located at the bottom of the entry unit.

Fresh Duracell and Energizer Batteries Recommended

CHANGING AN EXISTING CODE (cont.)

For example, if you want to set a new code to a code of 4 4 6 6 3 3 and the existing code is 1 2 3 4 5 6, you will use the following procedure:

Press **2 2 *** (1 2 3 4 5 6 #) **↓↓↓↓↓** (4 4 6 6 3 3 #) **↓↓↓** (4 4 6 6 3 3 #) **↓↓↓**
existing code new code new code

This procedure will change or set the existing code to: 4 4 6 6 3 3

PROGRAMMING ADDITIONAL CODE (Supervisor or User Code)

Press **7 4 *** (_____ #) **↓↓↓↓↓** (1-9) # (_____ #) **↓↓↓** (_____ #) **↓↓↓**
Master/Supervisor code user ID new code new code

PIN Positions: 1 Supervisor Code (note that a Supervisor Code can only be created by the holder of the Master Code.) 2 – 9 User Codes

REMOVING A CODE

You may find that a particular user code is no longer needed. It is a good security practice to remove any unused codes. The master code is required to perform this step. The master code is the code the lock was originally set to when the safe was new from the factory (1 2 3 4 5 6). If you changed this code, then you changed the master code and your existing code is the new master code. User ID's are 1 – 9. The master code cannot delete itself. To delete a user code, follow this procedure:

Press **S G *** (_____ #) **↓↓↓↓↓** (user ID 1 thru 9) # **↓↓↓** # **↓↓↓** # **↓↓↓**
(7 4) existing master code

After each time the pound (#) key is pressed, the lock chirps to acknowledge the entry. Wait for the chirps before proceeding. If a long series of closely spaced chirps (almost a continuous tone) sounds after pound (#) key is pressed, this indicates an error has occurred. The lock will automatically revert to the old code. Begin again at step one. For a copy of the complete programming instructions for the S&G Titan PivotBolt S&G Titan Direct-Drive Electronic Lock call Customer Support at (800) 247-5625 and Press 0 or visit www.libertysafe.com and go to the Services & Support section of the website.

ADJUST THE KEYPAD BEEPER VOLUME

7 8 * (MASTER CODE #) **↓↓↓↓↓** volume value # **↓↓↓** volume value # **↓↓↓**

Note: volume value is 0 for "OFF" OR 1 for "LOW" OR 2 for "HIGH".

CHANGING BATTERIES IN ELECTRONIC LOCKS

Battery life is based on how much the electronic lock is used. The lock will emit several short chirps when battery power is getting low. S&G only recommends using **Duracell® 9V Alkaline Batteries** for best performance.

CHANGING BATTERIES IN ELECTRONIC LOCKS (cont.)

The memory chip in the lock itself retains the lock codes (both master and user codes) during battery changes and even if the battery goes dead for an extended period of time. A weak battery may cause the lock to not open, even though beeps occur. Replace with fresh batteries at regular intervals to insure best performance.

BATTERY REPLACEMENT – S&G PIVOTBOLT LOW PROFILE ELECTRONIC KEYPAD



Step 1—Remove the battery tray from underneath the bottom of the keypad. Catch the small notch and pull the housing slightly toward the front of the keypad. Slide tray down and pull out and remove old battery.

Step 3—S&G recommends replacing the battery with a **Duracell® alkaline battery**. Notice the notches in top of battery compartment. Positive side of battery goes in square narrow slot and negative in wide rounded slot. Slide and click battery tray back into place.

MOVING YOUR SAFE



SAFETY PRECAUTIONS

Before moving the safe, make sure you have completely tested the combination and lock to assure it will open properly prior to removing the safe from the pallet and to its final location. Safe doors are NOT designed to be removed due to possible serious injury. Never move the safe with the door open. Do not open the door with safe lying down. Safes are very heavy and awkward to handle. Only use of proper moving equipment by a trained professional is recommended. Using a standard refrigerator dolly is very dangerous and can cause injury or death.

PLACEMENT OF YOUR SAFE

Before moving your safe, verify the load bearing weight of the floors and stairs, and types of flooring the safe will be moved over (tile, wood, and other flooring can be damaged by the weight of the safe). To determine whether or not your safe will make it through doorways, stairs or corners, take the empty safe box and see if it will fit all the way through to its final location.



Proper installation and anchoring are critical to the security of your safe. Make sure you consider the following:

- Install near a load-bearing wall as a precaution to supporting the weight of the safe.
- To help protect the exterior finish of your safe, install inside your home in a dry location where there is climate control (heat in the winter and cooling in the summer).
- The safes fire rating depends upon the number of layers of fireboard and BTU rating. Generally speaking, fire safes perform better in lower levels of a home (like the basement) where fire temperatures are lower. Additionally, placement of your safe away from potential hot spots (areas where flammable materials are stored) will improve your chances that your safe and its contents will perform better in a home fire. No safe is completely fireproof. If the fire reaches a high enough temperature for long periods, fire damage may occur.
- To store photographs, negatives, CD's or other electronic media, a Media Cooler Storage unit inside your safe is recommended for heat sensitive items.

REMOVING THE SAFE FROM PALLET

With the safe upright and open, fold back the carpeted floor and pry up the black plastic caps to expose the lag bolts. Use a 7/16 socket & ratchet to remove the bolts. **Caution: Have someone steady the safe while removing the safe from the pallet to prevent the safe from tipping off the pallet.** To prevent accidental opening while removing the safe from the pallet and to its final location, close the door and rotate the handle extending the locking bars. Make sure you have adequate help to move the safe off its pallet. Carefully slide the safe off the pallet until one edge is resting on the floor. While the safe is tilted on its edge, remove the pallet out from under the safe. Carefully lower the safe back to its upright position.

ANCHORING YOUR SAFE

To achieve the highest level of security it is **STRONGLY RECOMMENDED** that you anchor your safe securely to the floor. We recommend placing a protective barrier (such as a piece of carpet, treated wood or rubber mat) between the safe and floor to prevent scratching of the safe surface, which could lead to rust. Before anchoring safe, make sure the safe is level. Use redwood door shims to adjust safe level so the door has the desired swing. Use appropriate hardware for the wood or cement surface you are anchoring to. Anchoring kits with instructions are available from your dealer. Given enough time it is possible for a thief to break into a safe. Securing it to the floor helps secure and prevent removal of the safe by thieves.

USING & MAINTAINING YOUR SAFE

LOADING YOUR SAFE

- When putting guns into your safe, make sure they rest securely against the cutouts provided to prevent accidental tipping when the door is closed.
- If you are storing electronic media, use a Media Cooler to provide additional protection (See your local dealer or visit www.libertysafe.com).
- Do not put anything in your safe that will put pressure against the door, or the locking bars when the door is closed.
- If you live in a humid environment, it is recommended that you use a **dehumidifier** or **desiccant** to protect the contents from rust or mildew. Dehumidifiers and other moisture reducing products suitable for your safe are available from your dealer. Do not install or store these devices, or any other personal contents, near the locking bars on the door as this could interfere with the function of the mechanism in the door.

CLEANING AND MAINTAINING YOUR SAFE

- **The Combination Lock** – The combination lock does not require any type of service.
- **Internal Locking Mechanism** – The advanced locking mechanism requires no maintenance. Opening the door panel of your safe by anyone other than a certified lock or safe technician may void your warranty.
- **Exterior** – Use a soft, non-abrasive cloth dampened with water to clean the textured surface. Other materials may cloud or scratch the finish of your safe:
 - Logos and other graphic images must be wiped gently. Never rub or polish
 - The lock and handle have a protective coating to prevent tarnish. **DO NOT** use metal polishes or solvents for cleaning. Simply wipe off with a soft cloth.
 - Scratches and other blemishes may be touched up with a paint touch-up kit available from your dealer.
- **Door Seal** – The door seal does not need maintenance unless it is ripped or destroyed. If the seal becomes damaged, call for replacement pieces.

LOST COMBINATION

The lock on your safe has been set with a randomly selected combination at the time of manufacturing. As part of our continuing service, a record of your combination by serial number is kept on file. If you lose your combination, you can retrieve a copy for a \$25.00 research fee. A Combination request form must be filled out and faxed along with a copy of the sales receipt to: **(801) 465-2712**. You can print a form from our website www.libertysafe.com under the Support tab or have one faxed or mailed by calling our toll free customer service line at (800) 247-5625, and press 4.

TROUBLE SHOOTING

Problem

Possible Solution

Combination Will Not Open the Safe

Check lock-bolt pressure. Some free play should exist in the handle, left to right.

1. Redial the complete combination stopping on the third number. Hold the dial, shake the handle back and forth. **PLEASE NOTE:** If your lock still does not open, it is possible that one or more of your numbers may be off slightly from those shown in this manual.
2. Try dialing 1 number up or 1 down from each number in the combination. If it opens with a new number, update your combination in this book and report it to Liberty Safe (800) 247-5625, Press 0.
3. Try pulling out on the dial while dialing the combination.

Combination Opens the Safe Intermittently

Check lock-bolt pressure. Some free play should exist in the handle, left to right. Try dialing the combination again. Bolt pressure may be due to out of place interior shelves or improper personal storage (i.e. gun barrels, items too big for shelves).

Combination Dial Is Tight or Will Not Turn

Check lock-bolt pressure. Some free play should exist in the handle, left to right. Bolt pressure may be due to out of place interior shelves or improper personal storage. Make sure the locking bars are in the fully extended position with the door completely closed or completely open. Normally dial tightness varies from safe to safe. Tightness of dial may increase or decrease as dial is being turned.

Combination Works But Handle Will Not Turn

Corner protectors (packaging material) may cause undue pressure on the locking bolts. To alleviate the pressure push in on the door while turning the handle until resistance decreases, then pull to open the safe. If the handle turns partially the bars may be jammed or caught up. Try rotating the handle back and forth (left to right) until the bars free up.

Combination Works and Handle Turns But Safe Will Not Open

Verify that the handle has been completely rotated before opening the door. Check the **5/16" Allen set screw**, located on the face of the handle under the black plastic cover, for tightness. Some safes are installed with a unique handle clutch mechanism. Improper personal storage or excess door adjustment may cause clutch to temporarily engage. Push in on the door while turning the handle, and when resistance decreases, pull to open.

Door Will Not Shut

Verify that the lock is unlocked and the locking bars are fully retracted. Make sure the interior shelves are pushed back as far as possible. The handle should travel the same distance with the door closed as it does with the door open all of the way.

TROUBLE SHOOTING

<u>Problem</u>	<u>Possible Solution</u>
Door Will Not Shut	Verify that the lock is unlocked and the locking bars are fully retracted. Make sure the interior shelves are pushed back as far as possible. The handle should travel the same distance with the door closed as it does with the door open all of the way.
Door Will Not Shut	Verify that the lock is unlocked and the locking bars are fully retracted. Make sure the interior shelves are pushed back as far as possible. The handle should travel the same distance with the door closed as it does with the door open all of the way.
Door Shuts But Will Not Lock	Verify that the lock is unlocked and the locking bars are fully retracted. Make sure the interior shelves are pushed back as far as possible. The handle should travel the same distance with the door closed as it does with the door open all of the way.

FREQUENTLY ASKED QUESTIONS

Q. Can I change the safe's combination?

A. The combination on mechanical dial combination locks cannot be changed.

Q. Why is the handle pointing in a different direction than it used to be?

A. The handle has a built in clutch mechanism. When the handle is forced it will slip left, or right. To reset it simply force it back to its original position when locked.

Q. What if I lose my combination?

A. If you lose your combination, you can retrieve a copy for a \$25.00 research fee. A Combination request form must be filled out and faxed along with a copy of the sales receipt to: **(801) 465-2712**. You can print a form from our website www.libertysafe.com under the Support tab or have one faxed or mailed by calling our toll free customer service line at (800) 247-5625, and press 4.

Wish you could remember your combination when you really need it? Now you can!

Introducing Liberty's COMBO VAULT retrieval system.



At no cost to you, this system allows you to store your combination through a special encrypted program where only you have access to the information that you submitted. Combo Vault uses SSL encryption as well as proprietary security systems and methods to ensure your data is secure. To learn more visit www.libertysafe.com.

Warranty Claims and Repairs

WARRANTY CLAIMS

Please read carefully the safe warranty that accompanied your safe, located on the cover of this manual. If you encounter a problem that falls under the warranty coverage, simply call one of our representatives at (800) 247-5625, press 0. You will be required to provide the serial number and proof of ownership if you have not registered your safe or mailed in your warranty registration.

WARRANTY REPAIRS

Repairs to your safe covered under your warranty should not be performed without the pre-authorization of a Liberty customer service representative. If there are any issues regarding your safe please contact a Liberty Safe customer service representative at (800) 247-5625. Solutions to frequently asked questions and issues can also be found in Trouble Shooting Guide in this booklet or on line at www.libertysafe.com. The cost of any repairs performed without pre-authorization will be the sole responsibility of the owner.

WATER DAMAGE

Your safe is not waterproof. Should your safe be exposed to water, the fire insulation of your safe will be compromised. Do not continue to store items in a safe that has been compromised by water. You should purchase a replacement model for continued fire protection. In the event of flooding or water damage, make sure to have your safe opened as quickly as possible. If your safe included firearms, remove them and have them cleaned and lubricated immediately. Damage to the safe from water is not included in the limited life-time warranty.

INSURANCE COVERAGE



LIBERTY SAFE DOES NOT INSURE THE CONTENTS OF YOUR SAFE.

A homeowners policy or other insurance coverage should be purchased in an amount sufficient to cover the contents. Most homeowners policies require the purchase of riders or endorsements on items such as guns, jewelry coins and other valuable collectibles. Should damage occur to your valuables, a claim should be made with your homeowners insurance. Check with your local insurance company for possible discounts that may be available with your purchase.

Optional Safe Accessories

Order online at libetysafe.com or visit your dealer

ILLUMINATE YOUR SAFE



LED 5 Wand
Light Kit
20-35 Size Safes



LED 6 Wand
Light Kit
40-50 Size Safes



Brightview
Safe Lights



Safe Power Outlet Kit



Safe Security Light

This compact light allows you to quickly and clearly see your safe's controls while giving you discreet access — all without impairing your night vision.

- Push-Button Operation
- Simple Magnetic Attachment
- Elock & Mechanical Lock Models



Remove safe light and use it as a mini-flashlight inside your safe!

EXTRA SECURITY



Danger Black Powder Sticker



Safe Anchoring Kit

KEEP YOUR VALUABLES DRY



Eva-Dry
Moisture Remover



Desiccant Moisture
Remover 750g



Desiccant Moisture
Remover 450g



Mini-Canister
Moisture Remover
40g




Electric
PEET Dryer



Electric
Dehumidifier

ORGANIZE YOUR FIREARMS

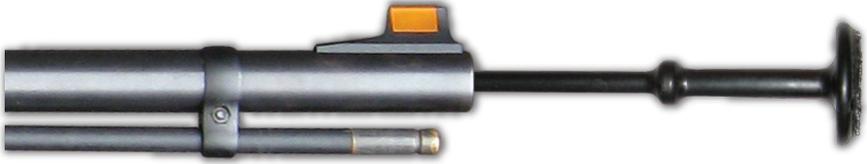

Rifle Rod Starter Kit - 20 Pack Rifle Rod Starter Kit - 10 Pack

Rifle Rod Add-On - 6 Pack

Rifle Rod Add-On .17 Caliber - 2 Pack



Handgun Hangers
Over/Under -2 Pack



Handgun Hangers
4 Pack



Handgun Hangers
Back/Over -2 Pack



Oak Pistol Rack
Beige Fabric

Oak Pistol Rack
Silver Fabric

ORGANIZE YOUR VALUABLES



Accessory Door Panel
Available in these sizes:

Model 12

Model 18

Model 24



Jewelry Drawers
Available in Various Sizes

KEEP YOUR SAFE CLEAN



Mini Duster
Designed to easily remove
dust without scratching the
finish on your safe



Register your **LIFETIME WARRANTY** online at:
WWW.LIBERTYSAFE.COM



Copyright © 2014 Liberty Safe and Security Products, Inc.

1199 West Utah Avenue Payson, UT 84651 •

800.247.5625 P/N 10953-13