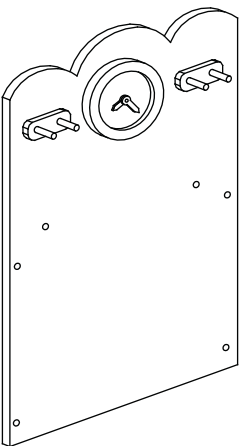
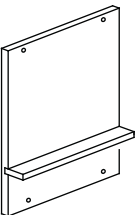
 
 
 
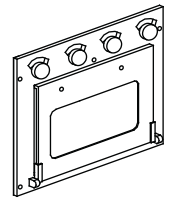
 
 
 

 
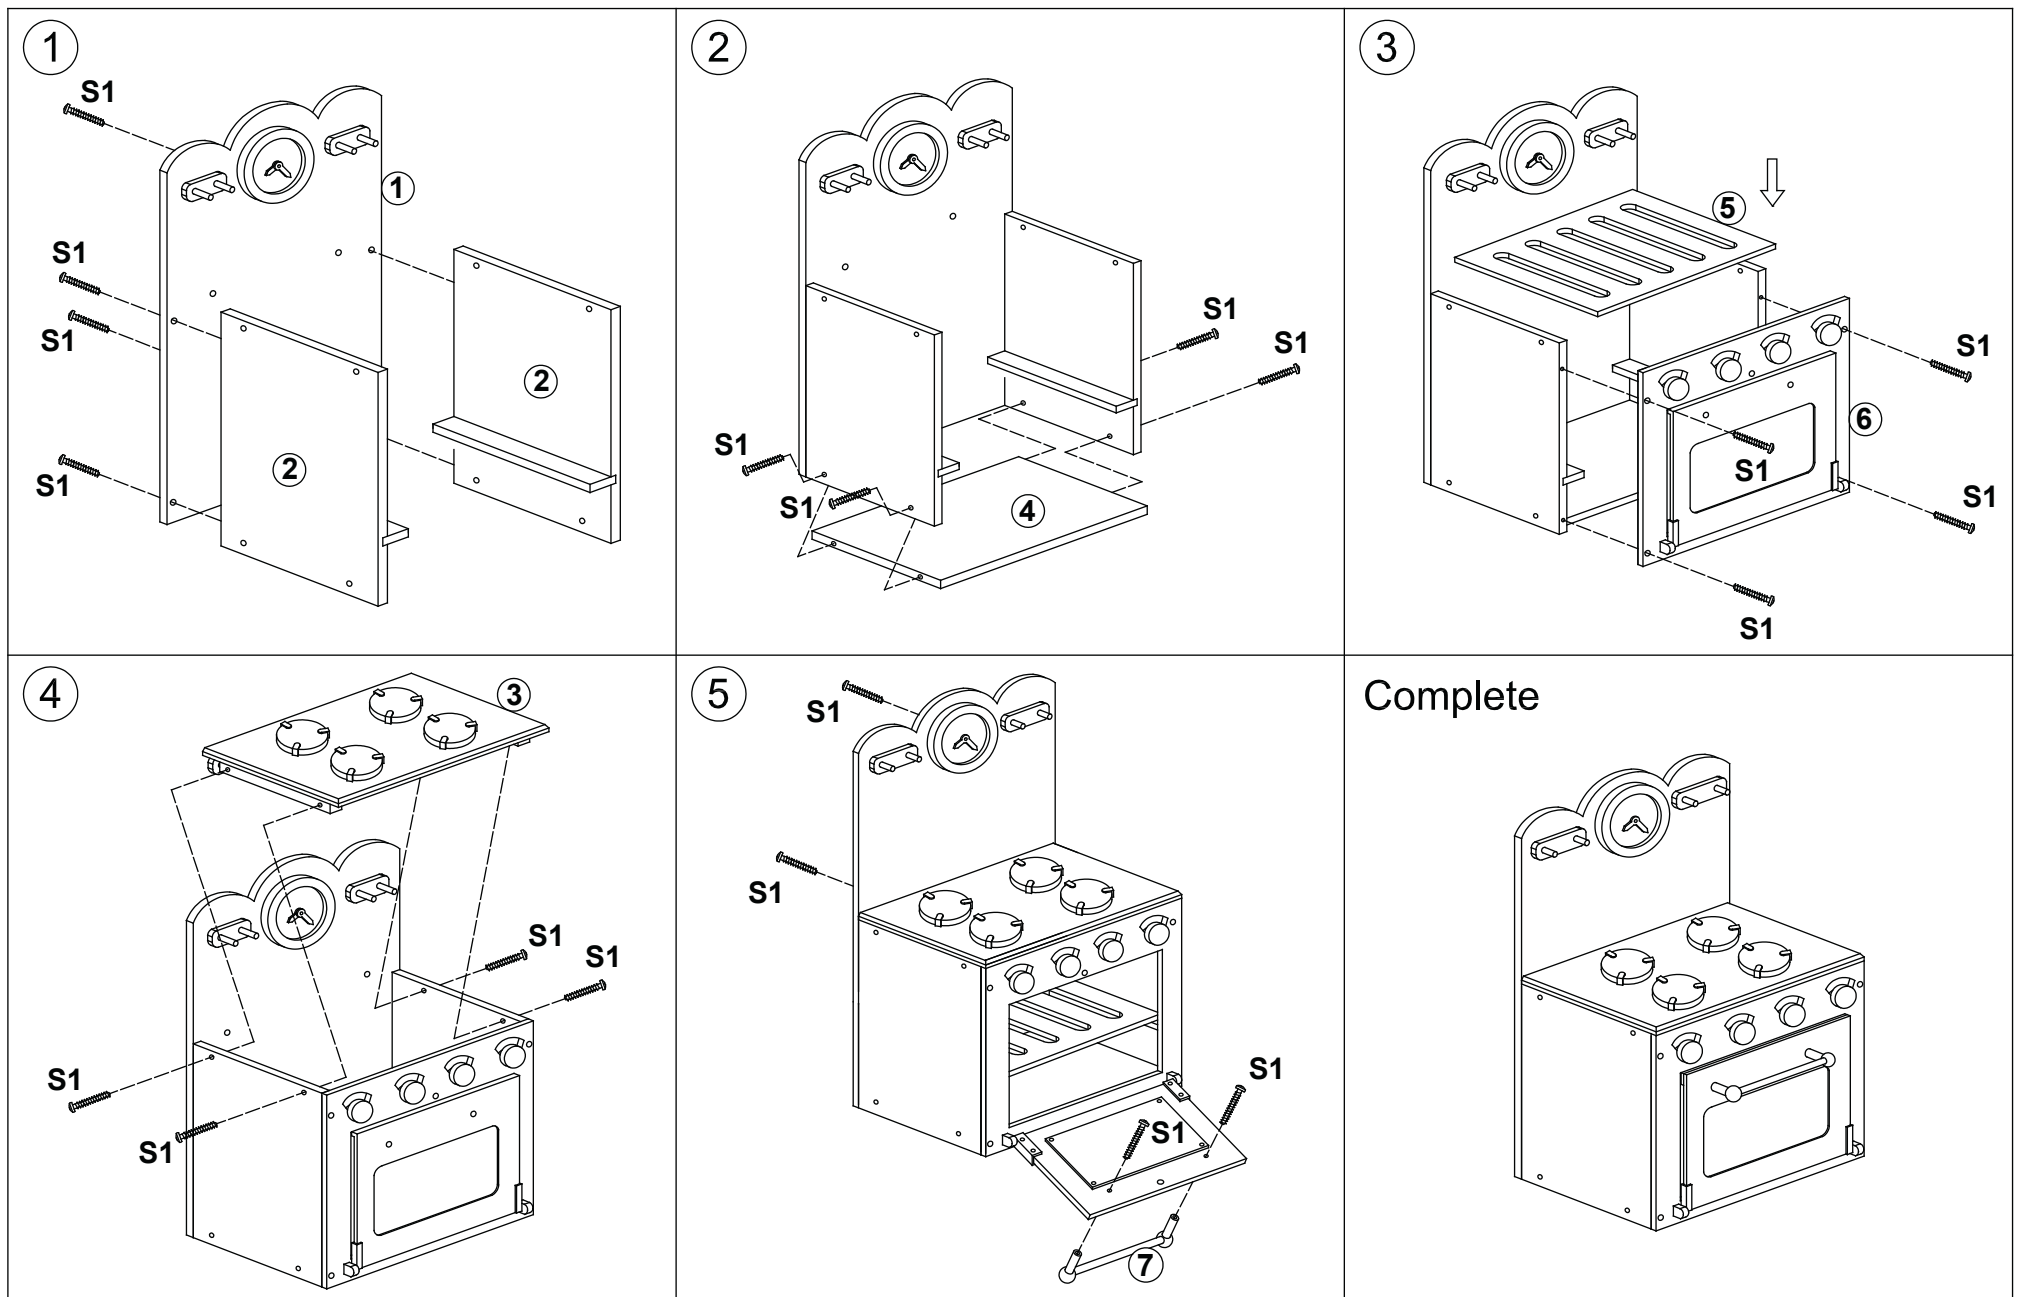


PART LIST  
TV303

1	2	3	4
 <p data-bbox="560 989 604 1021">x 1</p>	 <p data-bbox="1097 574 1142 606">x 2</p>	 <p data-bbox="1624 574 1668 606">x 1</p>	 <p data-bbox="2072 574 2116 606">x 1</p>
	5	6	7
	 <p data-bbox="1097 989 1142 1021">x 1</p>	 <p data-bbox="1624 989 1668 1021">x 1</p>	 <p data-bbox="2072 989 2116 1021">x 1</p>
P1	P2	P3	S1
 <p data-bbox="560 1404 604 1436">x 1</p>	 <p data-bbox="1097 1404 1142 1436">x 1</p>	 <p data-bbox="1624 1404 1668 1436">x 1</p>	 <p data-bbox="1859 1276 1960 1308">GT-22 F</p> <p data-bbox="2072 1404 2116 1436">x 20</p>

ADULT ASSEMBLY REQUIRED

# ASSEMBLING INSTRUCTION TV303



ADULT ASSEMBLY REQUIRED