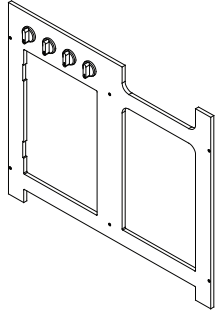 
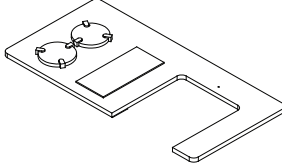 
 
 
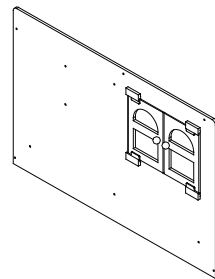 
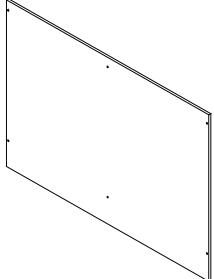 
 
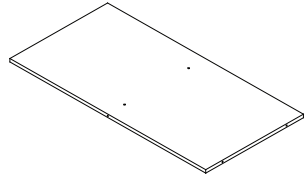 
 
 
 
 
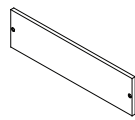 
 
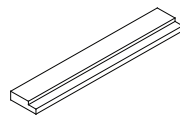 
 
 
 
 
 
 

 
 

 
 
 
 



 


PART LIST


ITEM: TV305

1  1X	2  1X	3  1X	4  1X	5  1X	6  1X			
7  1X	8  1X	9  1X	10  2X	11  1X	12  1X			
13  2X	14  2X	15  4X	16  1X	17  1X	18  1X			
19  1X	20  1X	21  1X	22  2X	23  1X	24  2X			
25  1X	26  1X	27  1X	28  1X	29  1X	30  1X	S1  2X	S2  61X	S3  12X

ADULT ASSEMBLY REQUIRED

ASSEMBLING INSTRUCTION





 
ITEM: TV305

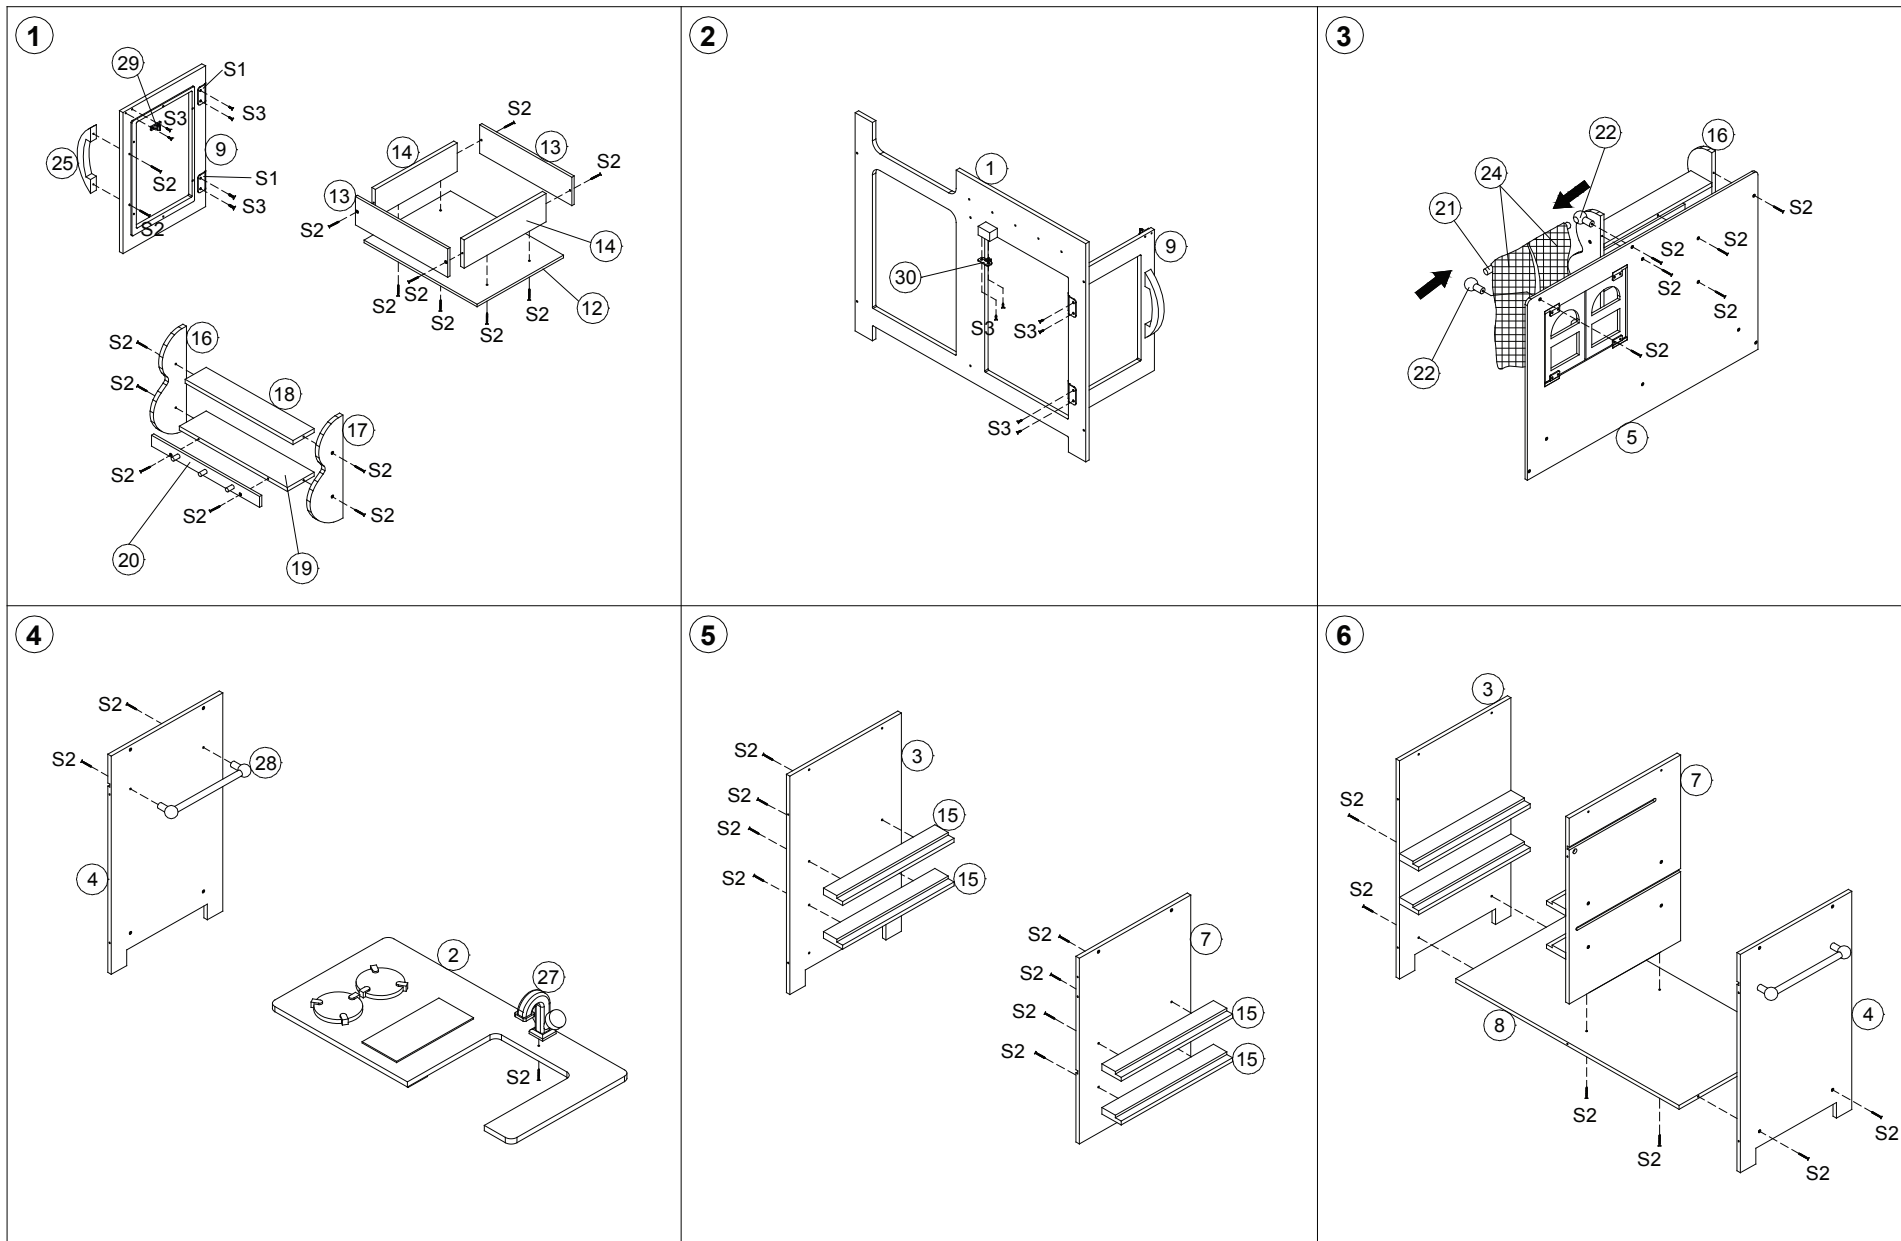


ADULT ASSEMBLY REQUIRED

ASSEMBLING INSTRUCTION

     ITEM: TV305

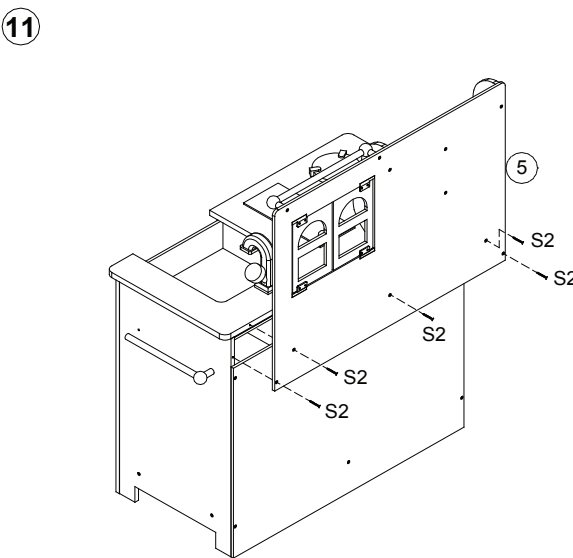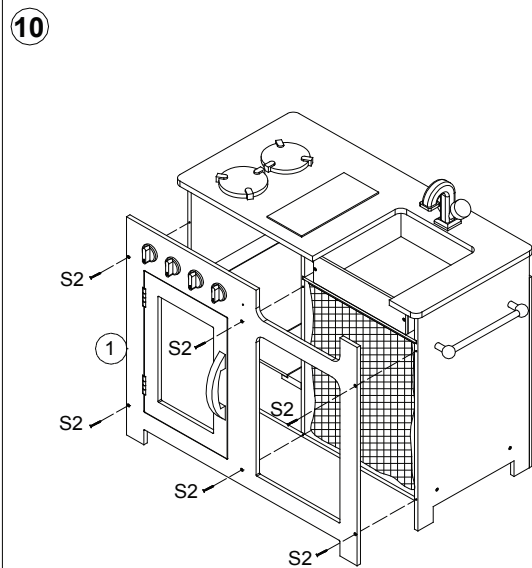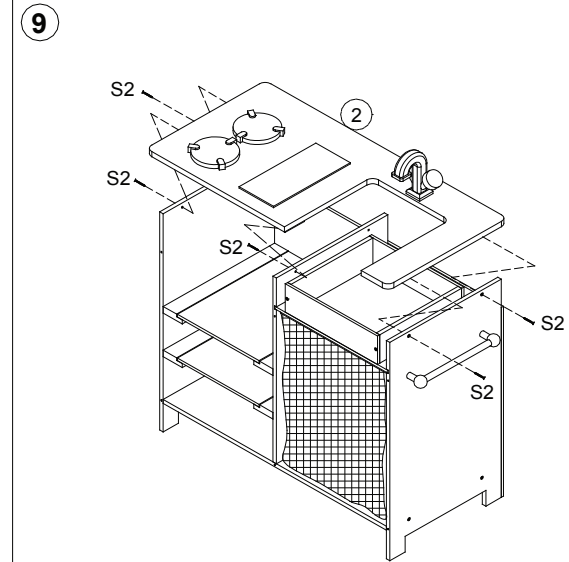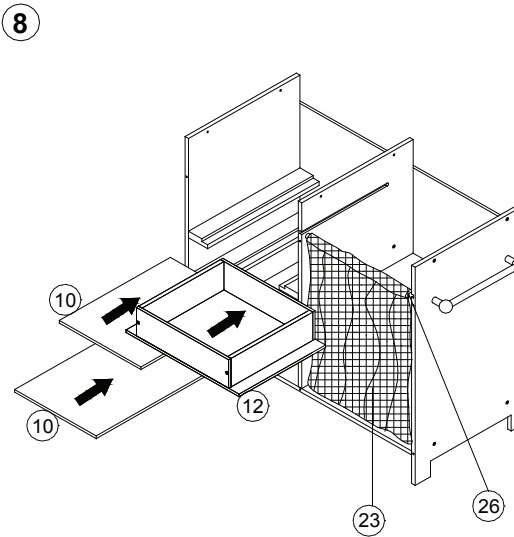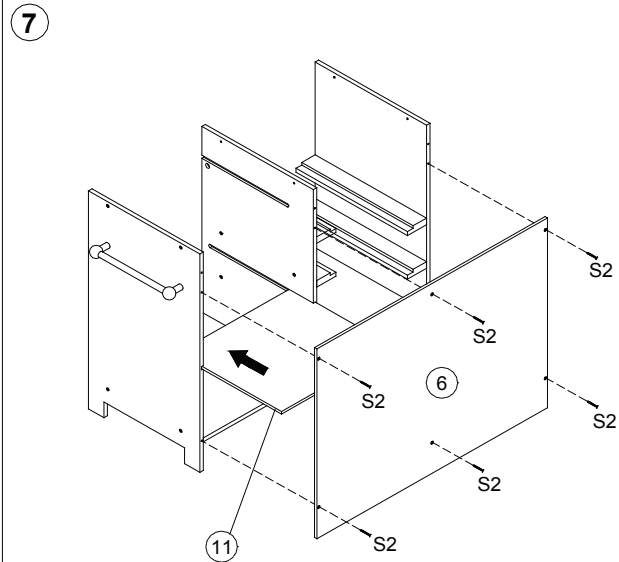

Complete

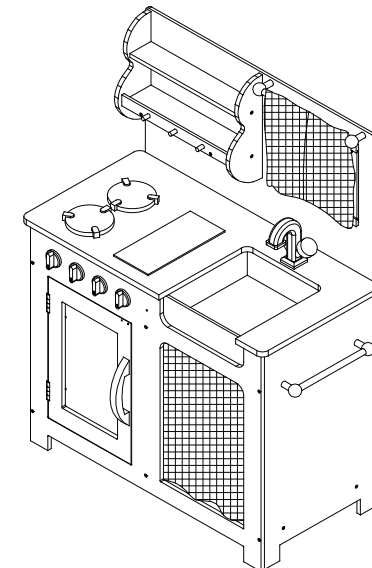 

ADULT ASSEMBLY REQUIRED