

FANG® HEADLIGHT BEZEL

Parts included:


- । Headlight Bezel
- l Hardware Kit Including:
 - 1 4-Horness
 - 4 6" Cable Ties
 - l Left Mounting Bracket
 - l Right Mounting Bracket
 - 1 Foam Gosket

Installation Instructions:

- 1. Park on a level surface and shut off the motorcycle. Ensure that the engine has had time to cool before installation.
- 2. Place a soft cloth on the front fender to protect point, then remove stack headlight trim ring. Set aside retaining screw to be reused.
- 3. Remove the four screws holding headlight bucket to fairing, circled in red below. All four screws will be reused.



4. Route male spade side of included y-harness from front of the light through the headlight bucket, then locate the two stock female accessory connectors and connect. Secure wires as needed with cable ties.

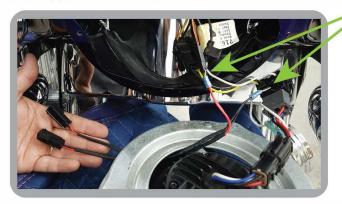

male & female connectors

5. Reinstall headlight bucket, placing supplied brackets behind flange. Secure and tighten with original four screws. See supplied brackets in above photo, circled in green.

WARNING:

This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

CAUTION:

This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

ATTENTION:

This indication alerts you to the fact if you ignare this detall you will offect the performance or functionality of the product.

All Ciro products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical pracedures to assure a sofe and successful installation.

NOTE

Ciro products are designed and manufactured under very strict quality control. Circ warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a lifetime warranty against LED Failure. Ciro will have no obligation if the customer cannot show aroof of ourchase. Warranty will not be granted unless the part is properly installed and maintained. Ciro will not be liable for any consequential and incidental damages, including labor, or non-Ciro products. Please visib our websibe Ciro3d.com For our complete warranty policy.

CIRO, 3D.COM

6. Glean outer headlight retaining ring with an ammonia-based cleaner, then install included gasket around headlight. Trim gasket as needed.



7. Plug in Fong Headlight Bezel and tuck wires out of the way. Press dorts on bezel into gromnets on headlight brackets. Reinstall retaining screw and torque to 9-18 in-lbs.

