

#### AFTER USE

1. Turn back the timer to OFF.
2. Turn the temperature selector to OFF.
3. Unplug the appliance from the outlet.
4. Wait until the oven is completely cool before any cleaning or maintenance.

#### MAINTENANCE AND CLEANING

1. Unplug the appliance and allow it to cool before cleaning.
2. Do not immerse the appliance in water. All surfaces can be cleaned with a clean damp cloth.
3. If stains still appear, it is recommended to use soap.
4. Do not use abrasive cleaners or sharp utensils to clean the appliance.
5. Clean the interior chamber with a clean damp cloth.

Due to the constant development of product functions and designs, we reserve the right to make changes to the product without prior notice.

# Toyomi®


## RAPID OVEN AIR FRYER OVEN

MODEL: AFO 1201

220-240V~50/60Hz

POWER: 900W

## INSTRUCTION MANUAL

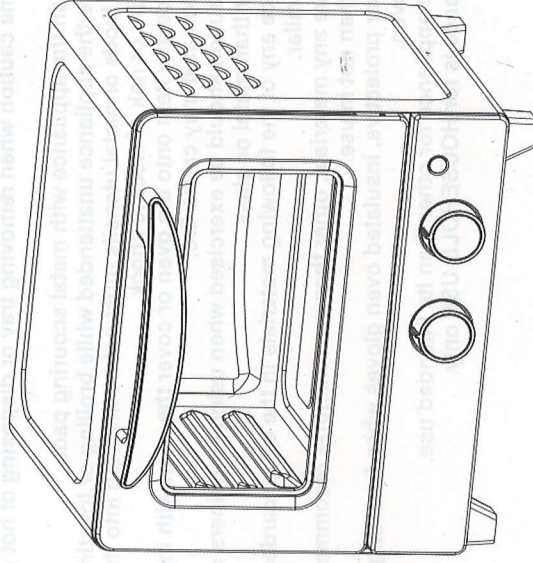

### SERVICE & IMPORTANT NOTICE

- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarity qualified person in order to avoid a hazard.
- **WARNING:** This appliance is not intended for use by persons (including children) with reduce physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

**IMPORTED BY NATIONAL ELECTRICAL TRADERS**

FOR HOUSEHOLD USE ONLY.  
PLEASE READ CAREFULLY AND KEEP THE INSTRUCTION WELL.


## IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be followed, which include the following:

1. Read all instructions.
2. Do not touch hot surfaces.
3. Close supervision is necessary when any appliance is used by or near children.
4. To protect against electric shock, do not immerse cord, plug, or any parts of the appliance in water or other liquids.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces.
6. Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
7. Do not place appliance on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.
8. When operating the oven keep at least four inches of space on all sides of the oven to allow for adequate air circulation.
9. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.
10. To disconnect, turn the control to OFF, before removing the plug. Always hold the plug, but never pull the cord.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Do not cover CRUMB TRAY or any part of the oven with metal foil. This may cause overheating of the oven.
13. Use extreme caution when removing tray or disposing of hot grease or other hot liquids.
14. Do not clean the appliance with metal scouring pads.
15. Never leave the appliance unattended while broiling or toasting.
16. Oversized foods or metal utensils must not be inserted into the appliance as they may create a fire or risk of electric shock.
17. Do not place any item onto the oven or cover the oven with inflammable material during operation as it may cause fire.
18. Extreme caution should be exercised when using containers constructed of anything other than metal or glass.
19. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
20. Do not store any materials, other than manufacturer recommended accessories, in this oven when not in use.
21. Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
22. Do not use appliance for other than its intended use.
23. This appliance is for HOUSEHOLD USE only.

## ACCESSORIES: LIST OF COMPONENTS

1. Temperature selector
2. Timer
3. Power light
4. Glass door clip
5. Bake pan
6. Bake rack
7. Door handle
8. Grill
9. Tray Handle

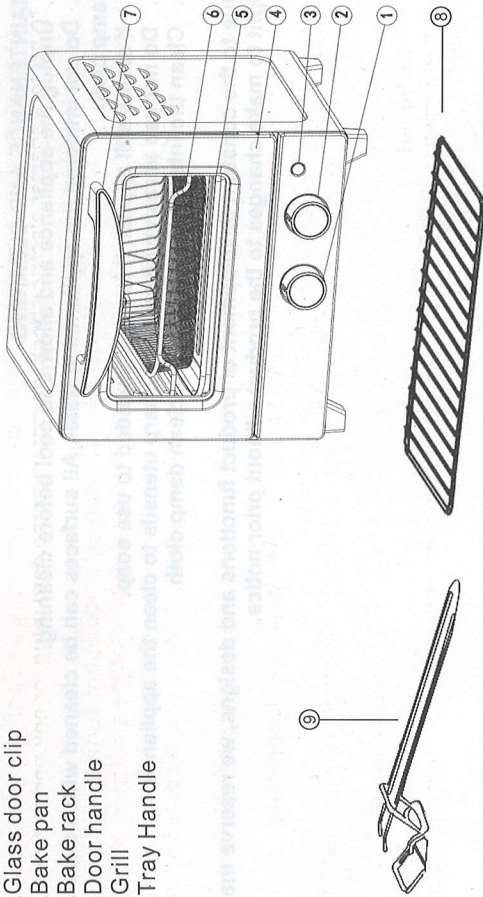

## BEFORE USE

1. Ensure that there is enough ventilation around the oven.
2. Ensure that the oven is completely dry before use.
3. The oven should not be placed on untreated wooden surface. Place the oven on a heat resistant surface.
4. The feet of the oven can leave some marks on the table, if this happens, remove the marks with a damp cloth.

## OVEN USE

1. Turn the temperature selector dial to the desired position.
2. Turn the timer dial clockwise to the desired cooking time.
3. The power light will light up after timer is turned on, and will go out when the timer is turned to OFF.
4. When the cooking time is over, the timer will auto shut off and the bell will ring.
5. If the cooking is finished earlier than the set cooking time, please turn back the timer to OFF and turn temperature selector to off.
6. In the first use of this oven, there might be some light smoke coming out from the oven, this is normal. After 5 minutes the smoke will disappear.
7. In order to get better cooking performance, it is recommended to pre-heat the oven about 10 minutes.

## GRILL COOKING

1. Leave the door at the open point.
2. Turn the temperature selector to 230°C setting.
3. Turn the timer to the desired grill time.
4. When the grill cooking is done, turn back the timer to OFF to turn off the oven.