

Toyomi®

 
DC TABLE FAN

INSTRUCTION MANUAL

Please read carefully and keep the instruction well

MODEL: DCF 5071

INPUT: 100-240V ~ 50/60Hz, 24W

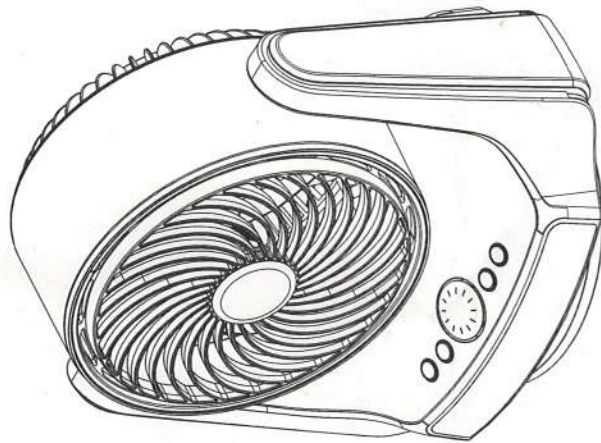

CLEANING & MAINTENANCE

WARNING: Before cleaning, turn the fan off and unplug from the power supply.

1. To clean the fan use a soft cloth to wipe off any dust. If the fan is very dirty use a damp cloth and wipe dry. Do not use any cleaning detergents, sprays or other chemicals, as they will damage the fan.
2. Store the fan in the original packaging in a ventilated dry area.
3. Do not bend the Blade.
4. Do not use a cleaning solution that is harmful to paints or plastics.

SERVICE & IMPORTANT NOTICE

- **WARNING:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

IMPORTED BY NATIONAL ELECTRICAL TRADERS



DC TABLE FAN

INSTRUCTION MANUAL

Please read carefully and keep the instruction well

 
MODEL: DCF 2031

INPUT: 100-240V~50/60HZ 20W

HIGH VELOCITY AIR CIRCULATOR

Thank you for choosing a Toyomi® Air Circulator. Your new High Velocity Air Circulator has been designed using the latest in technology. With normal care and maintenance, your Toyomi® Air Circulator will provide years of satisfactory performance.

PARTS DESCRIPTION

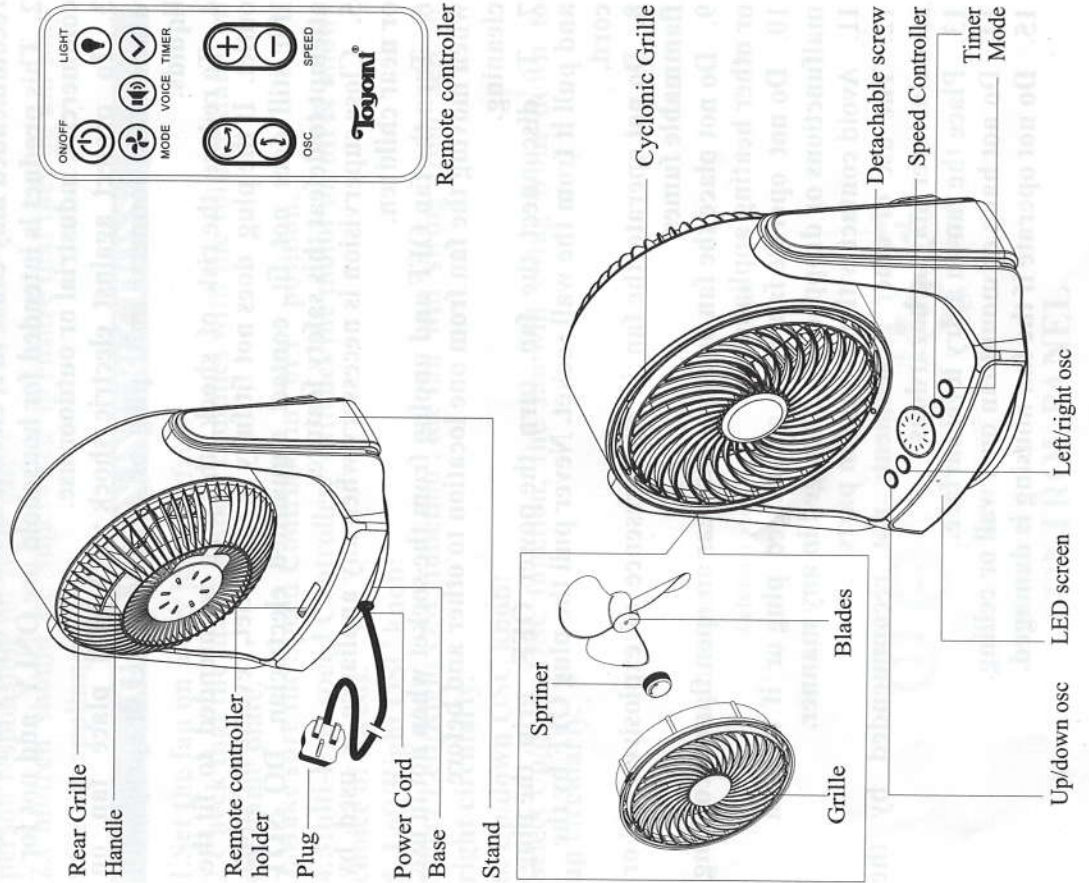

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE SAFETY INSTRUCTIONS BEFORE USING THIS FAN

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Use this fan only as described in this manual. Other use not recommended may cause fire, electric shock or injury to persons.
2. This product is intended for household use ONLY and not for commercial, industrial or outdoor use.
3. To protect against electric shock: DO NOT place fan on windowsills, immerse unit, plug or cord in water or spray with liquids.
4. To reduce the risk of shock, this plug is intended to fit the outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature.
5. Close supervision is necessary when any appliance is used by or near children.
6. Turn the fan OFF and unplug from the socket when not in use, when moving the fan from one location to other and before cleaning.
7. To disconnect the fan, turn the power OFF, grip the plug and pull it from the wall socket. Never pull the plug OFF by the cord.
8. Do not operate the fan in the presence of explosive and / or flammable fumes.
9. Do not place the fan or any parts near an open flame, cooking or other heating appliance.
10. Do not operate fan with a damaged plug or if the fan malfunctions or dropped and damaged in any manner.
11. Avoid contact with moving fan parts.
12. The use of other attachments not recommended by the manufacturer may be hazardous.
13. Place the fan on a dry level surface.
14. Do not hang or mount fan on a wall or ceiling.
15. Do not operate if the fan housing is damaged.

 
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.

WARNING:

1. This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance

OPERATION INSTRUCTIONS

1. Set the fan on a dry level surface.
2. Check that the mains voltage complies with the voltage stated on the name plate.
3. Make sure the Speed Control is in "OFF" position.
4. Multi-level speed Controller, switches the motor on/off & allows choice of speeds.
5. Left/Right OSC knob: Select Left/Right OSC function, the fan will swing from left to right circularly.
6. Up/down OSC knob: Select Up/down OSC function, the fan will swing from down to up circularly.

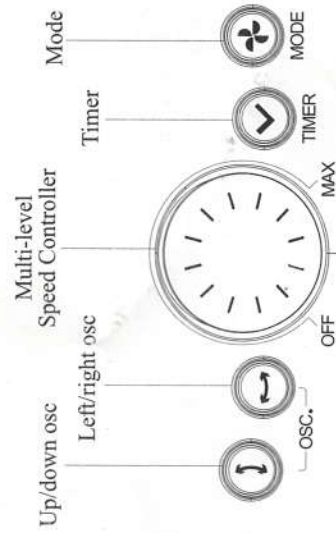

CONTROL PANEL

CLEANING AND STORAGE

- Unplug the fan before cleaning.
- Use only a soft, damp cloth to gently wipe the outer surfaces of the fan clean.
- To clean between the grilles, we recommend using a pipe cleaner, flexible dustwand, vacuum cleaner or compressed air to gently remove the dust.
- DO NOT immerse the fan in water and never allow water to drip into the motor housing.
- DO NOT use gasoline, paint thinner or other chemicals to clean the fan.
- For storage, you may leave the fan assembled and covered to protect it from dust. Store the fan in a cool, dry, place.

Do not use a cleaning solution that is harmful to paints or finishes. Do not bend the grille.

Do not use the original backing in a repaired grille.

Do not use a sharp object to clean the grille. Do not use a wire brush or a sanding cloth to clean the grille. Do not use a wire brush or a sanding cloth to clean the grille.

Do not use a wire brush or a sanding cloth to clean the grille. Do not use a wire brush or a sanding cloth to clean the grille.

SERVICE & IMPORTANT NOTICE

WARNING: This product is not intended for use by anyone who is not a qualified electrician or someone who has been trained in the use of electrical equipment and has been instructed in the use of electrical equipment.

IMPORTED BY NATIONAL ELECTRICAL TRADERS