

Toyomi®


**MICRO-COMPUTER
ELECTRIC STEW COOKER**

MODEL : HH 6080

220-240V~50Hz, 600-715W 4.0L

INSTRUCTION MANUAL

Please read carefully and keep the instruction well

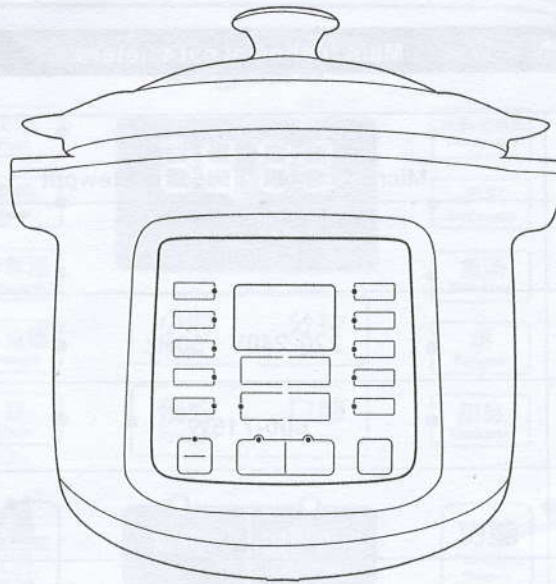

This appliance is for household use only.

产品性能特点 Product performance characteristics

- 1、耐高温陶瓷内胆可明火烧。
- 2、弧底内胆煲炖均匀，舀汤清洗更方便。
- 3、大控制面板，汤品口感可调，随心选择。
- 4、一键“加料再沸”功能。
- 5、设有“红烧”和多种汤、粥功能，满足更多烹饪需求。
- 6、双层隔热壳体结构，聚能、防烫。

- 1.Heat resistant ceramic inner pot can be used directly on the stove.
- 2.Arc-bottom inner pot ensures the balanced stewing, convenient to scoop soup or clean it up.
- 3.Large control panel with adjustable soup flavors, you can select as you wish.
- 4.One-key "Reheat" function.
- 5.Equipped with "Braise" and a variety of functions of cooking soup and porridge, satisfying more cooking needs.
- 6.Double-layer thermal-insulation shell structure, with advantages of energy-gathering and scald-prevention.


主要技术参数 Main technical parameters

名称 Name	微电脑电炖锅 Micro-Computer Electric Stewpot
型号 Model	HH 6080
电源 Power	220-240V~50Hz
额定功率 Rated Power	600-715W
额定容量 Rated Capacity	4.0L
外型尺寸 Dimensions	312mm×289mm×294 mm


部件名称介绍

Introduction of parts

1. 主要部件 Main Parts

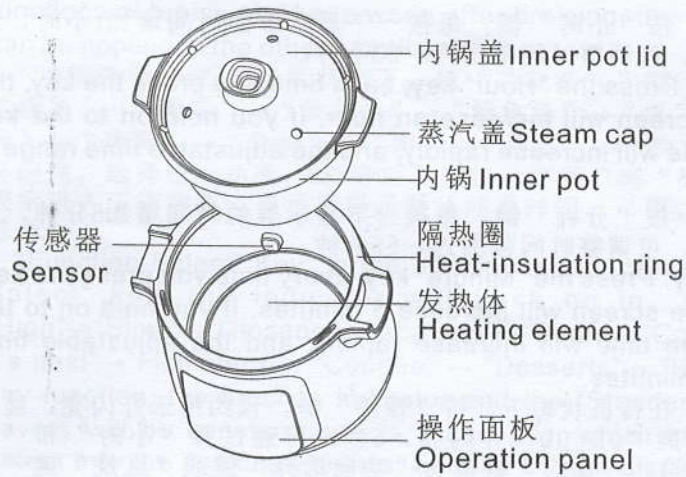

2. 操作面板 Control panel

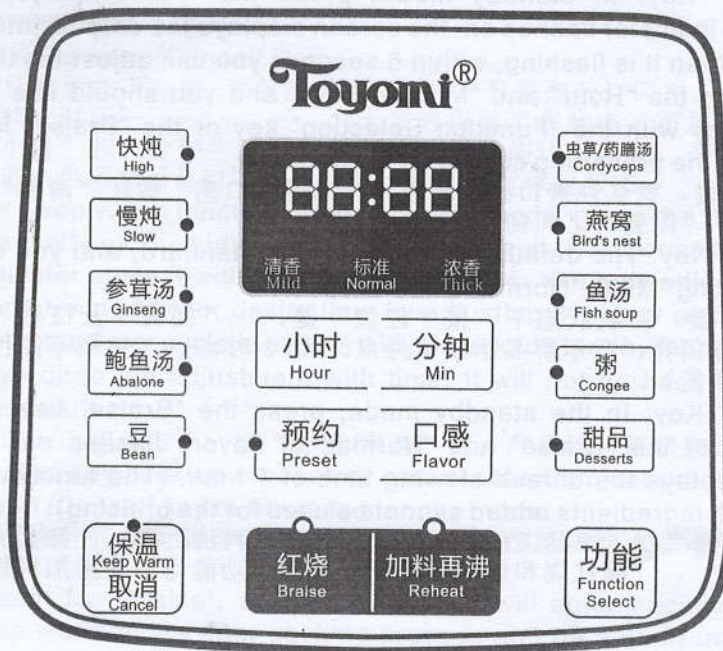

1. 按键使用介绍 Introduction of the use of keys

- ①. “小时”键，按“小时”键，每按一下显示屏的时间增加1小时，长按则快速递增，可调整时间范围为0-23小时。
- ①. “Hour” Key: Press the “Hour” key, each time you press the key, the time on the screen will increase an hour. If you hold on to the key button, the time will increase rapidly, and the adjustable time range is 0-23 hours.
- ②. “分钟”键，按“分钟”键，每按一下显示屏的时间增加5分钟，长按则快速递增，可调整时间范围为0-55分钟。
- ②. “Minute” Key: Press the “Minute” key, every time you press the key, the time on the screen will increase 5 minutes. If you hold on to the key button, the time will increase rapidly, and the adjustable time range is 0-55 minutes.
- ③. “预约”键，在待机状态下，按“预约”键，预约指示灯闪亮，显示屏显示默认时间“02:00”并闪亮，6秒内可通过按“小时”和“分钟”键调整时间，“预约”键需与“功能选择”键或“红烧”键一起使用，否则无法正常预约。
- ③. “Preset” Key: In standby mode, press the “Preset” key, the presetting indicator flashes on, the screen displays the default time of “2:00”. When it is flashing, within 6 seconds you can adjust the time by pressing the “Hour” and “Minute” keys, and you should use the “Preset” key with the “Function Selection” key or the “Braise” key, otherwise, the presetting cannot be set normally.
- ④. “口感”键，默认炖煮口感为标准，可通过“口感”键在“清香”、“标准”、“浓香”之间切换。
- ④. “Flavor” Key: The default stewing flavor is standard, and you can switch among “Mild”, “Normal” and “Thick”.
- ⑤. “红烧”键，待机状态下，按“红烧”键，“红烧”及口感“标准”指示灯闪亮，显示屏显示默认炖煮时间1小时。（红烧不能使用加料再沸功能）。
- ⑤. “Braise” Key: In the standby mode, press the “Braise” key, the indicators of the “Braise” and “Normal” of flavors flashes on, the screen displays the default stewing time of 1 hour. (The function of reheat with ingredients added cannot be used for the braising).
- ⑥. “加料再沸”键，产品工作状态下，按“加料再沸”键，产品大火力加热10分钟。（除红烧和红烧后转保温外其余功能均可使用加料再沸功能）。

- ⑥. "Reheat" key: During cooking process, you may add extra ingredients and press the "Reheat" key, the cooker will heat up with high cooking for 10 mins and continue with the process.. (Except the functions of braise and keep warm after braising, the reheat function can be applied to the other functions).
- ⑦. "功能选择" 键, 在待机状态下, 按 "功能选择" 键, 指示灯依次在 "快炖" → "慢炖" → "参茸汤" → "鲍鱼汤" → "豆" → "虫草/药膳汤" → "燕窝" → "鱼汤" → "粥" → "甜品" → "快炖" → ...之间循环闪亮。选择任一功能, 6秒钟后功能指示灯和口感 "标准" 灯恒亮, 表示进入工作状态, 显示屏显示默认炖煮时间。(粥、甜品无口感可选择)。
- ⑦. "Function Select" Key: In the standby mode, press the "Function Select" key, the indicator will flash on in a cycle from "High" → "Slow" → "Ginseng" → "Abalone" → "Bean" → "Cordyceps" → "Bird's nest" → "Fish soup" → "Congee" → "Desserts" → "High" → ... Select any function, the function indicator and the "Standard" indicator of flavors will be constantly on in 6 seconds, which indicates that it enters into the cooking process, and the screen displays the default stewing time. (There is no flavor selection for "Congee" and "Desserts").
- ⑧. "保温/取消" 键:
- ⑧. "Keep warm/Cancel" Key:
- a. 在待机状态下, 按 "保温/取消" 键, 保温指示灯闪亮, 显示屏上显示默认时间 "--:--", 为无限时保温工作状态。可根据需要按动 "小时" 和 "分钟" 键调整保温的时间, 倒计时结束, 产品回到待机状态。当调整保温时间后, 将回不到无限时保温状态。
- a. For Keep Warm function during standby mode, press the "Keep Warm /Cancel" key, the indicator will display default "--:--", once the flashing indicator stops it will keep warm for 24 hrs. You may adjust the keep warm timing to your desire time by adjusting the Hour and Mins. key. Once the timer cycle is over, it will go back to standby mode. After you have done the adjustment with timer it will not go back to 24hrs to keep warm.
- b. 在进入功能状态下, 按 "保温/取消" 键, 产品回待机状态。
- b. To stop any cooking process or cancel selection just press the "Keep Warm /Cancel" key to return to standby mode.
- c. 除红烧外其余功能自动转保温或手动启动保温功能, 都可使用 "加料再沸" 功能。
- c. Except for "Braise", all other functions will automatically switch to keep warm mode after cooking process and be able to use "reheat" function.

2. 产品功能设置表 Function Setting Table of the Product:

序号 Serial No	功能 Function	默认时间 Default Time	水开时间 Time for boiling the water	手动调节时间的说明 Description of manual adjustment time	是否可“加料再沸” Whether the "Reheat" function can be used
1	快炖 High	1.5小时 1.5 hours	约45~60分钟 About 45 to 60 minutes	如需调整各功能的炖煮时间, 可通过按“小时”及“分钟”键调整时间 To adjust the stewing time of various functions, you can press the "Hour" and "Minute" keys to adjust the time.	是 Yes
2	慢炖 Slow	3小时 3 hours			是 Yes
3	参茸汤 Ginseng	2小时 2 hours			是 Yes
4	鲍鱼汤 Abalone	2.5小时 2.5 hours			是 Yes
5	豆 Bean	3小时 3 hours			是 Yes
6	虫草/药膳汤 Cordyceps	2.5小时 2.5 hours			是 Yes
7	鱼汤 Fish Soup	2.5小时 2.5 hours			是 Yes
8	燕窝 Bird's nest	1.5小时 1.5 hours			是 Yes
9	甜品 Desserts	2小时 2 hours			是 Yes
10	红烧 Braise	1小时 1 hour			否 NO
11	粥 Congee	2小时 2 hours			是 Yes

注意事项 Notes

1. 请使用与铭牌所标电压值一致的交流电源。请使用有合格保护接地的电源，以确保人身安全。
 2. 使用本产品时应放置在儿童接触不到的稳固平台上。
 3. 不要放在易燃易爆的物品附近或表面使用；不要放在潮湿或靠近其它热源的地方使用，以免发生故障和危险。
 4. 产品工作时会冒出蒸汽，切勿将脸或手靠近蒸汽口，以免烫伤；怕蒸汽的物体不要置于本产品上方；切勿将抹布或类似物品覆盖在蒸汽口上，以免引发意外或导致产品故障。
 5. 产品工作时，内锅及内锅盖温度会逐渐上升，工作完的发热体、锅体内表面温度很高，手或身体请勿触摸或碰及，以免烫伤。
 6. 内锅未盛炖煮食物时，切勿通电干烧，不用时请拔下电源插头。
 7. 若产品出现缺水干烧，请立即拔掉电源，让产品自然冷却，冷却过程不能往内锅加水或将内锅移出锅体，否则可能会导致内锅损坏。
 8. 加水量应在最低水位线与最高水位线之间。加水过少或过多，都可能出现故障和危险。
 9. 插入电源线时，必须插到底，以确保接触良好。
 10. 应经常保持电源插头、插座的干燥，禁止用湿手插拔电源插头，以防止触电。
 11. 产品在通电工作时，请勿移动。
 12. 产品在通电工作时，内部可能会发出轻微的“嗒、嗒”响声，这是器具调整火力的声音，不影响正常工作。
 13. 在工作状态下按动“保温/取消”键，产品将回到待机状态，即显示屏显示“00:00”。
 14. 若中途断电，产品将回到待机状态，需重新设置，才能继续工作。
 15. 加开水煮粥并不能缩短煮粥时间，只会使米粥煮得更烂，请注意使用。
 16. 产品第一次使用时，发热体可能发出轻微异味，另显示屏在刚通电时可能显示闪烁，请拔下插头后重新通电，此两种现象属正常现象，请放心使用。
 17. 请保持传感器发热体表面清洁、平整，否则可能影响产品使用效果。
 18. 内锅及内锅盖均为易碎器皿，慎防与硬物碰撞及从高处跌落，造成破碎损坏。
 19. 炖煮食物或煮粥时，请参照内锅壁上的刻度线控制好食物量及水量，否则容易造成煮干、烧糊等现象，严重时将会影响内锅的使用寿命。
1. AC power voltage should be in accordance with the voltage indicated on the specification sticker. For your safety, use the power source with earthing system.
 2. When using this product, it should be placed at a solid platform out of children's reach.
 3. Do not place the product near or at the surfaces of the items that are flammable and explosive; do not put the product at the places that are wet or near other heat sources to avoid failures and danger.

4. When the product is functioning, it will produce steam, do not touch or go near the steam vent to avoid scalding. Do not cover the steam vent with cloth or similar items during cooking so as to avoid hazard.
5. When the product is functioning, the temperature of the inner pot and the inner pot lid will gradually increase. The surface temperature of the heating elements and the inner pot body would be very hot, do not touch them to avoid scalds.
6. Do not heat up empty pot, do not turn on the power as to avoid dry-heating that would cause damage to the pot.
7. If the product is burnt dry due to lack of water, please immediately unplug the power supply and allow the product to cool naturally. Do not add water into the inner pot or take the inner pot out of the pot body during the cooling process. Otherwise, the inner pot may be damaged.
8. The amount of water added should be between the lowest water level and the highest water level. Too little or too much water added can cause failures and dangers.
9. When the powercord is plugged in, it must be fully inserted as to ensure good contact.
10. The power plug and please do not insert or pull the power plug with wet hands to prevent from electrical shock.
11. When this product is power on, do not move the appliances..
12. During cooking processing, it is normal to hear some "tick" sound. It shows that the product is adjusting the heat power.
13. To stop any cooking process or cancel selection just press the "keep warm / Cancel" key to return to standby mode and indicator will shows "00:00".
14. If the power is off halfway, the product will return to the standby state, and it needs to be reset to continue the operation.
15. Please note that If boiled hot water is used for cooking porridge, it will not shorten the cooking timing but it will over cooked the porridge.
16. When the product is used for the first time, the heating unit may give out a slight odor; besides, the screen may flash when it is just switched on, so please pull out the plug and switch it on again; these two symptoms are normal, so please rest assured when using it.
17. Please keep the surface of the sensor and the heating elements clean and smooth, otherwise, it may affect the using effect of the product.

18. The inner pot and the inner pot lid are fragile utensils, so beware of collision with hard objects and falling from a height to result in broken damage.
19. When stewing food or cooking porridge, please refer to the scale line on the inner pot is to control the amount of food and water, otherwise, boiling dry, burning and other problems may occur, which will affect the life span of the inner pot.
20. Please do not add cold water when the inner pot is still hot to prevent damage/ cracks. After cooking please let the inner pot to cool down before washing under tap water.

保养和维护 Repair and maintenance

内锅保养小贴士

新内锅使用前，最好用淘米水煮一下，也可以先煮一次粥，这样可以堵塞住内锅细微的孔眼，防止渗水，延长使用寿命。

Tips for inner pot maintenance

Before using the new inner pot, it's better to it boil with rice-washing water, or you can also boil porridge for one time with the inner pot, which can block the tiny holes of the inner pot to prevent water seepage and to extend its life span.

1. 清洗方法 Cleaning methods:

- ①. 产品清洗前应先拔掉电源线，待冷却后再进行清洗。
 - ②. 切勿将电源线、产品整体浸入水中或冲洗，以免电器进水，产生故障，影响安全使用，请勿将刚炖煮后的陶瓷内锅立即放入水中清洗，以免造成破裂。
 - ③. 可用湿毛巾擦拭机体外表面，切勿使用腐蚀性液体进行清洗。
 - ④. 陶瓷件可用洗洁精和海绵清洗，请勿使用硬质钢丝清洗，以免损坏表面。
- ①. Off and unplugged the power before cleaning the product, let the inner pot to cool down before washing under tap water.
 - ②. Do not immerse the power cord and appliances into the water which may cause electric hazard. Do not immerse the inner pot immediately after cooking as it may cause damage or cracks.
 - ③. Use a damp cloth to wipe the outer surface of the appliances, do not use corrosive liquids for cleaning.
 - ④. The inner pot can be washed with detergent and soft sponge, do not use hard steel wire to clean as it may damage the surface.

2. 保存方法 Save methods

- ①. 产品长时间不使用时, 请清洁擦净后, 装入包装箱中, 应存放于通风干燥的地方, 以免受潮, 影响使用。
 - ②. 本产品中含有部分可单独拆卸的零部件, 为确保安全, 请在拆卸或清洗后给予正确装回原位或进行妥善保管、存放, 以免丢失或小孩误食。
 - ③. 蒸汽盖可以取下清洗。如果蒸汽盖不慎遗失, 可用随机赠送的蒸汽盖替换。
- ①. When the product is not used for a long time, please clean it and put it into the packing box. It should be stored in a ventilated and dry place to avoid hazards in future use.
 - ②. This product contains small parts that can be disassembled for washing. To ensure safety, please assemble it back after washing or keep in a safe place from children's reach.
 - ③. Failure and troubleshooting.

3. 故障及排除 Failure symptoms


序号 Serial No.	故障现象 Failure phenomenon	故障原因 Failure causes	排除方法 Troubleshooting methods
①	不通电 Power failure	电源线插头没插好 The plug of the power line is not properly connected	电源线插头没插好 Check whether the power line is properly plugged in place
		产品故障 Product failure	请送指定维修点检修 Send to maintenance center for troubleshooting
②	显示E1或E2 Display E1 or E2	产品故障 Product failure	

4. 非专业人员切勿拆卸、修理本产品。
5. 如果电源软线损坏, 必须用专用软线或从我司供销商或维修部买到的专用组件来更换。
6. 当产品出现故障且无法排除时, 切勿自行维修, 请与我司设立在当地的特约维修网点或本公司客户服务部联系解决。
7. 本产品中的陶瓷件为易碎品, 不在保修范围内, 请小心使用。

4. Please do not dismantle or repair with an unauthorized technical personnel.
5. If the power cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
6. When the product fails and shows troubleshoot, do not repair by yourself. Please contact or send your appliance to TOYOMI service centre.
7. The ceramic inner pot and cover in this product are fragile items, which are not covered within the scope of warranty services, so please use it with care.

INSTRUCTION MANUAL

Please read carefully and keep the instruction well

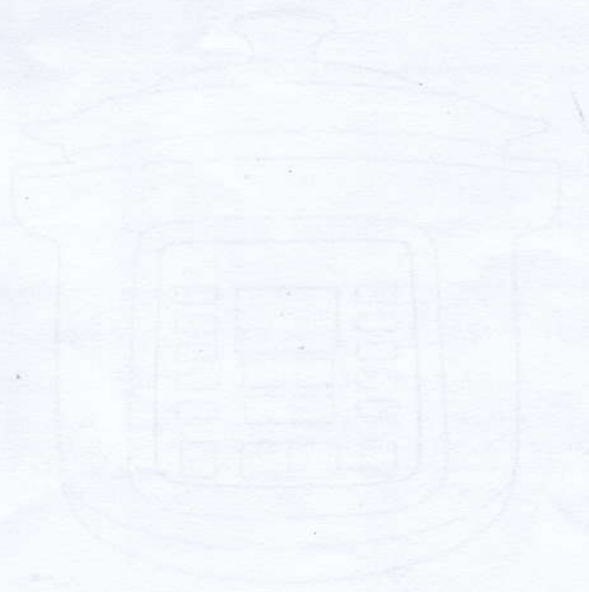

IMPORTED BY NATIONAL ELECTRICAL TRADING

SERVICE & IMPORTANT NOTICE

- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- **WARNING:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- ① This product contains small parts that can be a choking hazard for children. To ensure safety, please assemble it back after washing and keep it in a safe place from children's reach.
- ② Errors and troubleshooting

1. 故障及排除 Failure symptoms

故障现象	原因	解决方法
Power failure	The plug of the power line is not properly connected.	Check whether the power line is properly plugged in place.
Product failure	Product failure	Send to manufacturer center for repair.
Display of error	Product failure	Send to manufacturer center for repair.

IMPORTED BY NATIONAL ELECTRICAL TRADERS