

Toyomi®

 
DIGITAL INFRARED COOKER

MODEL: IC 9232
220V-240V~50/60Hz
POWER: 2000W

- 1. Heating Plate
- 2. Metal Body
- 3. Timer Switch
- 4. BBQ Button
- 5. Hot Pot Heat
- 6. Knob
- 7. LED Screen
- 8. Timer LED
- 9. Hot Pot
- 10. BBQ/FRY LED Indicator
- 11. Fry Pan
- 12. BBQ Pan
- 13. Glass Cover
- 14. Handle


INSTRUCTION MANUAL

Please read carefully and keep the instruction well

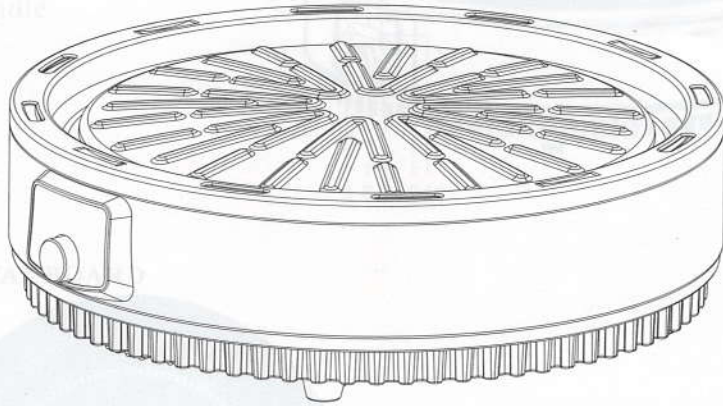


CRYSTA

 CONTROL PANEL

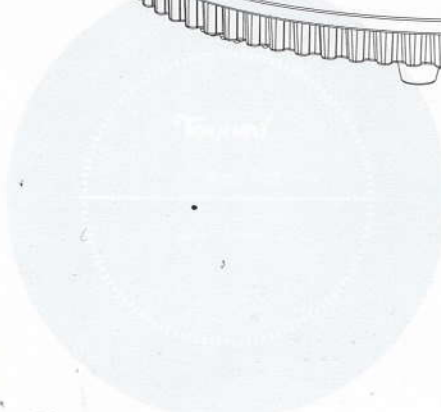


197 12 7800 0

 COMPONENTS

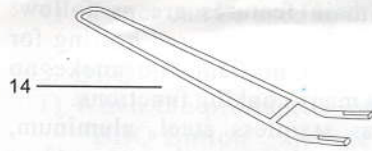


14

 
- 1.Heating Plate
- 2.Metal Body
- 3.Timer Button
- 4.BBQ Button
- 5.Hot Pot Button
- 6.Knob
- 7.LED Screen
- 8.Timer LED Indicator
- 9.Hot Pot LED Indicator
- 10.BBQ/FRY LED Indicator
- 11.Fry Pan
- 12.BBQ Pan
- 13.Glass Cover
- 14.Handle

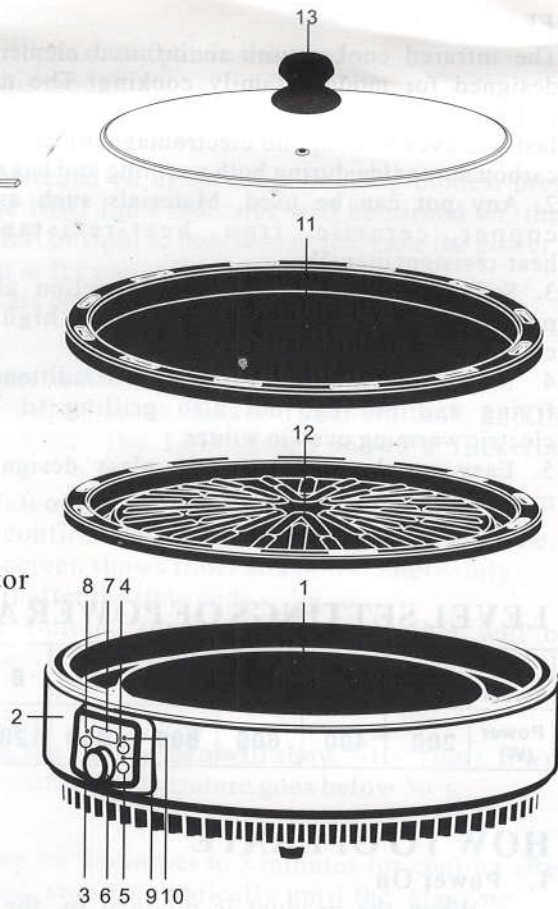

CRYSTAL BOARD

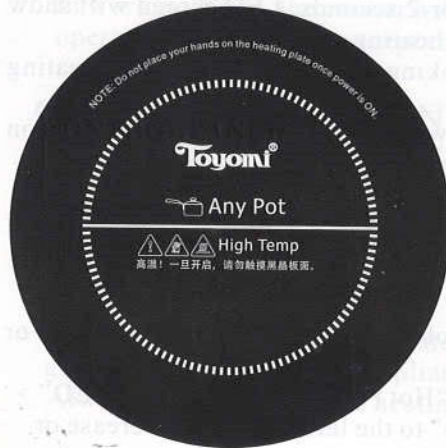 

CONTROL PANEL

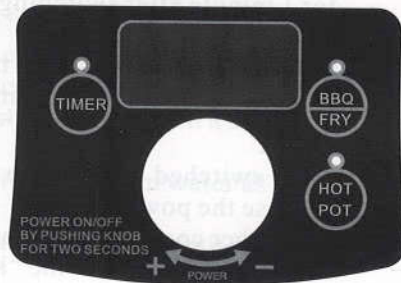 

FEATURES

The infrared cooker uses an infrared element to heat the surface. It is designed for modern family cooking. The main features are as follow:

1. Energy saving and environmentally friendly. It uses infrared heating for fast and even heating, no electromagnetic radiation, no flame, no smoke, no carbon monoxide during both warming and has many cooking functions.
2. Any pot can be used. Materials such as stainless steel, aluminum, copper, ceramic, iron, heat-resistant glass and any other heat-resistant utensils
3. Safety protection. Self-detect function allows for automatic surface protection and inside overheating, high-voltage and low-voltage circumstances.
4. Multi functions. Not only the traditional uses, such as steaming, frying and boiling, but also grilling to barbeque or to use as an electric warming oven in winter.
5. Easy to clean. The whole glass design is good for cleaning and maintenance.

LEVEL SETTINGS OF POWER AND TEMPERATURE

LED Screen	1	2	3	4	5	6	7	8	9	10
Power (W)	200	400	600	800	1000	1200	1400	1600	1800	2000

HOW TO OPERATE

1. Power On

When the product is plugged in, the display lights will turn on momentarily before automatically going off.

2. Switch On

- 1) After power on, press "Knob" for 2 seconds, LED screen will show "ON" and the cooker is ready for heating.
- 2) Turn the knob or press any cooking function to enter the heating mode.
- 3) The cooker will return to the "power on" state without any operation for 1 minute after switching it on.

3. Switch Off

When in heating or power on mode, press the "Knob" and the cooker will stop working and enter into "power on" condition.

4. Hot Pot

- 1) When switched on, turn the "Knob" to the left or right to decrease or increase the power.
- 2) Or in other cooking mode, press "Hot Pot Button", "Hot Pot LED" will be turned on, turn the "Knob" to the left or right to decrease or

to increase the power.

- 3) You can not use the grill pan or fry pan in this mode.
- 4) Timer can be used in this mode.

5. BBQ

- 1) When the product is switched on or on other cooking modes, press "BBQ Button", and the BBQ light indicator will be turned on, then turn the "Knob" to the left or right to decrease or increase the power.
- 2) You can use the grill pan or fry pan in this mode.
- 3) Timer could be used in this mode.

6. Timer

- 1) Time ranges from 1 minute to 3 hours.
- 2) In "Hot Pot" mode or "BBQ" mode, press "Timer Button", and the timer indicator will turn on. The LED screen shows a flickering "0:00".
- 3) Turn the "Knob" to the left or right to decrease or increase the time.
- 4) It will be automatically confirmed in 5 seconds after you set the time.
- 5) In timer mode, the LED screen shows timer and power alternately.
- 6) It will return to power off after the time ends.
- 7) Keep pressing "Timer Button" for 2 seconds and timer will be canceled.

7. High Temperature Indicator

After cooking is finished, the LED screen will show "-H-" (hot), it will disappear until the glass surface temperature goes below 50°C.

8. Fan Keeps Working

The fan will keep working for 2 minutes to 5 minutes for cooling after cooking is finished. It will stop automatically until the glass surface temperature goes below 50°C.

9. Automatically Switch Off When No Operation for 2 Hours

In working mode, the cooker will automatically switch off if there is no operation after 2 hours except the mode of timer and preset.

CLEANING AND MAINTENANCE

1. Turn off the appliance by pressing the "Knob" and wait until the light turns off. Once off, unplug the power cord properly.
2. Wait for some time and let the appliance cool down.
3. You can use mild detergent or dishwashing liquid with a soft cloth to remove dirt.
4. Do not clean it with running water or immerse it in water as water will get inside and damage the appliance.
5. Always make sure that the heating plate and the pan/pot is clean before

cooking as the dirt from the pan/pot will stick to the plate and plate will get discolored.

6. You may clean the air vent using a vacuum cleaner to suck up the dirt or you can use cotton cloth if the dirt is with oil.
7. Using a toothbrush with a little soap can also be used to clean the surface as long as you use it gently on the appliance.
8. Do not use abrasives or strong detergents as there might be a chemical reaction or damage the surface area.
9. After dirt has been removed, use a dry, soft cloth to wipe dry the appliance.

TROUBLE	POTENTIAL CAUSES	RESOLUTION
Power indicator not on	Power cord is not connected well	Please ensure the plug inserted into the socket
Power off automatically	1. Spare parts over heated 2. No operation made in two hours	Please restart the cooker, otherwise, return it to the service center for checking and repairing
LCD shows E1	Too low voltage protection	Please ensure 150V<voltage <270V, 220V~240V is preferred.
LCD shows E2	High voltage protection	Please ensure 150V<voltage <270V, 220V~240V is preferred.
LCD shows E3	Temperature sensor short circuit	Please return the cooker to the service center for checking and repairing
LCD shows E4	Temperature sensor short circuit	Please return the cooker to the service center for checking and repairing
LCD shows E5	High temperature protection	Start again after the temperature cool down
LCD shows E6	NTC short circuit or open circuit	Please return the cooker to the service center for checking and repairing

 
Note: If the faults cannot be resolved, please do not disassemble the appliance by yourself, but return it to the service center for repairing. If you disassemble the appliance by yourself, we have the right to make the warranty invalid. Dangers or other safety accidents caused by this will also be charged to the user.

Glass lid installation instructions



Assembling in the following order:

- ①
- ②
- ③
- ④
- ⑤
- ⑥

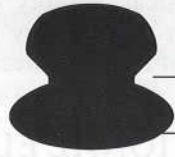

①

②



③



④



⑤



⑥

1972-1-7-80-10

SERVICE & IMPORTANT NOTICE

- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarity qualified person in order to avoid a hazard.
- **WARNING:** This appliance is not intended for use by persons (including children) with reduce physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

IMPORTED BY NATIONAL ELECTRICAL TRADERS

TROUBLE	POTENTIAL CAUSES	REMEDY
1. Power does not work	1. Check if power is on 2. Check if power cord is plugged in	1. Check if power is on 2. Check if power cord is plugged in
2. Power does not work	1. Check if power is on 2. Check if power cord is plugged in	1. Check if power is on 2. Check if power cord is plugged in
3. Power does not work	1. Check if power is on 2. Check if power cord is plugged in	1. Check if power is on 2. Check if power cord is plugged in
4. Power does not work	1. Check if power is on 2. Check if power cord is plugged in	1. Check if power is on 2. Check if power cord is plugged in
5. Power does not work	1. Check if power is on 2. Check if power cord is plugged in	1. Check if power is on 2. Check if power cord is plugged in
6. Power does not work	1. Check if power is on 2. Check if power cord is plugged in	1. Check if power is on 2. Check if power cord is plugged in

Note: If the fault cannot be resolved, please do not disassemble the appliance by yourself, but return it to the service center for repair. If you disassemble the appliance by yourself, we have the right to make the warranty invalid. Damages or other safety accidents caused by this will also be charged to the user.

1973-7-10