

# Toyomi®

## Combo Cooker Hotpot & BBQ Grill

MODEL: BBQ 6319

220-240V~50/60Hz

POWER: 1600-1900W



# INSTRUCTION MANUAL


Please read carefully and keep the instruction well

# **SAFETY PRECAUTIONS**

- Read carefully and save all the instructions provided with this appliance.
- Always turn the power off at the power outlet before you insert or remove the plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Appliances are not intended to be operated by means of an external timer or separate remote-control system.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner.
- Do not immerse the appliance in water or any other liquid.

• This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

## Features of your Multifunctional Grill & STEAM BOAT

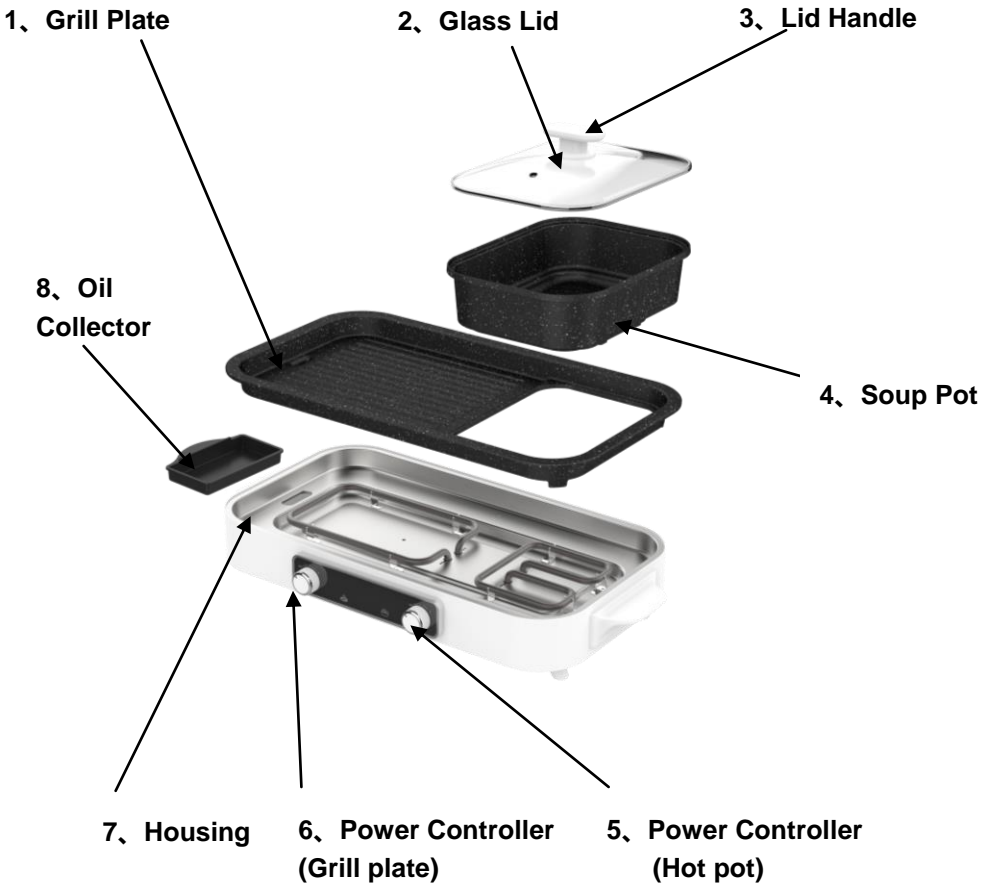

- 1, **Grill Plate**  
Heavy-duty aluminum casting plate with non-stick coating –the parallel raised embossments provide an excellent contact surface for grilling

- 2、 **Glass Lid**  
Tempered glass lid to prevent contents of Soup Pot from splashing out
- 3、 **Lid Handle**  
Cool-touch knob for holding Glass Lid
- 4、 **Soup Pot**  
Extra Deep heavy-duty aluminum casting pot with non-stick coating is excellent for boiling, frying and steaming.
- 5、 **Power Controller (Hot Pot)**  
The knob provides easy control for turning on the grill plate with 3 settings-OFF, LOW POWER, HIGH POWER
- 6、 **Power Controller (Grill plate)**  
The knob provides easy control for turning on the Soup Pot with 3 settings-OFF, LOW POWER, HIGH POWER
- 7、 **Housing**  
The housing is with two side handles comfortable for carrying and includes a slide-out Oil-collect Tray.
- 8、 **Oil Collector**  
Collect the drip oil from grill.

## **Using your Multifunctional Grill & STEAM BOAT**

### **Before first use**

Ensure any stickers are removed from the product. Before using for the first time, wash the soup pot, glass lid and Non-stick grill plate with mild soapy water and dry thoroughly before use.

Do a “trial run” at high temperatures to eliminate any substance or oil that may have been used during the manufacturing process. Smoke and odor may be detected, and this is normal.

### **Important note:**

**Please position the grill plate and soup pot correctly onto the heating element for proper operation.**

**The plate, soup pot and glass lid may all be completely immersed into water for cleaning. But please don't immerse the unit into water or any other liquid. Please clean the unit with wet clothes or paper, and then dry it completely before use or storage.**

## How to Use

1. Place the appliance on a flat and sturdy surface.
2. Connect the power plug to a power outlet and switch it on.
3. Rotate the power controllers to desired setting such as lower power or high power.
4. As pouring water or soup into an empty soup pot is dangerous (the hot surface may cause water or the soup to splash), always pour water or soup into the soup pot first before turning on the power.
5. You may adjust the desired power while cooking.
6. When the indicator light is on, it warms up automatically.
7. While cooking, it will stop heating when the temperature has reached the maximum temperature and it will automatically reheat after a few minutes.
8. Do not use any metal utensils for stir frying or stirring so as not to damage the nonstick coating of the grill plate and soup pot.
9. After cooking, ensure the temperature control knob is at "OFF" position. Only then should you remove the power plug from the power supply.

## Care and Cleaning

### Main housing

1. Always turn the power OFF and REMOVE the plug from the power outlet before cleaning.
2. If cleaning is necessary, wipe over with a damp cloth.

**Do not immerse the main housing in water or any other liquid.**

### Grill plate and soup pot

The grill plate and soup pot may be immersed into water for easy cleaning.

Please take the plate and soup pot from the unit for cleaning only after they are completely cool down.

### Glass lid

The glass lid is dishwasher safe, and may be completely immersible into water for cleaning.

After cleaning, dry the unit thoroughly with a soft cloth before storing.

**CAUTION:**

**Do not hard-scrub the grill plate and hot pot as it may damage the non-stick coating. Use non-abrasive and non-metallic cleaning materials only.**

**Do not touch hot surfaces. Use oven mitts and hold by the appliance's housing to move it while the appliance is hot. Always place appliance on a heat-resistant surface.**

**Always disconnect the appliance from the main unit before cleaning.**

## SERVICE & IMPORTANT NOTICE

- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarity qualified person in order to avoid a hazard.

- WARNING: This appliance is not intended for use by persons (including children) with reduce physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

IMPORTED BY NATIONAL ELECTRICAL TRADERS