 


Toyomi®

FILTER WATER DISPENSER

INSTRUCTION MANUAL

Please read carefully and keep the instruction well.

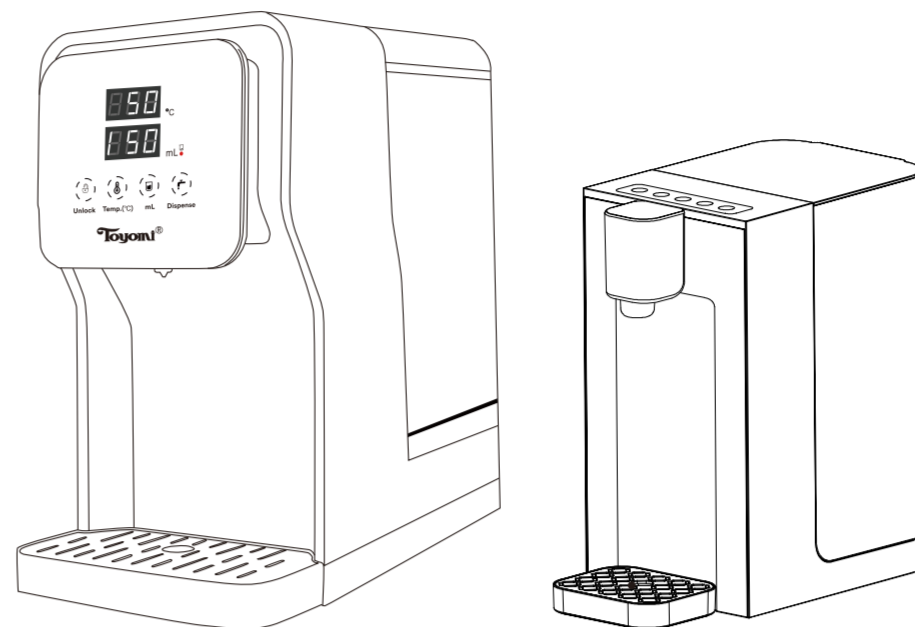

MODEL: FB 8845F
220-240V~50/60Hz
POWER: 2200-2700W
CAPACITY: 4.5L

MODEL: FB 7735F
220-240V~50/60Hz
POWER: 2200-2700W
CAPACITY: 3.5L


This appliance is for household use only.

SERVICE & IMPORTANT NOTICE


- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarity qualified person in order to avoid a hazard.
- **WARNING:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

IMPORTED BY NATIONAL ELECTRICAL TRADERS

Name of Parts

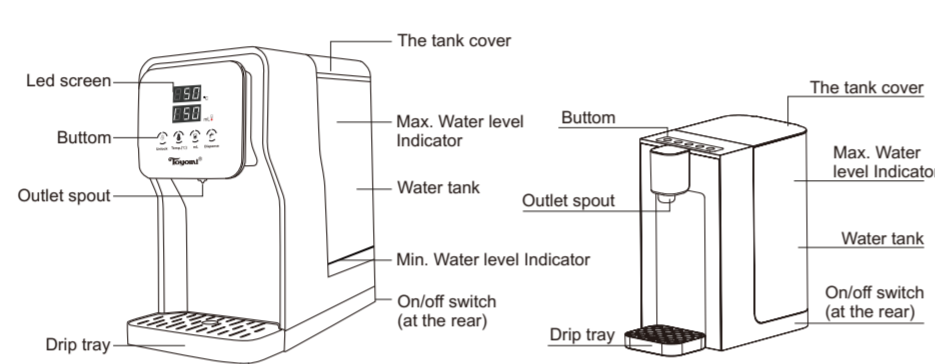

CONTROL PANEL

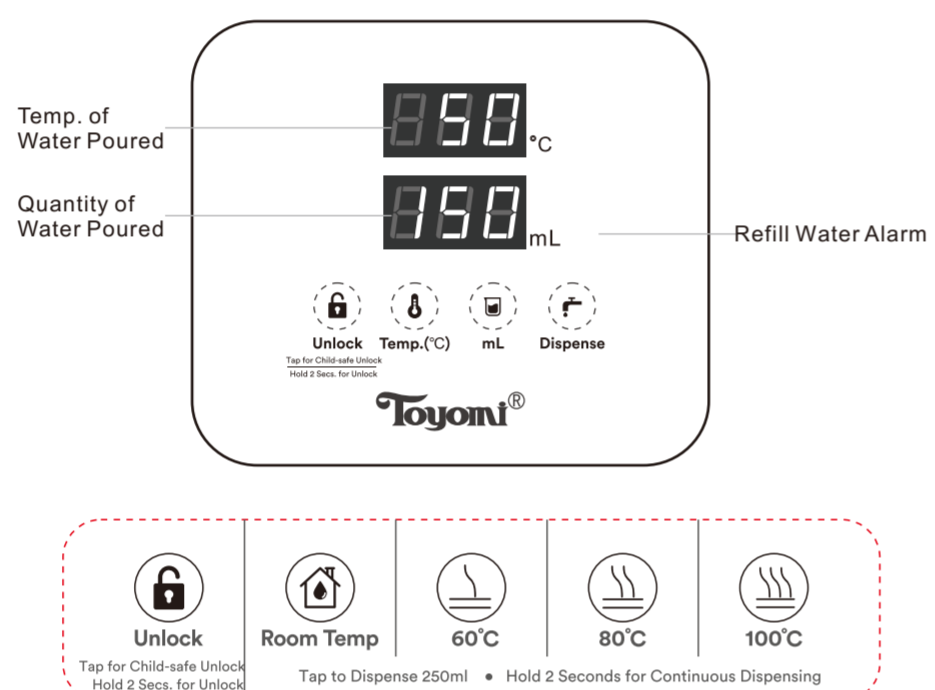

1

5. 无水警告: 检测到无水后, 即刻停止加热, FB7735F蜂鸣器响10声后, 所有温度灯开始闪烁报警, 自动进入锁机状态; FB8845F蜂鸣器响10声后, 数码管显示“----”与所有按键灯交替闪烁, 自动进入锁机状态。
6. 锁机状态下, 必须关闭电源后加水, 再接通电源, 才可正常使用。

Failure and trouble shooting

Fault phenomenon	Reason analyse	Solution
It doesn't work	Power plug is not inserted well	Plug in again
	It doesn't turn on the power switch	turn on the power switch
It does not dispense	The water tank is not inserted to the bottom of main body	Place the water tank to the bottom of main body well
	The water tank is not inserted to the bottom	Take out the water tank and press by both hands to insert the tank on bottom firmly
The hot water temperature at 100°C setting is too low.	For first time use, the dispenser needs time to heat up	Constantly run two rounds of hot water, then use it as per normal.
	It is in the child lock state.	Press UNLOCK by holding down the button for 2 seconds.
Refill Water Alarm	Water in the water tank is empty.	Pour water in the water tank
Problems with the water (water flow, smell etc.)	The water tank and the waterway is blocked	Clean the water tank and waterway
	The dispensed water has a bad smell The dispensed water is not clean	Thoroughly clean the water tank, then let the water run for 2-3 cups before using as per normal
	The dispensing outlet is clogged	Clean the dispenser according to the instruction on this IM
Rate of flow for outlet is slow	The inner water tube is clogged	Descalc the inner water tube by putting two slice of lemon into water tank, and constantly run two round of 100°C hot water.

6

5. No water warning: the boiler immediately stops heating when it detects no water. To display "No water warning" alarm, after 10 buzzers, all temperature lights of FB7735F start flashing; Digital screen display "----" and all key lights of FB8845F start flashing alternately, automatically enter the "No water warning" alarm lock state.
6. When on the "No water warning" alarm lock state, turn off the power supply, add water, and then connect the power supply for normal use.

NOTE: It's normal that the water temperature of first dispensing is lower than 100°C.

Clean of filter and dispenser

Filter replacement reminder: Change the filter every 6 months.
Note: Unplug the power plug when cleaning the outer of product.

Method of descaling the internal water tube inside the product

Pour the lemon agent into the water tank according to the specific ratio of the instructions, set the water temperature to 99°C and the quantity of water pour to 500ml, press the "DISPENSE" button to water and stop repeatedly for three times. If it is not used for a long time, please empty all the water in the water channel inside the product. You can use a one small coin or screw driver to turn the water outlet at the bottom to empty the water.

Warning:

1. Please fill room temperature to water tank only, it will causes the product to spoil if the temperature is higher or lower than that of room temperature in the water tank.
2. Please don't fill any other liquid in the water tank.
3. Please use power socket with reliable ground to plug in and the current is above 13A, or else it causes fire accident because of power line overheat.


操作要领:

1. 本机通电蜂鸣1声, 所有指示灯亮起, 1秒后除了“UNLOCK”灯亮起, 其他按键指示灯熄灭, 进入锁机状态。
2. 待机状态
- 1) 长按“UNLOCK”键, 进入“童锁”(解锁后或其他操作后10秒自动锁定) 待机状态, “UNLOCK”灯亮起, 其他按键指示灯亮起, 如10秒没操作, 自动返回锁机状态。
- 2) 长按“UNLOCK”键2秒, 进入“解锁”(一直解锁) 待机状态, “UNLOCK”灯熄灭, 其他按键指示灯亮起, 按“UNLOCK”键, 返回锁机状态。
3. 出水量及温度设置
- 1) FB7735F: 在待机状态下, 点按“ROOM TEMP”、“60°C”、“85°C”或“100°C”温度键, 相应温度灯每4秒快闪2下, 进入该温度的250ML定量出水模式; 长按“ROOM TEMP”、“60°C”、“85°C”或“100°C”温度键2秒, 对应温度灯一直闪动, 进入该温度的不限量出水模式。
- 2) FB8845F: 在待机状态下, 按“TEMP”键, 可设置温度“ROOM TEMP→50°C→70°C→85°C→100°C→ROOM TEMP→50°C→...”, 按“ML”键, 可设置水量“150ML→250ML→500ML→ALL(不限量出水模式)”。设置好温度和水量后按

5

CAUTION:


Please pour away the first cup of water when using the dispenser for the first time or after the dispenser is not in use for a long time.

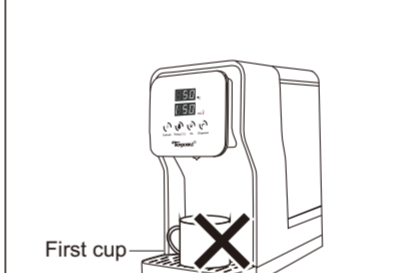


There is Steam water separating vent beside outlet, DO NOT touch or obstruct the vent or outlet when dispensing



Do not operate it without water in water tank, lay tank on place firmly.

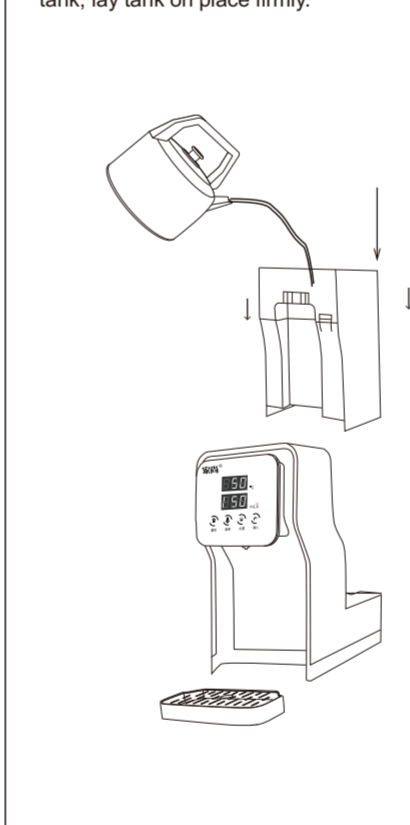

To assure quality of the water supplied, lay filter and tanks on place firmly as picture.

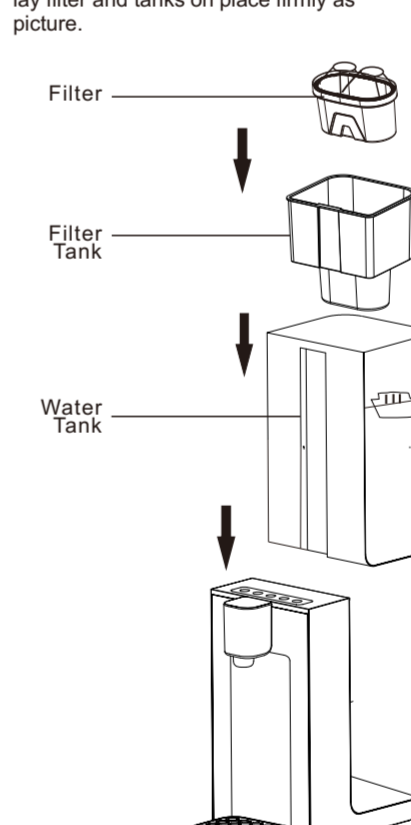

2

PRODUCT INTRODUCTION

1. The introduction of appliance
The appliance is one kind of intelligent boiler for home using which makes instant boiling water for healthy and safe consumption.

2. Features of appliance

- 2.1 Fast: only 3-5 seconds for hot water, immediate boiling for drinking
- 2.2 Saving energy: It works by only heating up the amount of water you want to drink, thereby avoiding boiling more water than what is needed. This saves energy, and is environmentally friendly.
- 2.3 Safe: All electrical parts of the dispenser is insulated to prevent electrical shocks and ensuring safe operation.
- 2.4 It could brew tea, coffee and milk powder by heating the water to different temperatures that is detected by intelligent adjustment.
- 2.5 It has a steam separating vent beside the outlet spout to avoid boiling water splash to hurt the user.

WARNING

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involve.
2. Children shall not play with the appliance.
3. Cleaning and user maintenance shall not be made by children without supervision.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarity qualified persons in order to avoid a hazard.
5. The pressure relief device must be fitted during installation, unless it is incorporated in the appliance.
6. The power socket should be three hole socket with reliable ground. The socket current should be above 10A. Please turn off the power supply at once and ask the professional electrician to check the power socket if it has the ground line if the machine body is found to be felling of hemp electricity in the using process.
7. The appliance should be installed in the cool and dry place of the room in order to avoid the sunshine. The flammable items is not allowed to be placed by the machine. The machine is not allowed to placed on the foam and paper board and so on for avoiding the leakage of electricity because of the water gathering. This appliance is not suitable for the installation outside near places where it will easily come into contact with water.
8. Please don't squeeze, knock & collide the appliance in the process of transportation, installation and using, or else it will be damaged.
9. Please pull out the power line by the head of the plug. Don't pull the power

3

cord directly or use an extension cord as that may cause an accident to occur.

10. Don't use the appliance without filling the water tank.
11. Don't pull the power line while moving the appliance. Don't wound the power line around the appliance.
12. Don't use the appliance on the hot platform or in the high temperature place.
13. Don't touch the outlet spout immediately after dispensing to avoid scalding.
14. Don't immerse the appliance in the water or any other liquid.
15. Please check the socket power is large enough to power the machine or else it will overload. Please check the voltage and power of the power outlet is the same as the mark of appliance.

First time operation instruction

1. Please open package and take out the machine.
2. Please take out the water tank & then pour water into water tank.
3. Please note that water level is not higher than MAX. level.
4. Please note that water tank must be placed on the body back bottom absolutely. (When the machine is plugged in, but the water tank, the water tank is not inserted properly seated, the machine will enter the alarm state.

Operation instruction

1. The boiler buzzes once it is powered on, and all indicators light up. One second later, except "UNLOCK" lights up, other key indicators turn off, and the device enters the lock state.
2. Standby
- 1) Press the "UNLOCK" key to enter the "child lock" state (Locked automatically 10 seconds after unlock or other operations). The "UNLOCK" indicator is off and other key indicators are on. If there is no operation within 10 seconds, the boiler will automatically return to the lock state.
- 2) Hold down the "UNLOCK" key for 2 seconds to remain at the "UNLOCK" (keeping unlock) standby state. The "UNLOCK" indicator is off and other indicators are on. Press the "UNLOCK" key to return to the lock state.
3. Water yield and temperature setting
- 1) FB7735F: In standby state, tap the temperature key of "ROOM TEMP", "60°C", "85°C" or "100°C", the corresponding temperature lamp flashes twice quickly every 4 seconds to enter the 250ML quantitative water outlet mode at relative temperature; Long press the temperature key of "ROOM TEMP", "60°C", "85°C" or "100°C" for 2 seconds, and the corresponding temperature lamp keeps flashing to enter the mode of unlimited water outlet at relative temperature.
- 2) FB8845F: In standby state, tap the "TEMP." key to set the temperature "ROOM TEMP→50°C→70°C→85°C→100°C→ROOM TEMP→50°C→...", tap "ML" to set the water volume "150ML→250ML→500ML→ALL(unlimited water outlet mode)...". After setting the temperature and water volume, tap DISPENSE. The DISPENSE light is flashing, dispensing water according to the temperature and water volume displayed.
4. In the dispensing state, press any key to stop dispensing, return to the original setting of "CHILD LOCK" or "UNLOCK" standby state.

4