 



INSTRUCTION MANUAL




MICRO-COM. RICE COOKER ジャー炊飯器 (微电脑)

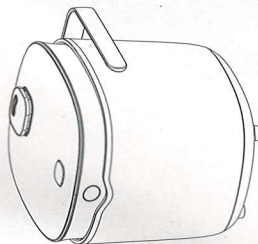

 MODEL: RC 2080LC
220-240V~50/60Hz
POWER: 360-450W
CAPACITY: 0.8L

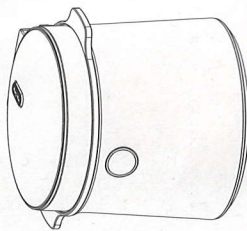

MODEL: RC 2090LC
220-240V~50/60Hz
POWER: 360-450W
CAPACITY: 0.8L

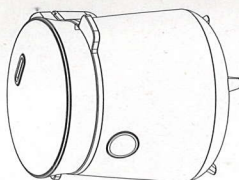


MODEL: RC 1506LC
220-240V~50/60Hz
POWER: 315-380W
CAPACITY: 0.6L

SERVICE & IMPORTANT NOTICE

- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- **WARNING:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Please read carefully and keep the instruction well

Parts name 部件

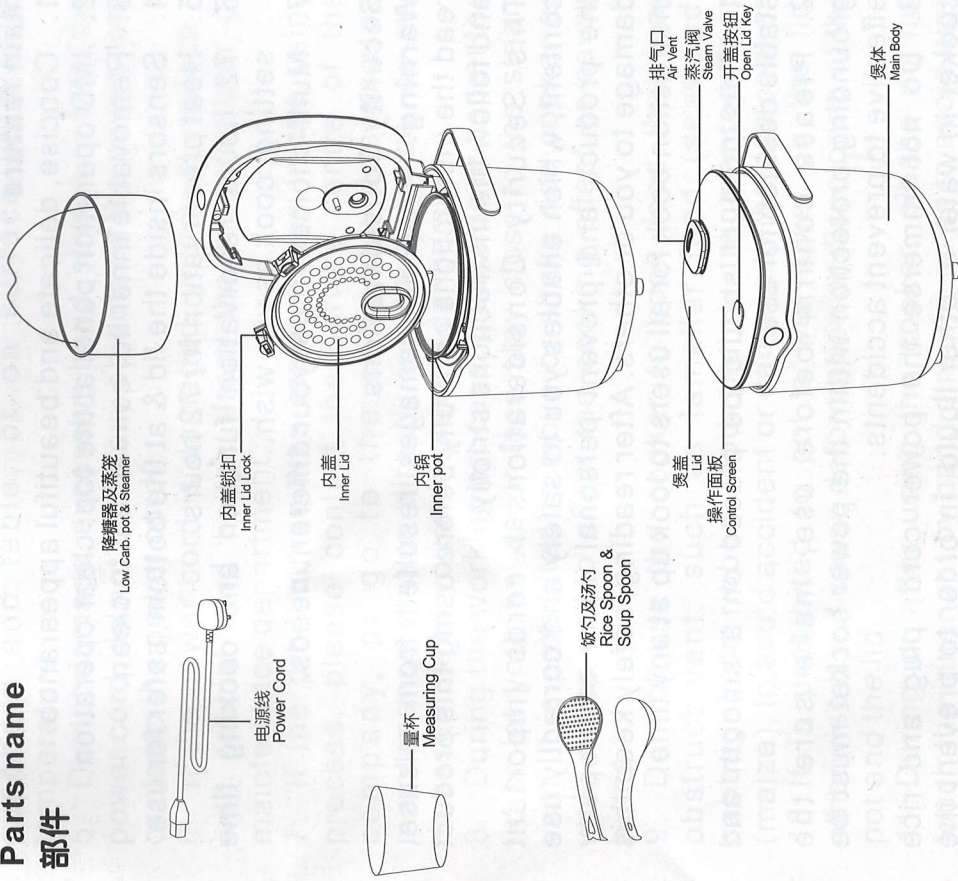

备注：产品图片与实物略有不同时，请以实物为准！

Notes: The picture of the product will be slightly different from the real product, please refer to the real product.

Main feature

1. Concise, delicate and beautiful appearance.
2. IMD operation panel at the top, clear operation.
3. Removable inner lid, convenient to clean.
4. Sensors inside the lid & at the bottom, safer for use.
5. Heat preservation for 72 hours.
6. 72 hours reservation function and cooking time setting, cook as you wish.
7. Multi-choices, meet your different needs.

Security Considerations

Warning: To avoid damages resulted from misuse, read the instructions carefully before using this product and follow the instructions strictly.

This Security Considerations records important content, which enables you to safely and correctly use the product, and prevent personal injury or property damage to you or others. After reading, safely keep this instruction book for all users to look up at any time.

1. This product should be placed on a smooth and stable desktop for use.
2. Please confirm before use, make sure the grounding protection within the power socket must be effective to prevent accidents.
3. Do not immerse the power cord, plug and rice cooker in water or other liquid, in order to prevent the risk of electric shock.
4. Do not hang the power cord at the edge of the

cupboard and table, or on surface with high temperature.

5. Do not damage, excessive bend, stretch or twist the power cord, do not put heavy objects on the power cord or clamp the power cord.
6. If the power cord is damaged, you must replace it with special cord bought from the manufacturer or maintenance department.
7. If the product requires maintenance in the using process, please contact the service centre of the company, or go to the company designated maintenance station directly for maintenance, do not disassemble by yourself to avoid dangers.
8. During the working process, please do not open the lid or let your hands or face stay close to the steam vent, it is prohibited to move or shake rice cooker as well, so as not to affect the cooking effect or cause burns.
9. Do not use the cooker to cook food that may obstruct vent, such as lamellar food (seaweed, cabbage) or ribbon food (kelp), fragmented food (maize), to avoid accident or damage to the rice cooker.
10. It is prohibited to put a wet towel on the lid, otherwise it will cause deformation or discoloring of the pot and the lid.
11. During or after using the cooker, please do not touch the inner pot by hand directly, so as to avoid high temperature scald.
12. The product is only suitable for family use, do not

use this rice cooker for other purposes that are not specified.

13. After putting the inner pot into the pot body, please gently rotate the inner pot around to ensure it is in consistent contact with the pan sensor.

14. Do not heat the inner pot on the fire.

15. Stop using the cooker when the inner pot is deformed, you should contact the after-sales maintenance personnel of the company to buy a new inner pot.

16. Before putting the inner pot into the pot body, please make sure that there is no adhesion of rice grains or vegetable dregs on surface of the inner pot bottom or on the surface of the coil heater. If there is any adhesion, wash the inner pot again, otherwise it may cause overheating of the pot body or the food will be undercooked.

17. Before cleaning the rice cooker, unplug the power cord first and wait for the product to cool down before doing so.

18. If there is no heat preservation after use, remove the power cord in time (do not pull).

19. Please clean the inner lid, sealing rubber ring and steam valve regularly to avoid rice odour.

20. Use this product with extra care if children are present. Do not allow children to use it alone or keep it within the reach of children.


21. Store the product out of the reach of children. Do not allow the product to be used or played by persons

(including children) with reduced physically, sensory or mentally capabilities or lack of relevant experience and knowledge.


22. Do not immerse the product in any liquid.

CONTROL PANEL


RC 1506LC

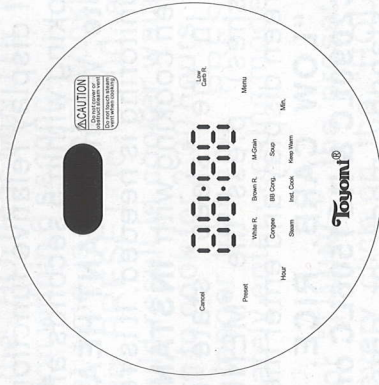

RC 2080LC

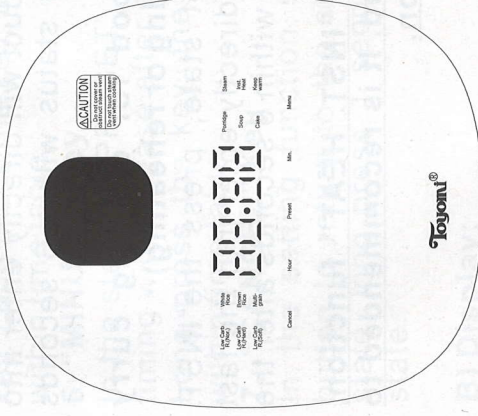

RC 2090LC

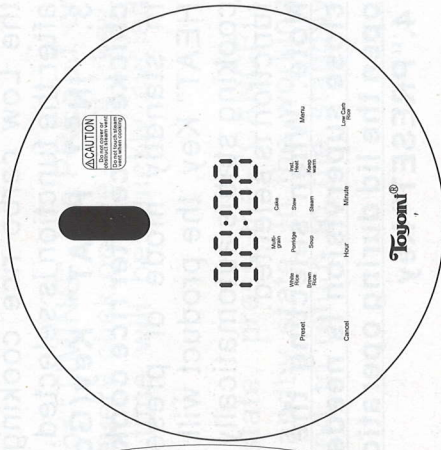

Instructions for use

A) Operation screen

1. "Menu" function key:

1) In standby mode or preset state, press "MENU" button continuously to choose function, digital screen will display relative function, it will automatically enter cooking within 5 seconds after the function is selected.

Note: When **INSTANT HEAT** function is selected, close monitoring is needed. It is recommended to open the lid when cooking with **INSTANT HEAT** function.

2) In the "sleep" state (only the "MENU" button flashes), press the "MENU" button to wake up the screen display and enter the "standby" mode.

2. "LOW CARB. RICE." Key(shortcut key)(for RC2090LC & RC1506LC only)

In standby mode or preset state, press the "LOW CARB. RICE." Key, the product will directly enter into the Low carb rice cooking status within 6 seconds after the function is selected.

3. "INST. HEAT" Key(Good for cooking curry chicken rice after rice cooking or reheating)

In standby mode or preset state, press the "INST. HEAT" Key, the product will directly enter into the fast cooking status automatically within 6 seconds after the function is selected.

Note: When selecting the "INST. HEAT" function, close supervision is needed. It is recommended to open the lid during operation.

4. "PRESET" Key

In the state to be selected, press the "PRESET" button to enter the PRESET setting. The default PRESET time is 02:00 hours. Press the "HOUR" or the "MINUTE" button to set the PRESET time. After setting the PRESET time, press the "Function" key to enter the PRESET cooking, or press the "HOUR"/"MINUTE" key to modify the timing of function within 6 seconds.

Note: 1) The chosen preset time is the total cooking working time. Eg. Setting PRESET to 08:00 and function timing to 02:30 would result in cooker waiting for 5:30 hours before starting to cook for 2:30 hours.

2) If the function timing is longer than the PRESET time, the cooker will immediately enter cooking mode.

5. "HOUR" Key

In the state of "PRESET" or "TIMING", the preset or timing will increase after every click on the "HOUR" key. Long press the key, the time will be quickly cycled within time table.

6. "MINUTE" Key

In the state of "PRESET" or "TIMING", the PRESET or timing will increase after every click on the "MIN." key. Long press the key, the time will be quickly cycled within time table.

7. "CANCEL" Key

In the setting function state, press the "CANCEL" button to return to the standby state. In the working state, long press 1 second to return to the standby state.

B) Display:

1. "Standby" state: After the cooker is powered on, all function indicator lights are on, digital screen displays "----". If there is no operation within 1 second, it will enter into the "sleep" state, only the "MENU" key flashing.
2. "Sleep" state: In sleep state, tap the "MENU" button to return to standby state.
3. "Working" state: in "Standby" state, tap "LOW CARB. RICE." Key(shortcut key) / or "MENU" function key, after 6 seconds, it will automatically enter the "Working" state. The corresponding function is on, and the display is as "Introduction Table of Functions".

C) Precautions for the first use:

1. Please read the manual carefully before use.
2. Please take out the accessories of the cooker before use, and check whether the accessories are complete (see Parts and Installation Instructions for the accessories).
3. Please clean all accessories and parts of the machine before use:
 - 1) Clean the rice spoon, soup spoon, measuring cup and other accessories, wipe dry after cleaning.
 - 2) Take out the inner lid.
 - 3) Remove the steam valve (For RC2080LC only).
 - 4) Clean the inner pot, inner lid, steam valve, rice spoon and other components with soft cloth, and dry them after cleaning.
- 5) Assemble all of the parts

Note: If the lid has not been closed well, the cooking effect will be affected.

- 6) If there is a grain or other impurities attached on the heating plate, wipe them with a dry cloth.
- 7) Wipe the shell and upper lid with a wet cloth after wringing it dry, do not use gasoline or other solution, and do not wash them with water or immerse the product into water or other liquid, so as to avoid damages to the product.

D) Introduction Table of Functions

NO.	FUNCTION 功能	PRESET TIME RANGE 预约时间 调节范围	DEFAULT WORKING TIME 默认工 作时间	WORKING TIME RANGE 工作时间的调节范围	DIGITAL SCREEN DISPLAY 数码显示 显示情况	KEPP WARM TIME 保温时 间
1.	LOW CARB. R. 降糖饭 RC2080LC	NORMAL 适中	00:45	NON-ADJUSTABLE(HOUR/MINUTE) AUTOMATICALLY亦可调(时、分) 灯熄灭)	WORKING LIGHT INDICATOR OFF 显示灯熄灭 作时间倒计时	72Hr. 小时
		HARD 硬	00:40			
		SOFT 软	00:50			
2.	WHITE RICE 白米饭 RC1506LC, RC2090LC	00:45-24:50 00:35-24:50	约 00:35	NON-ADJUSTABLE(HOUR/MINUTE) LIGHT INDICATOR OFF 灯熄灭)	00:35 ↑ [[[]] ↓	72Hr. 小时
3.	BROWN RICE 糙米饭	01:00-24:50	约 01:00	NON-ADJUSTABLE(HOUR/MINUTE) LIGHT INDICATOR OFF 灯熄灭)	01:00 ↑ [[[]] ↓	72Hr. 小时
4.	MULTI-GRAIN 杂粮饭	01:30-24:50	约 01:30	NON-ADJUSTABLE(HOUR/MINUTE) LIGHT INDICATOR OFF 灯熄灭)	01:30 ↑ [[[]] ↓	72Hr. 小时
5.	PORRIDGE/CONGEE 粥或稀饭	00:45-24:50	01:00	00:45-05:00	WORKING LIGHT INDICATOR OFF 显示灯熄灭 作时间倒计时	72Hr. 小时
6.	BB CONGEE (RC1506LC) 粥	01:00-24:50	01:15	01:00-06:00	WORKING TIME LEFT 显示灯熄灭 作时间倒计时	72Hr. 小时
7.	SOUP 汤	01:00-24:50	01:30	01:00-05:00	WORKING TIME LEFT 显示灯熄灭 作时间倒计时	72Hr. 小时
8.	CAKE (RC2080LC, RC2090LC) 发糕	01:15-24:50	01:15	NON-ADJUSTABLE(HOUR/MINUTE) LIGHT INDICATOR OFF 灯熄灭)	WORKING TIME LEFT 显示灯熄灭 作时间倒计时	72Hr. 小时
9.	STEW (RC2090LC) 炖	01:00-24:50	02:00	01:00-06:00	WORKING TIME LEFT 显示灯熄灭 作时间倒计时	72Hr. 小时
10.	STEAM 蒸	00:15-24:50	00:30 (AFTER BOILING 水滚后)	00:15-02:00	WORKING TIME LEFT 显示灯熄灭 作时间倒计时	72Hr. 小时
11.	INST. HEAT 快热(大火不间断加热)	NULL 不可预约	00:25	NON-ADJUSTABLE(HOUR/MINUTE) LIGHT INDICATOR OFF 灯熄灭)	WORKING TIME LEFT 显示灯熄灭 作时间倒计时	72Hr. 小时
12.	KEEP WARM 保温(最小火力保温)	NULL 不可预约	00:00-72:00	NON-ADJUSTABLE(HOUR/MINUTE) LIGHT INDICATOR OFF 灯熄灭)	WORKING TIME 显示灯熄灭 作时间正计时	NULL 不适合

E) Water menu of Function:

- The ratio of rice to water varies for different RICE cooking function. Add water according to the type of rice or personal preference and water scale on the inner side of the pot.
- The amount of water added for various porridge or soup cooking functions should not exceed the highest scale in the inner pot, according to the type of rice, food materials or personal taste.
- STEAM: Steaming with the low carb. pot. Please make sure the food is not soaked while the water is boiling.
- LOW CARB. RICE: Washing rice with LOW CARB. pot, and then put LOW CARB. inner pot into the inner pot, add water to water about cover the rice(according to the type of rice or personal taste).

Warm Tips:

- The working time of each function will vary slightly depending on the ingredients, voltage, air pressure and other factors.
- To prevent the rice from clumping, turn the rice loose within 30 minutes after entering the keep-warm state.
- The PRESET time should not be too long. Users need to adjust the cooking time of the ingredients to avoid the deterioration or odor of the ingredients.
- CAKE: Put dough with yeast into the inner tank, and press "CAKE", 6 seconds later, It will ferment at 40°C for 30 minutes, and then heated at high temperature for 45 minutes.

F) Cleaning:

- Power off before cleaning the rice cooker, and cool it down before proceeding.
- Open the cover of the rice cooker after cooling, remove the inner cover, clean it with clean water and dry it with a dry cloth

(Note: Do not pull the sealing ring forcibly as pulling deformation will affect the sealing and micro-pressure effect).
 3. Take out the inner pot, clean with soft sponge, wipe it with dry soft cloth after cleaning. (Note: do not use wire ball to scrub, otherwise the non-stick coating will be damaged.)
 4. If there is a grain or other impurities attached on the heating plate, wipe them away with dry soft cloth.
 9. Wipe the shell and upper lid with a wet cloth after wringing it dry, do not use gasoline or other solution, and do not wash them with water or immerse the product into water or other liquid, so as to avoid damages to the product.

G) Cranberry Cake (Mala Cake) Making Tips:

Ingredients: 100g low-gluten flour, 80g milk, 2 eggs, 25g corn oil, 3g baking powder, 30g dried cranberries, proper amount of brown sugar, 1 packet of active yeast (about 5-8g)
 Practice steps:

- Prepare the ingredients you need.
- Apply corn oil or other cooked oil to the inner wall of the rice cooker inner pot. Set Cake function for preheat.
- Pour the milk and sugar into the whisk bowl. Beat in 2 eggs.
- Whisk well with the whisk or egg whisk.
- Sift the flour and baking powder, twice, into the egg batter and beat until a smooth, granules batter is formed.
- Slowly add the corn oil into the batter and mix well.
- Pour the batter into the inside of the rice cooker inner pot, sprinkle with the dried cranberries, and cover lid.
- After the end of the work, take out the pot, wait until not hot (or soak in cold water), take out from pot to consume.

H) Common Problem Analysis

NO.	FAULT PHENOMENON 故障现象	CAUSES 产生原因	TRUBLESHOOTING METHOD 排除方法
1.	INDICATOR DOES NOT LIGHT UP 指示灯不亮。	NOT CONNECTED TO THE POWER SOCKET 电源没接通 PCB IS DISCONNECTED 电路板接线断开 PCB IS DAMAGED 电路板损坏	CHECK THE SWITCH & SUPPLY LEAD, & PLUG IN SOCKET 检查开关及电源线 SEND TO SERVICE CENTER TO REPAIR 送指定维修部维修
2.	INDICATOR LIGHTS UP 指示灯亮。	MAIN THERMOSTAT FAILURE 1. MAIN THERMOSTAT FAILURE 2. HEATING ELEMENT DAMAGE 3. CIRCUIT BOARD CONNECTION IS DISCONNECTED 4. CIRCUIT BOARD DAMAGE 1. 温控故障 2. 发热盘元件损坏 3. 电路板接线断开 4. 电路板损坏	1. REPLACE A NEW POT GENTLY ROTATE THE INNER POT & MAKE IT GET RIGHT AGAIN 2. USE SAND PAPER TO CLEAN 3. SEND TO SERVICE CENTER TO REPAIR 1. 更换内胆 2. 轻转内胆，使内胆放置正常 3. 清除异物 4. 送指定维修部维修
3.	RICE IS UNDERCOOKED OR OVERCOOKED 煮饭食品不熟或煮饭时间异常	INNER POT DEFORMATION 1. INNER POT IS TILTED 2. FOREIGN OBJECTS BETWEEN THE INNER POT AND HEATER 3. PCB OR SENSOR DAMAGE 1. 内胆变形 2. 内胆与发热盘之间有异物 3. 电路板或传感器损坏	1. REPLACE A NEW POT GENTLY ROTATE THE INNER POT & MAKE IT GET RIGHT AGAIN 2. USE SAND PAPER TO CLEAN 3. SEND TO SERVICE CENTER TO REPAIR 1. 更换内胆 2. 轻转内胆，使内胆放置正常 3. 清除异物 4. 送指定维修部维修
4.	COOK ABNORMALLY OR CANNOT KEEP MARK AUTOMATICALLY 烹饪异常或不自动进入保温	PCB OR SENSOR DAMAGE 电路板或传感器损坏	SEND TO SERVICE CENTER TO REPAIR 送指定维修部维修
5.	OVERFLOW WHEN COOKING 煮饭时严重溢锅	PCB OR SENSOR DAMAGE 电路板或传感器损坏 SELECT A WRONG FUNCTION 功能选择错误	SEND TO SERVICE CENTER TO REPAIR 送指定维修部维修 RESELECT A RIGHT ONE 重新选择正确的功能
6.	COOK FOR A LONG TIME BUT IS STILL NOT BOILED 煮饭时间不沸腾	THE QUANTITY OF WATER AND RICE EXCEEDS THE RATING SCALE 米水比例超出额定刻度 PCB OR HEATER IS DAMAGED 电路板或发热盘损坏	COOK ACCORDING TO RATING SCALE 按照每个功能的额定刻度 SEND TO SERVICE CENTER TO REPAIR 送指定维修部维修
7.	KEY WITHOUT RESPONSE 按键无反应	SHORT INTERVAL BETWEEN POWER CUTS, THE SYSTEM HAS NOT RESET 断电间隔短，系统没复位 PARTS OF KEYS CANNOT BE APPLIED IN THE CURRENT STATE 按键部分按键不能用 THERE IS WATER ON HAND WHEN TOUCHING THE KEY 手上或按键键上有水	POWER ON AFTER POWERING ON FOR 3 MINUTES 断电3分钟后再通电 NORMAL PHENOMENON 正常现象 WIPE OFF WATER ON HANDS AND THE KEY 擦干手上及按键键上的水 SEND TO SERVICE CENTER TO REPAIR 送指定维修部维修
8.	THE DIGITAL TUBE DISPLAYS E1 数码管显示E1	THE BOTTOM SENSOR IS ON SHORT 底部传感器短路	SEND TO SERVICE CENTER TO REPAIR 送指定维修部维修
9.	THE DIGITAL TUBE DISPLAYS E2 数码管显示E2	THE BOTTOM SENSOR IS DISCONNECTED 底部传感器开路	SEND TO SERVICE CENTER TO REPAIR 送指定维修部维修
10.	THE DIGITAL TUBE DISPLAYS E3 数码管显示E3	THE TOP SENSOR IS ON SHORT 顶部传感器短路	SEND TO SERVICE CENTER TO REPAIR 送指定维修部维修
11.	THE DIGITAL TUBE DISPLAYS E4 数码管显示E4	THE TOP SENSOR IS DISCONNECTED 顶部传感器开路	SEND TO SERVICE CENTER TO REPAIR 送指定维修部维修
12.	THE DIGITAL TUBE DISPLAYS E5 数码管显示E5	THE BOTTOM / TOP SENSOR OVER-HEAT PROTECTION 底部或顶部传感器超温	UNPLUG & PLUG IN AGAINOR WAITING FOR COOLING DOWN, AND ENTER INTO STANDBY MODE 拔插电源底座或等冷却后自动进入待机

Note: if the above phenomenon cannot be eliminated after analysis, please contact the safe center or dealers, nonprofessionals are strictly prohibited to disassemble the cooker.
 备注:如以上现象经分析后仍无法排除故障,请与本公司维修部或经销商联系,严禁非专业人员进行拆卸。

主要特点:

- 1、外形简洁、精致美观。
- 2、顶盖TMD操作面板,操作简单快捷。
- 3、可拆卸内盖清洗器,使用更方便。
- 4、上盖底部保温,使用更人性化。
- 5、72小时预约,使用更长时间。
- 6、24小时预约,使用更方便。
- 7、多功能选择,满足不同烹饪需求。

安全事项:

为了避免发生危险,使用本产品前应仔细阅读使用说明书,并严格按照照说明书指示的内容,正确使用本产品。您安全、正确地使用本产品,以便本产品能让您安心使用。

- 1、本产品必须放在平整、稳固的桌面上使用。
- 2、严禁将电源线、插头浸入水中或其他液体中,以防止出现触电。
- 3、切勿将电源线、插头、电源线或夹住电源线。
- 4、切勿将电源线、插头、电源线或夹住电源线。
- 5、切勿将电源线、插头、电源线或夹住电源线。
- 6、切勿将电源线、插头、电源线或夹住电源线。
- 7、切勿将电源线、插头、电源线或夹住电源线。
- 8、切勿将电源线、插头、电源线或夹住电源线。
- 9、切勿将电源线、插头、电源线或夹住电源线。
- 10、切勿将电源线、插头、电源线或夹住电源线。
- 11、切勿将电源线、插头、电源线或夹住电源线。
- 12、切勿将电源线、插头、电源线或夹住电源线。
- 13、切勿将电源线、插头、电源线或夹住电源线。
- 14、切勿将电源线、插头、电源线或夹住电源线。
- 15、切勿将电源线、插头、电源线或夹住电源线。
- 16、切勿将电源线、插头、电源线或夹住电源线。
- 17、切勿将电源线、插头、电源线或夹住电源线。
- 18、切勿将电源线、插头、电源线或夹住电源线。
- 19、切勿将电源线、插头、电源线或夹住电源线。
- 20、切勿将电源线、插头、电源线或夹住电源线。
- 21、切勿将电源线、插头、电源线或夹住电源线。
- 22、切勿将电源线、插头、电源线或夹住电源线。

使用说明:

- 1、“菜单”功能键:按下,连续按“菜单”键选择功能,5秒钟自动进入对应的烹饪功能工作。注意:选择“菜单”键时,用户需在“菜单”键闪烁)键,唤醒显示屏显示,进入待机状态(只有“菜单”键闪烁)键,唤醒显示屏显示,进入待机状态。
- 2、“待机”功能键:按下,连续按“菜单”键选择功能,5秒钟自动进入对应的烹饪功能工作。注意:选择“菜单”键时,用户需在“菜单”键闪烁)键,唤醒显示屏显示,进入待机状态。
- 3、“烹饪”功能键:按下,连续按“菜单”键选择功能,5秒钟自动进入对应的烹饪功能工作。注意:选择“菜单”键时,用户需在“菜单”键闪烁)键,唤醒显示屏显示,进入待机状态。

“预约”键:按下,按“预约”键进入预约设置,默认预约时间为02:00小时,按“时”键或在待机状态下,按“预约”键可设定预约时间。按“分”键或“功能”键进入预约时间,按“分”键或“时”键或“功能”键可修改预约时间。

注意:1) 本机预约总时间包括“功能”工作时间。2) 如果定时时间超过预约时间,就会直接进入定时烹饪。

“时”键:在预约和定时设置状态下,每按一下“时”键,设定时间以1小时递增,长按连续递增。

“分”键:在预约和定时设置状态下,每按一下“分”键,设定时间递增,长按连续递增。

“取消”键:在预约过程中,未进入程序前,点按“取消”键即可返回待机状态。2) 在工作状态下,需长按1秒钟才可返回待机状态。

二、显示屏:本机通电后,所有功能灯长亮,数码屏显示“----”,进入待机状态。如长时间未操作,自动进入“睡眠”状态,此时只有“菜单”键闪烁。

三、睡眠状态:在睡眠状态下,轻触“菜单”键进入待机状态。“菜单”功能键后5秒钟,自动进入工作状态;待机状态下,按“降糖饭”键或“菜单”功能键后5秒钟,自动进入工作状态,对应的功能灯长亮,显示如《各功能介绍表》。

首次使用注意事项:使用前请先仔细阅读本机使用说明书,并检查附件是否齐全。

使用前的清洗:使用前请先清洗本机的附件及各部件;清洗完后抹干。

取出内胆:取出内胆时,请小心取出内胆,清洗完后抹干。

取出内胆盖:取出内胆盖时,请小心取出内胆盖,清洗完后抹干。

重新装入内胆:重新装入内胆时,请小心装入内胆,清洗完后抹干。

重新装入内胆盖:重新装入内胆盖时,请小心装入内胆盖,清洗完后抹干。

注意:必须确保内胆盖安装到位,否则会严重影响烹煮效果和本机使用寿命。

若发热盘上有米粒或其他杂物附着,可用干布擦拭。

外壳和上盖可用拧干的湿布擦拭,请勿使用汽油或其他腐蚀性液体擦拭,请勿将本机浸入水或其他液体中,以免损坏本机。

四、各功能介绍表(如英文版内表格)

五、各功能水量:各种煮饭功能的米水比例可参考内胆刻度,具体根据米类或人口感加水。各种煮粥或煮汤功能加水不可超过内胆最高刻度,具体根据米类、食材或个人口感加水。

六、降糖饭米水比例:用降糖器淘米后,加水到降糖器内与米同高或多一点,具体根据米类或个人口感加水。

七、温馨提示:蒸功能使用时,加水量以水沸腾时,食材不被浸泡为准。

八、降糖饭米水比例:用降糖器淘米后,加水到降糖器内与米同高或多一点,具体根据米类或个人口感加水。

九、温馨提示:蒸功能使用时,加水量以水沸腾时,食材不被浸泡为准。

十、降糖饭米水比例:用降糖器淘米后,加水到降糖器内与米同高或多一点,具体根据米类或个人口感加水。

- 1. 各功能的工作时间因食材、电压、气压等因素的不同而稍有变化。
- 2. 为防止米饭结块，请在进入保温状态后30分钟内将米饭翻松。
- 3. 预约时间不宜过长，用户需根据食材烹煮时间进行调整，以免食材变质或产生异味。
- 4. 蛋糕功能：和好酵母后的面放入内胆，选择蛋糕功能5秒后先进入30分钟的40°C低温发酵，然后进入45分钟的高温加热。

六、清洁步骤：

1. 清洁电饭煲前，先断电，待冷却后再进行。
2. 电饭煲冷却后打开煲盖，取下内胆盖用清水清洗干净再用干布抹干（注意：请勿用力拉扯密封圈，如拉扯变形会影响密封与微压效果）。
3. 取出内胆盖后，用清水清洗，清洗后用干布抹干再放回煲体内。
4. 如果内胆盖或其他杂物粘附在内胆侧，可用干布擦去。
5. 外壳及上盖用打干的湿布轻抹即可，切勿用水或其它液体冲洗或浸泡，以免损坏本机。

七、蔓越莓发糕(马拉糕)制作贴士：

用料：低筋面粉100克、牛奶80克、鸡蛋2个、玉米油25克、泡打粉3g、蔓越莓干30g、红糖适量、活性酵母一小包（约5-8克）

做法步骤

- 准备好所需的其他食材。
- 涂抹玉米油或其他油于电饭煲内胆内壁，按CAKE功能预热。
- 牛奶、白糖倒入打蛋盆，打入2个鸡蛋，用打蛋器或是蛋抽搅拌均匀。
- 面粉和泡打粉过筛，分两次过筛至蛋糊中，搅拌均匀。
- 将玉米油慢慢加入面糊中拌匀。
- 倒入拌好的面糊到电饭煲内胆。撒上蔓越莓干，盖上盖子。
- 工作结束后取出内胆，放至不烫手（或内胆浸泡冷水）就可以取出吃了，酸甜可口的很好吃。

SERVICE & IMPORTANT NOTICE

to be damaged, repaired, replaced, or returned to the manufacturer. Do not use this product for any purpose other than that intended by the manufacturer. If you are having any trouble using this product, please contact your local authorized dealer or service agent. WARRANTY: The appliance is warranted against defects in materials and workmanship. The warranty does not cover damages caused by misuse, accidents, or other factors beyond the control of the manufacturer. The manufacturer is not responsible for consequential damage or loss of any kind resulting from the use of the appliance. It is the user's responsibility to use the appliance safely and to read the instructions carefully. The manufacturer is not responsible for any damage or loss caused by fire, theft, or other causes beyond the control of the manufacturer. The manufacturer is not responsible for any damage or loss caused by the use of the appliance for purposes other than those intended by the manufacturer. The manufacturer is not responsible for any damage or loss caused by the use of the appliance for any purpose other than that intended by the manufacturer.