

版本: CoreDRAW X4
日期: 2015.1.8
编号: DGD22-22EWG(改1)-0-MG-04A
材质: 100g哑状纸
尺寸: 142mmX210mm

2. Preservation Methods

 
Please clean and pack the product into the packing box when it is out of use for a long time. Place it in a dry and ventilated place to prevent it from damp and harmful influence on its normal use.

3. Failure and trouble shooting

It is out of use for a long time. Place it in a dry and ventilated place to prevent it from damp and harmful influence on its normal use.

| Problem | Failure cause | Troubleshooting methods |
|--|---|--|
| Noting when it is powered on and heated, the indicator is not lit up or the power is off | There is no water in the container, which results in dry-heat power-off protection. | Check if the power is plugged in properly, and add water to the power again. |
| Noting when it is powered on and heated, the indicator is not lit up or the power is off | There is no water in the container, which results in dry-heat power-off protection. | Check if the power is plugged in properly, and add water to the power again. |
| Power failure | The plug of the power line is not properly inserted. | Check whether the power line is properly plugged in. |
| Power failure | Product is out of date. | Send to maintenance center for troubleshooting. |
| The power is not lit up when the heating starts. | Product is out of date. | Send to maintenance center for troubleshooting. |
| "E1" or "E2" are displayed. | Product is out of date. | Send to maintenance center for troubleshooting. |

- order to ensure the normal stewing and prevent the product from failure or danger. (This water level mark is the one after putting into the inner container)
- If you need to open the upper lid at the time of stewing, please press the "Keep warm/Cancel" key to stop operation. Do not uncover the lid until the water stops boiling to prevent the boiling water from splashing out of the stewing cup container, causing scalding injury.
 - When the product enters into the state of 12 hours "Keep warm", the digital screen displays "0.0" → "0.5" → "1.0" → "1.5" → "2.0" → "2.5" → "3.0" → "3.5" → "4.0" → "4.5" → "5.0" → "5.5" → "6.0" → "6.5" → "7.0" → "7.5" → "8.0" → "8.5" → "9.0" → "9.5" → "10.0" → "10.5" → "11.0" → "11.5" → "12.0". Press the "Keep warm/Cancel" key again to stop the "Keep warm".
- Notes**
- AC power voltage should be in accordance with the voltage indicated on the rating label.
 - For your safety, use the power source with ground protection.
 - Do not place the product near or at the surfaces of the items that are flammable and explosive; do not put the product at the places that are wet or near other heat sources to avoid failures and danger.
 - When using this product, it should be placed at a solid platform out of children's reach.
 - When the product is at work, it will produce steam, do not let the face or hands near the steam vent to avoid scalding; the items that could be harmed by steam should not be put over the product; do not use the rag or similar items to cover the steam vents so as to avoid accidents and product failure.
 - When the product is in use, its upper lid and the home have very high temperature, so do not touch them to avoid burns.
 - Do not directly put the ceramic pot on the fire. And do not add cold water when the pot is hot for avoiding crack.
 - If there is no water in this product when it is in operation, please unplug power cable, it can not be powered on again

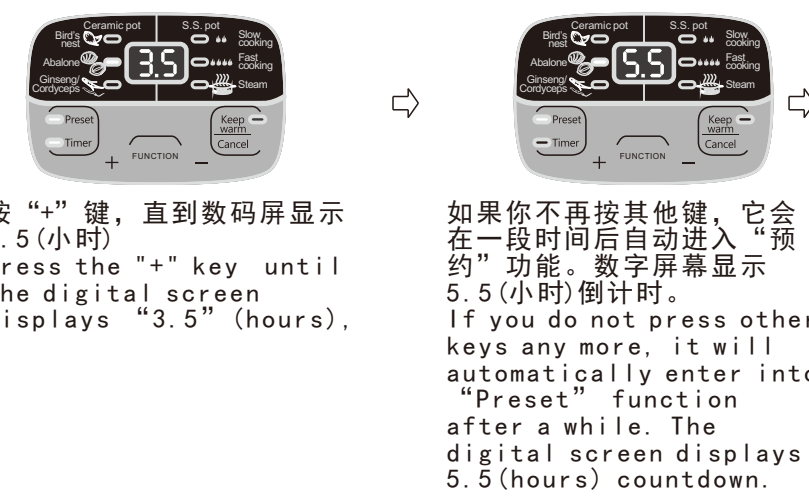

按 "+" 键，直到数码屏显示 3.5 (小时)。 Press the "+" key until the digital screen displays "3.5" (hours).

如果不再按其他键，它会在 5.5 (小时) 后自动进入 "保持" 功能。数字屏显示 5.5 (小时) 倒计时。 If you do not press other keys any more, it will automatically enter into "Preset" function after 5.5 hours. The digital screen displays 5.5 (hours) countdown.

“保持”程序结束后，“保持”指示灯熄灭，数字屏显示 "0.0" (小时)。如果此时按 "保持" 功能，数字屏显示 "3.0" (小时) 倒计时，自动进入 "保持" 功能。保持 指示灯一直亮直到 12 小时倒计时结束。 When the program comes to end, "Abalone" indicator will turn off, the digital screen will display "0.0" (hours) and "Keep warm" indicator will be on, represents entering into the 12-hours "Keep warm" function. "Keep warm" indicator will stay on until the 12-hour "Keep warm" is over.

 
程序结束后，“保持”指示灯熄灭，数字屏显示 "0.0" (小时)。如果此时按 "保持" 功能，数字屏显示 "3.0" (小时) 倒计时，自动进入 "保持" 功能。保持 指示灯一直亮直到 12 小时倒计时结束。 When the program comes to end, "Abalone" indicator will turn off, the digital screen will display "0.0" (hours) and "Keep warm" indicator will be on, represents entering into the 12-hours "Keep warm" function. "Keep warm" indicator will stay on until the 12-hour "Keep warm" is over.

Toyomi®

S.S. ELECTRIC STEW COOKER & SOUP COOKER & STEAMER 3 IN 1

MODEL: SC 1822
220-240V-50Hz, 400-476W CAPACITY: 1.8L


INSTRUCTION MANUAL

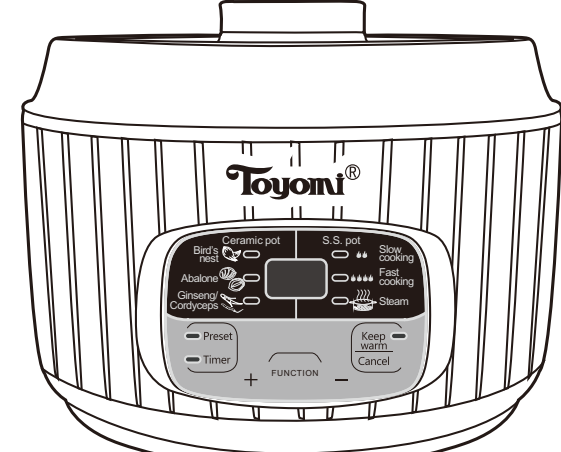

SERVICE & IMPORTANT NOTICE

● If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
● **WARNING:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

 DESCRIPTION OF OPERATION PANEL AND KEYS:

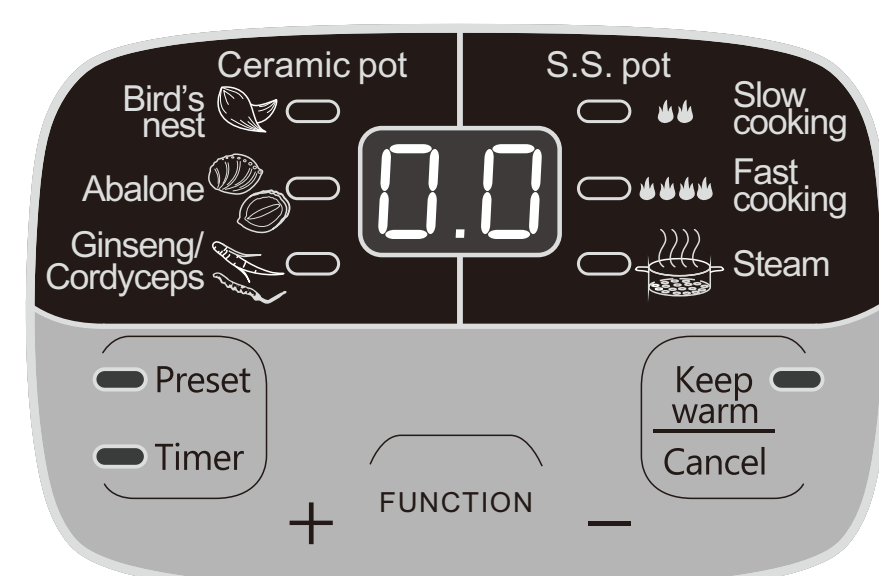

- "Preset" key: On the standby mode, press the "Preset/Timer" key once, the presetting indicator and the screen displays "2.0" will flash alternately. At this moment, you can press the "+" key to adjust the presetting time. Note: The presetting function means that the cooker will begin cooking after the countdown of presetting time is finished.
- "+" key: After pressing the "Preset/Timer" key, you can press the "+" key to adjust the presetting time or cooking time. Each press will increase/minus the time by 0.5 hours circularly. If long press the "+" key, it will increase/minus the time by 0.5 hours rapidly. Note: The maximum adjustable time for presetting is 24 hours.
- "Keep warm/Cancel" key: On the standby mode, press the "Keep warm/Cancel" key once, and it enters into the Keep warm function state; Press the "Keep warm/Cancel" key to

- Put the food materials into the inner pot and add appropriate amount of water into it (the water level shall be equal to or slightly higher than the food, and the food materials and water added shall not exceed the 80% of the inner pot volume);
- Put on the inner pot lid.
- Place the inner pot into the container;
- Put steam layer into the container;
- Add water into the container to the maximum water line;
- Put big inner pot or small inner pots filled with prepared food materials onto steam layer;
- Pour clean water into the water slot at the edge of the inner pot;
- Gently turn the inner pot lid to make the water inside the water slot distributed more evenly.
- Put on the upper lid.

Tips: When the stewing is finished, take out the inner pot and open the upper lid at this moment, it is recommended then you dry the water in the water slot with cotton cloth, in order to avoid the water in the water slot drop into the soup when you pour the soup out of the inner pot.

 
- Switch the power on: First connect the attached power cord to the product, and then connect the other end to a power socket. The digital screen on the control panel shows "0.0" on, and the product is in the standby mode.

- Selecting functions and setting time:
 - Cook with default time (taking "Ginseng/Cordyceps" as examples)
 - 默认时间烹饪 (以 "人参/虫草" 为例)

PRODUCT FEATURES

- Adopting high-quality all-ceramic inner stew pot to make the foods stewed more nutritious and healthy.
- Stewing food out of water is effective for preventing it from sticking and burning and can effectively preserve the nutritional ingredients of the food.
- Using the combination of multiple inner pots can stew various foods at the same time, without the need of stewing them separately.
- Food-grade 304# stainless steel pot body can also be used to cook food directly, which makes it achieve the truly "one pot with multiple functions".
- Single-key and single-control operating pattern makes it simple and practical, being suitable for the old people to operate.
- Specially-designed "Preset/Timer" function makes the time setting under your free control.
- Equipped with multiple safety protection, device can ensure the product safety when in use.

PARTS

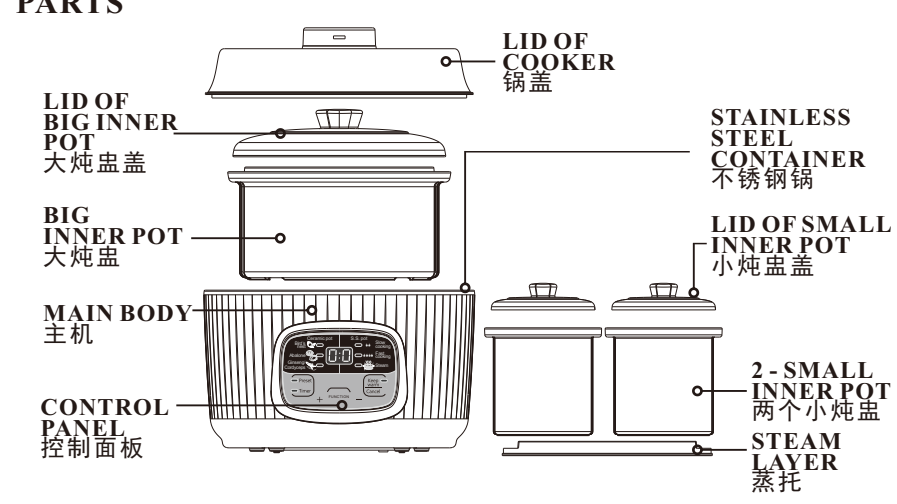

- stop cooking to return to the standby mode during any cooking state, and the screen displays "0.0".
- Function Keys ("Bird's Nest", "Ginseng/Cordyceps", "Fast Cooking", "Slow Cooking", "Abalone", "Steam"): Press the "Function" keys to select function, the indicators of relative functions and default cooking time which shows on the digital screen flash alternately. If there is no any other operation within 6 seconds, it will enter into the default cooking state of the function.
- "Timer" key: Within 6 seconds after selecting function of cooking, press the "Preset/Timer" key once, the timer indicator and the screen displays "default cooking time" will flash alternately. At this moment, you can press the "+" key to adjust the timing of cooking. Note: "Keep warm" function can not be used with "Timer" function.

Preset & Timer Setting Table of each cooking function:


| Function | Bird's Nest | Abalone | Fast cooking | Slow cooking | Ginseng/Cordyceps | Steam | Keep warm |
|----------|-------------|---------|--------------|--------------|-------------------|-------|-----------|
| Default | 1.0 | 3.0 | 1.5 | 3.0 | 2.5 | 0.8 | 12 |
| Min./Max | 12 | 12 | 3.0 | 3.5 | 12 | 12 | 12 |
| Min./Max | 0.5 | 0.5 | 0.5 | 0.5 | 0.5 | 0.5 | 0.5 |

0.5-24.0 (MIN.-MAX. COOKING)

OPERATIONAL PROCEDURES

Working principle of water-sealed stewing: it is a cooking method which takes water as a medium to evenly and gently heat the food inside the inner pot (or the inner container). Therefore, you must add water into the stainless steel container of the appliance for normal use.

 - Preparing the food materials and utensils
 - Clean up the inner pot and its lid;

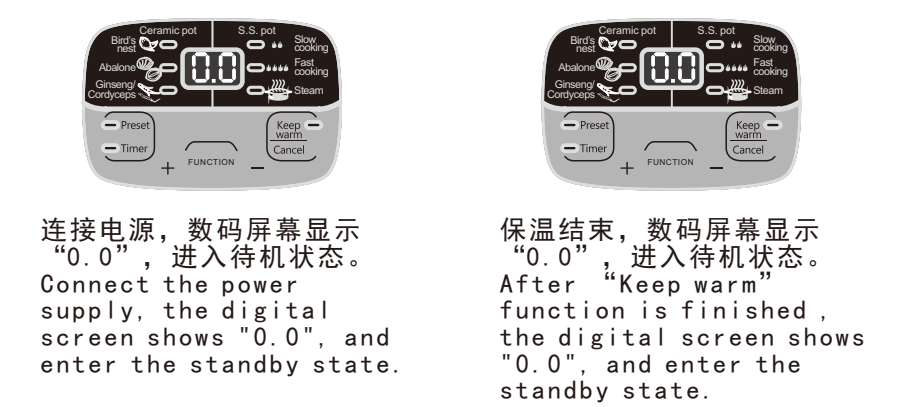

按 "+" 键，直到数码屏显示 3.5 (小时)。 Press the "+" key until the digital screen displays "3.5" (hours).

如果不再按其他键，它会在 5.5 (小时) 后自动进入 "保持" 功能。数字屏显示 5.5 (小时) 倒计时。 If you do not press other keys any more, it will automatically enter into "Preset" function after 5.5 hours. The digital screen displays 5.5 (hours) countdown.

“保持”程序结束后，“保持”指示灯熄灭，数字屏显示 "0.0" (小时)。如果此时按 "保持" 功能，数字屏显示 "3.0" (小时) 倒计时，自动进入 "保持" 功能。保持 指示灯一直亮直到 12 小时倒计时结束。 When the program comes to end, "Abalone" indicator will turn off, the digital screen will display "0.0" (hours) and "Keep warm" indicator will be on, represents entering into the 12-hours "Keep warm" function. "Keep warm" indicator will stay on until the 12-hour "Keep warm" is over.

- before it cools down, do not touch the heating base to avoid burn.
- The amount of water added into the stainless steel container is at the maximum water level after putting into the inner pot or the small inner pot, and the water added cannot exceed the maximum water line, otherwise, there may be breakdown or dangers.
- Do not switch on the power for dry burning when no water is added into the stainless steel container is at the maximum water level after putting into container. Unplug the power cord when it is out of use.
- When plug in the power line you must fully insert it in to ensure the good contact.
- The power plug and socket should be kept dry and it is prohibited to insert and pull the power plug with wet hands to prevent from electric shock.
- When this product is power on, do not move it
- The ceramic parts are the fragile items, so prevent them from colliding with hard objects and falling down from a height, causing breaking damage

REPAIR AND MAINTENANCE

 
- 1. Cleaning methods:**
- Before it is cleaned, the power line should be unplugged after being cooled down.
 - The ceramic parts can be washed with detergent and sponge, and do not use a hard steel wire to clean it to avoid damage to the surface.
 - Use a wet towel to wipe the outside surface of the product body, but do not use corrosive liquids for cleaning.
 - The method of removing the incrustation off the stainless steel container: Put 1 to 2 tablespoons of white vinegar or 3 to 5 slices of lemon into the container, and then add water to cover the heating plate surface. Turn on the power first to heat the water until the water has boiled for about 2 minutes, and then turn off the power until the water is cooled to become warm water. Finally, clean it with scouring pad and the incrustation can be removed.

Note: 设备工作一段时间后如果您认为已经烹饪到适当的程度，只需按“保持/取消”键在这个时刻这个关键功能只有取消立即停止操作并返回待机模式。After the appliance works for a certain period of time, if you think that the food is cooked to the appropriate degree, you simply press the "Keep warm/Cancel" key (at this moment, this key only has the function of cancel) to stop the operations immediately and return to the standby mode.

NOTE: After the product is used, unplug the power cord and turn off the power.

- Tips:**
- Set appropriate reserved time according to the characteristics of food materials and life experience to fully immerse the food materials in water. The time set for those easy-deteriorating food shall not be too long to prevent deterioration.
 - When stewing or steaming the food not easy to cook, or at low temperatures, please properly cook with more time to make sure that the food is fully cooked based on default timing. When steaming chunks of sweet potato, potato, etc, please cut them into small pieces, in order to ensure the food is fully cooked.
 - Set the working time under the working state according to your personal preference to make food taste better.
 - In order to ensure the effect of cooking, the default time or the self-set time of each function (except for the functions of "Keep warm") enters into the working state of the function and immediately starts to count down. For example: the default 1:00 hours of the stewing time of the "BIRD NEST" function refers to that the entire stewing process is only 1:00 hours, and then it automatically turns into the "Keep warm" function.
 - Please add water into the container in terms of the maximum water level mark on the product, add water in

- Stew for a certain timing with the preset time (for example, preset after 5.5 hours, stewing with "Abalone" function for 3.5 hours)
- 用预设时间炖一段时间(以预设5.5小时后进入“鲍鱼”功能炖3.5小时为例)

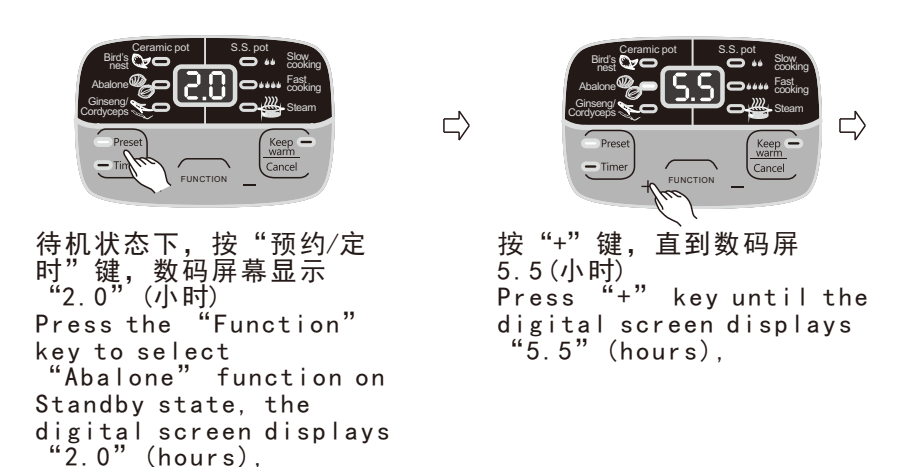

待机状态下，按“保持/定时”键，数码屏显示 "0.0" (小时)。 Press the "Function" key to select "Abalone" function on standby state, the digital screen displays "0.0" (hours).

按 "+" 键，直到数码屏显示 3.5 (小时)。 Press the "+" key until the digital screen displays "3.5" (hours).

如果不再按其他键，它会在 5.5 (小时) 后自动进入 "保持" 功能。数字屏显示 5.5 (小时) 倒计时。 If you do not press other keys any more, it will automatically enter into "Preset" function after 5.5 hours. The digital screen displays 5.5 (hours) countdown.

“保持”程序结束后，“保持”指示灯熄灭，数字屏显示 "0.0" (小时)。如果此时按 "保持" 功能，数字屏显示 "3.0" (小时) 倒计时，自动进入 "保持" 功能。保持 指示灯一直亮直到 12 小时倒计时结束。 When the program comes to end, "Abalone" indicator will turn off, the digital screen will display "0.0" (hours) and "Keep warm" indicator will be on, represents entering into the 12-hours "Keep warm" function. "Keep warm" indicator will stay on until the 12-hour "Keep warm" is over.