

SERVICE & IMPORTANT NOTICE

- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarity qualified person in order to avoid a hazard.

- **WARNING:**

1. The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience & knowledge, unless they have been given supervision or instruction.
2. Children being supervised not to play with the appliance.
3. The kettle is only to be used with the stand provided.

Toyomi®

CORDLESS STAINLESS STEEL KETTLE


MODEL: WK 1700

220-240V~50/60Hz

POWER: 1850-2200W

CAPACITY: 1.7L


INSTRUCTION MANUAL

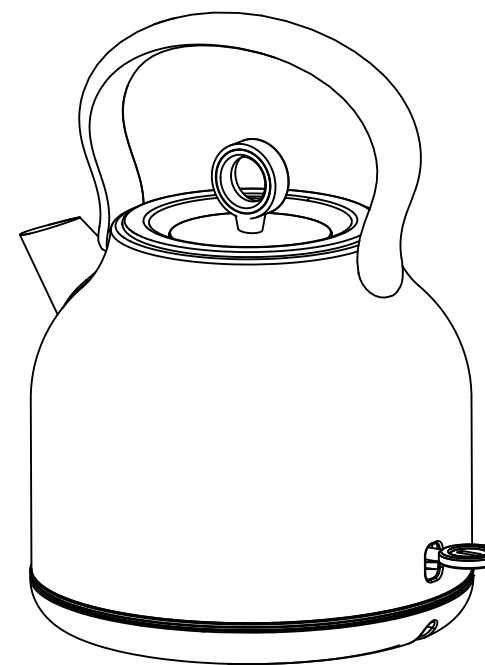

IMPORTED BY NATIONAL ELECTRICAL TRADERS

FOR HOUSEHOLD USE ONLY.
PLEASE READ CAREFULLY AND KEEP THE INSTRUCTION WELL.

PART NAME

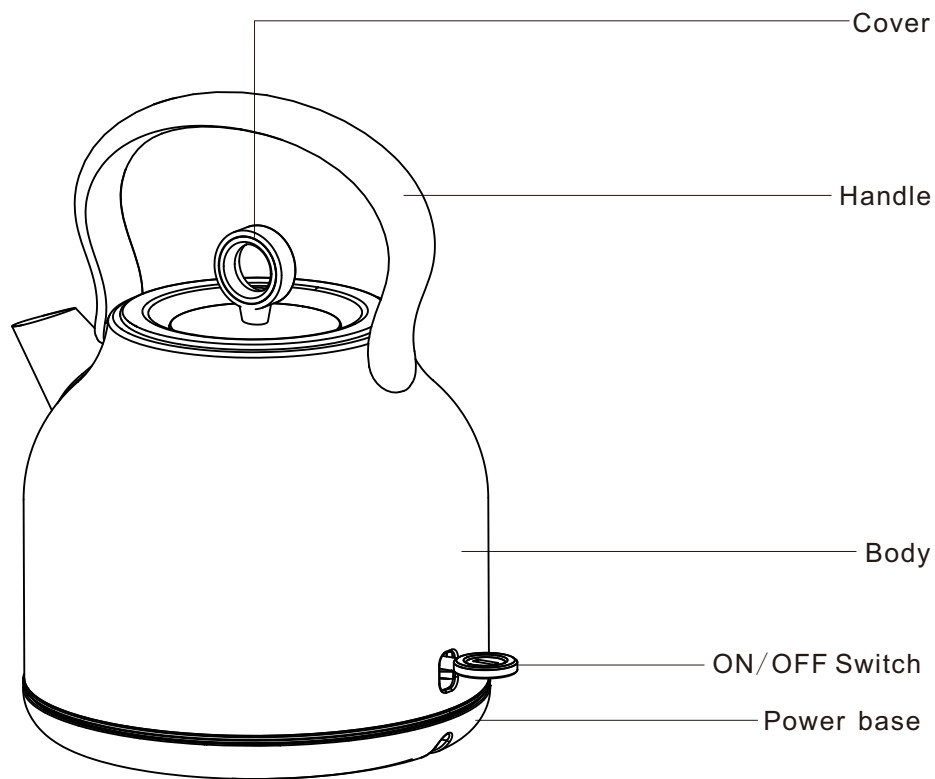

BEFORE USING FOR THE FIRST TIMER

1. Important: please read the instructions carefully before use.
2. Remove all packing material.
3. Completely unroll the cable.
4. Dispose away the first lot of water after boiling.

BOILING WATER

1. Open the lid, fill the jug kettle, this can be done with the lid or via the large spout.
2. Completely unroll the cable.
3. Put the main body on cordless base.
4. Plug in the mains plug.

Warning: Appliance becomes hot during use.

5. Switch on the jug kettle, the indicator lamp will be on.
6. After the water is being boiled, the appliance switch off automatically.
7. Water can be poured out with the lid on.
8. The main body can easily be removed from its base.
9. Heating can be stopped at any time by operating the switch.

CAUTION: Do not fill the kettle with water above the MAX water level mark. If you do, hot water will overflow. Do not fill the kettle with water below the MIN water level mark. If you do, the kettle will not operate normally.

USING YOUR KETTLE

1. The appliance is only suitable for heating and boiling water.
2. Do not use any other liquids except pure water. The heating element must be covered with water. Otherwise there is danger of dry heat.
3. Should the boil-dry protection operate, allow the jug kettle to cool down. The appliance will be ready for use automatically.

IMPORTANT SAFEGUARDS

1. Using electrical equipment can be dangerous. Please read the instructions carefully before use.
2. The appliance is only to be used for the purposes described in these instructions.
3. Children do not realize the dangers associated with electrical appliances. Never allow children to work with electrical equipment without supervision.
4. In the case of obvious damage to the appliance or the cable, consult an electrician.
5. Repairs to electrical equipment may only be carried out by properly trained person. Repairs, which are improperly carried out, can result in considerable danger for user.
6. Use the appliance only on the voltage specified on the rating label.
7. The appliance gets hot during use. Touch only the handles or control knob.
8. Use only on a dry, anti-slip, level surface.
9. Do not fill to above the mark MAX, because there is danger that the boiling water may overflow (danger of scalding!).
10. Never switch on the appliance when its lid is open.
11. Only suitable for pure water never put other liquids in the kettle jug.
12. Do not use outdoor.
13. Descale the kettle jug regularly by using few pieces of lemon by boiling.
14. After finish boiling water, please switch off the power supply, to avoid further damage to the element.

CLEANING

1. Before cleaning unplug the appliance. Allow it to cool down.
2. Wipe it inside and out with a soft cloth.
3. Descale your jug kettle regularly:
 - Cover the heating elements with vinegar and water (2/3 water, 1/3 vinegar). or change vinegar to lemon.
 - Boil up the solution two or three times, take care that do not overflow.
 - Rinse out the appliance and wipe with a soft cloth.