

220-240V~50/60Hz

POWER: 900-1100W



and table, or on surface with high temperature. specified. IMD operation panel at the top for clear operation.

5. Do not damage, excessively bend, stretch or twist

13. After putting the inner pot into the pot body, please knowledge.

. Sleek and Modern appearance. Removable inner lid, which is convenient to clean. Sensor at the bottom, which is safer for use. cord or clamp the power cord. . Heat preservation for 24 hours.

6. 24 hours reservation function and cooking time with a special cord bought from the manufacturer or 15. Stop using the cooker when the inner pot is maintenance department. . 9 menu choices to meet your different needs.

the instructions carefully before using this product and _____ disassemble by yourself to avoid dangers. This Security Considerations records important | lid or let your hands or face stay close to the steam | adhesion, wash the inner pot again, otherwise it may content, which enables you to safely and correctly use vent, do not move or shake rice cooker as well, so as cause overheating of the pot body or the food will be the product, and prevent personal injury or property not to affect the cooking effect or cause burns. amage to you or others. After reading, safely keep this 9. Do not use the cooker to cook food that may 17. When moving or repairing the rice cooker, unplug struction book for all users to look up at any time. obstruct vent, such as lamellar food (seaweed, the power cord first and wait for the product to cool

setting, cook as you wish.

Security Considerations

2. Please confirm before use, make sure the cause deformation or discoloring of the pot and the lid. 19. Please clean the inner lid, sealing rubber ring and grounding protection within the power socket must be 📗 11. During or after using the cooker, please do not 📗 steam valve regularly to avoid rice odour. effective to prevent accidents. 3. It is strictly prohibited to immerse the power cord, | temperature scald. lug and rice cooker in water or other liquid, in order to 12. The product is only suitable for family use, do not revent the risk of electric shock.

Do not hang the power cord at the edge of the cupboard use this rice cooker for other purposes that are not (including children) with reduced physically, sensory or

the power cord, do not put heavy objects on the power gently rotate the inner pot around to ensure it is in 22. Do not immerse the product in any liquid. consistent contact with the pan sensor. 6. If the power cord is damaged, you must replace it 14. Do not heat the inner pot on the fire.

deformed , you should contact the after-sales 7. If the product requires maintenance in the using | maintenance personnel of the company to buy a new process, please contact the service centre of the inner pot. company, or go to the company designated | 16. Before putting the inner pot into the pot body,

not allow the product to be used or played by persons

2、顶部IMD操作面板,操作清晰明了。

、九大菜单选择,满足你不同需求。

6、24小时预约功能和烹饪时间设置,使烹饪随心所欲。

4、切勿将电源线悬挂在橱柜、桌子的边缘或高温表面。

3、可拆内盖,清洗更方便。

②2、触电护必须有效,以防出现意外。

Warning: To avoid damages resulted from misuse, read maintenance station directly for maintenance, do not please make sure that there is no adhesion of rice grains or vegetable dregs at the bottom of the inner pot 8. During the working process, please do not open the or on the surface of the coil heater. If there is any

This product should be placed on a smooth and (maize), to avoid accident or damage to the rice cooker. 18. If there is no heat preservation after use, remove 10. Do not put a wet towel on the lid, otherwise it will the power cord in time (do not pull). touch the inner pot by hand directly, so as to avoid high 20. Use this product with extra care if children are present. Do not allow children to use it alone or keep it within the reach of children. (Hour) (Preset) (Min.) 21. Store the product out of the reach of children. Do

mentally capabilities or lack of relevant experience and I. Operation screen 1. " HOUR" Kev

In the state of "Preset" or "Timing", the preset or timing "Function" Key, you can select functions in the screen will show "----". will increase by 1 hour after every click on the "HOUR" key. Long press the "HOUR" key to quickly cycle within | following order: "WHITE R." →"BROWN R."→ "I GRAIN"→ "CONGEE" → "BB CONG." → "SOUP" 02. Preset State

In the state of "Preset" or "Timing", the preset or timing will increase by 10 minutes after every click on the 5. "Canc" Key appointment time will be quickly cycled to present "10" Key, the product will cancel the current state and return \rightarrow "20" \rightarrow "30" \rightarrow "40" \rightarrow "50" \rightarrow "10" \rightarrow minutes.

Preset time=time to begin heating+heating time

6. "Low Carb r." Key preset status, the "Preset" Key will be in flashing r." Key, the product will directly enter into the Low carbo status, time will display "00:00", press the "HOUR" and rice cooking status. "MIN." to adjust the appointment time. Without other pperations, the cooker will automatically return to the

In standby mode or preset state, press the "Inst Heat" After select preset time, press the "Menu" Key or Key, the product will directly enter into the fast cooking "Instant Heat"key or "Low carb. r." key to book required status.

In standby mode, press the "Menu" key to enter After the product is powered on, lights of all functions the lights of the rest of the functions will be off, the function selection state, continuously press the and operation indicators will be constantly on, the time digital tube will display the current remaining cooking time, the ":" in the digital screen will be flashing.

→ "STEAM" - "KEEP WARM"→ "WHITE R." → "BROWN After pressing "Preset" key, entering the presetting The instruction light of the "Canc" Key and the current

state "Preset", "HOUR" and "MIN." will flash, the digital function will be constantly on, the digital tube will tube will display "02:00". Except "Keep warm" and "Inst. display the remaining cooking time, the ":" in the digital heat", all the other cooking function can be preseted. tube will be flashing. 03. Menu Selection State After pressing "Menu" key, the corresponding indicator The indicator light of the "Cancel" Key will be

II. Introduction of Product Working Statuses

01. Standby State

"Hour" or "Minute"

light of the function will start to flash (the order of constantly on, the digital screen will display the function selection: "WHITE R." \rightarrow "BROWN R." \rightarrow "M- duration of current keep warm: $00:00 \rightarrow 00:01 \rightarrow 00:02$ In standby mode, press the "Preset" Key to enter the In standby mode or preset state, press the "Low Carb.

GRAIN"→ "CONGEE" → "BB CONG." → "SOUP"

→ → 72:00 → standby, the ":" in the digital tube will → "STEAM" - "KEEP WARM" → "WHITE R." → "BROWN be flashing. $R." \rightarrow \dots$ The digital screen displays the corresponding working time. After 6 seconds without any other action, Notes for First Use it will enter the corresponding working state. The 1. Please read the instruction carefully before use.

> indicator lights of corresponding function and "Canc" 2. For the first use, please take out all the packaging will be constantly on, while other lights will be off. items in the product and check whether the accessories are complete. 3. Remove the packaging bag of the rice cooker, open Except "Rice cooking" function and "Instant heat" the lid of the cooker and take out all the accessories. function, the timing of all the other function can be adjusted just after the function is selected by pressing

If there is no more operation, the light indicator of

"Canc" Keys and current function will be constantly on,

1. The cooking time on the chart above will be slightly different 1. The rice water ratio of rice cooking function can refer to the wheat bran, mung bean, red bean, sweet potato, peanut, etc. the heat preservation state. 2. When using the rice cooker, do not exceed the maximum water level of the corresponding menu function, to prevent boiling over. . The appointment time should not be too long, so as not to cause

NO. | Function | Default working | Adjustment Range | Keepwarm | Preset

Time(Hour: Min.) | oftrming | Time | | Imme(Hour: Min.)

ood spoilage and produce peculiar smell, customers should adjust

the appointment time according to the temperature and ingredients.

4. In the appointment state, the appointment time includes

out the lid down, and then press down the lid till hearing the "click" exceed the "1" scale marked in "BB Cong." scale line. that will be charged at work. sound, which means the lid is well covered. 3. Plug in the power cord, after the product is powered and issues a preference, but the highest water level must not exceed the "4" scale 'di" sound, the operation panel will light up, product will enter the _____ marked in "Japanese Rice" and "Thai rice". standby mode, press the "Menu" Key to choose the required 5. For "steam" function, the highest water level shall not exceed 1. Before cleaning the rice cooker, unplug the power plug and wait inction, the chosen function start to flash, within 3 seconds, if

is no other action, the cooker will enter into relative ndicator will stay on until the function finished. 4. After the work is finished, the buzzer will ring for 10 times, the rice cooker will automatically enter the keep warm state, the cooking Warning: 1. Grains refers to grain paddy, wheat, sorghum, soybean and corn, process has been finished, you can enjoy the meal. but actually it refers to cereals except for rice and flour. It includes:

according to the power supply, quantity of rice, quantity of water, "Japanese Rice" and "Thai rice" scale lines inside the inner pot. The 2. Coarse grain refers to a meal with a part of grains and based on influence the cooking effect.) range of 1:1.0-1.4, but the highest water level shall not exceed the hard shell of grains contain insoluble fiber that can help damaged.) "4" scale marked in the "Japanese Rice" and "Thai rice" scale lines. gastrointestinal motility, but you must drink more water to promote
6. If there is a grain or other impurities attached on the coil plate,

red rice, black rice, brown rice, sorghum, barley, oat, buckwheat,

3/4 cup of rice; or adjust according to the viscosity of the congee instead of an excessive one. preferred by the user, add water according to the rice water ratio

4. Stir the cereals after finishing the cooking process and opening water or immerse the product into water or other liquid, so as to within the range of 1:6.0-10.00, but the highest water level should the lid, the color and lustre of the rice will have a better look after leaving it for a while, the overall texture will also be improved.

preferred by the user, add water according to the rice water ratio be charged at work in water. Ensure that the steam valve and the lid are well installed, slowly within the range of 1:4.0-8.00, but the highest water level should not 2. Do not directly shower the cooker, power line and other parts 4. The "soup" function allows users to add water according to own 3. Do not put the product and its accessories under the sun.

3. The rice water ratio of "BB Cong." cooking function can refer to Maintenance and Repair

dry, and put it into the rice cooker, slightly rotate the pot, let it fully cups of rice and 1 cup of rice; or according to the viscosity of porridge 1. Do not immerse the cooker, power line and other parts that will

1. Put the prepared ingredients into the pot, dry the external pot the "BB Cong." scale line inside the pot. The range is between 12 01. Precautions before cleaning

ction mode, the relative light indicator and "Canc." light "Low carb pot", put "Low carb pot" in S.S. pot. 2) Add enough water to cover the rice.3) Tap "Low Carb R." function key.

inner lid. (Note: put the steam valve in place, otherwise it will water temperature and quality of rice. To prevent rice from sticking, range is between 1/2 cup of rice and 4 cups of rice; or adjust white rice. Its advantage includes rich and balanced nutrition.

5. After using the rice cooker, take out the inner pot, clean with soft please loosen the rice by mixing it within 30 minutes after entering according to the degree of softness and hardness of the rice that the sponge, wipe it with dry soft cloth after cleaning. (Note: do not use user likes, add water according to the rice water ratio within the in order to fully absorb the nutrition before cooking. Additionally, the wire ball scrubbing, otherwise the non-stick coating will be

2. After the product is cooled, open the lid of the pot, remove the

pull the seal ring hard. The deformation of seal ring will affect the

After removing the inner lid, take out the steam valve for

取出蒸汽阀上盖密封圈,清洗密封圈和蒸汽阀内部,清洁干净后擦干,如图

inner lid, clean it with water and wipe it dry with a dry soft cloth, and

dry the seal ring with a wet cloth after wring out dry. (Note: do not

4. Install the lock of the steam valve into the pot, and install the

2. The rice water ratio of congee cooking function can refer to the softening, otherwise it is easy to cause intestinal obstruction, wipe them with dry soft cloth. "Congee" scale line inside the pot. The range is from 1/4 cup of rice to therefore it is recommended to have a gradual intake of grains 7. Wipe the shell and upper lid with a wet cloth after wringing it out dry, do not use gasoline or other solution, and do not wash them with

avoid damages to the product.

Select a wrong function Select the correct function for rice or congee

The weights of water and rice exceed the Cook according to the rating scale of each plate is burnt repair

esponse Short interval between power cuts, the Power on after powering on for 3 minutes Parts of keys cannot be applied in the Normal phenomenon There is water on hand when touching the Wipe off water on hands and the key The digital tube displays E5 The bottom sensor is on short circuit Send to designated maintenance department to 2 The digital tube displays E6 The bottom sensor displays over- Send to designated maintenance department to temperature fault code repair

3 The digital tube displays F7 The top sensor is on short circuit Send to designated maintenance department to 4 The digital tube displays E8 The top sensor displays over-temperature Send to designated maintenance department to

15 The digital tube displays E9 The inner pot has not been put in the Put the inner pot in the productafter powering

The circuit board is damaged, the circuit Send to designated maintenance department


Product does not The main circuit board is damaged


Common Problem Analysis

并严格按照使用说明书明示之用途使用本产品。 品的所有使用者可以随时查阅 1、本产品需放置在平稳牢固的桌面上使用。

cabbage) or ribbon food (kelp), fragmented food down before doing so.



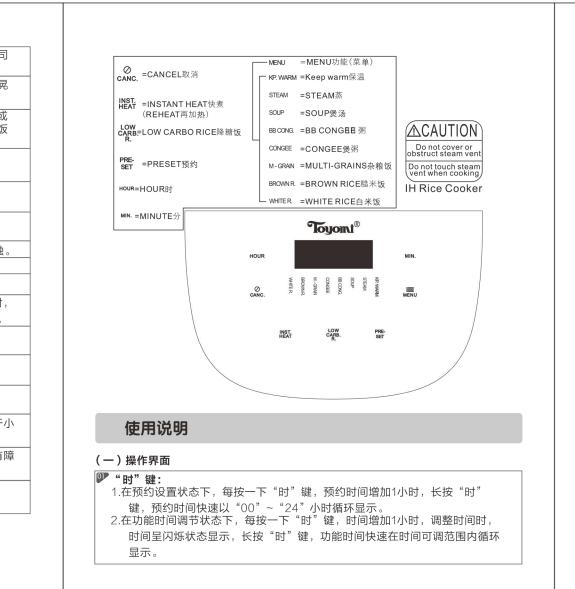

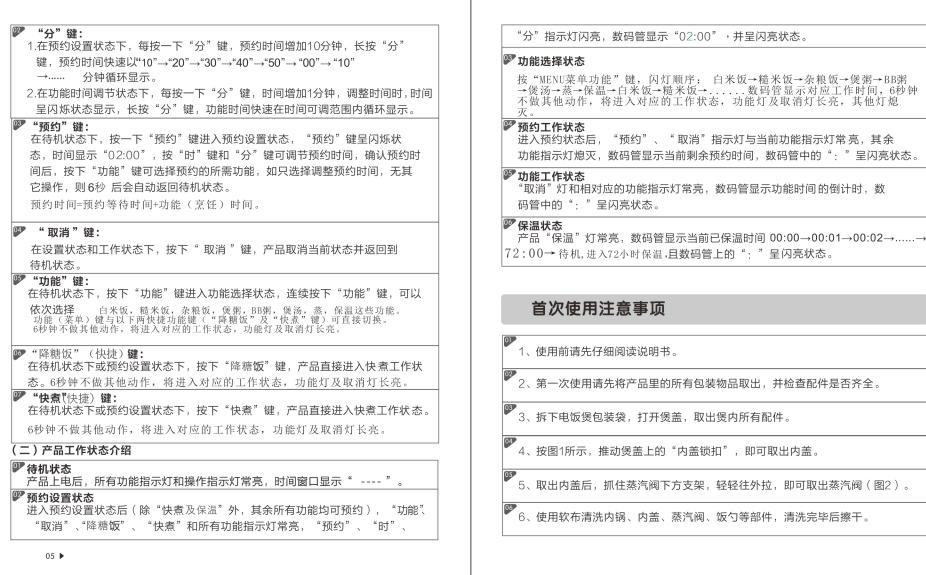



品进入待机状态,按"功能"键选择需要的功能,再按开始键进入工作状态, 4.工作结束后、蜂鸣器响10声,饭煲自动进入保温状态,此时食物已烹调完成, .煮饭功 能米水比例可参考内锅内侧"日本米"、"泰香米"刻度线指示,范围 /2杯米~4杯米;或根据用户喜欢的米饭软硬程度,按1:1.0~1 3/4杯米;或根据用户喜欢的粥的粘稠程度,按1:6.0~10.0范围内的米水比 例加水,但最高水位禁止超过"煮粥"标示下的"3/4"刻度。

化。为防止米饭结块不好吃,请在进入保温状态后30分钟内将饭翻松 2.使用饭煲时,不能超过对应菜单功能的饭煲最大水位,以免导致溢锅。 3.预约时间不宜过长,以免食材变质或有异味产生,客户需自行根据气温及食材 4.在预约状态下,预约时间是包括产品工作时间。

1.把准备好的食材放入锅内,擦干内锅外部,并放入饭煲内,把内锅稍微旋转,

2.确保蒸汽阀与内盖都安装到位,将煲盖慢慢放下,然后压下锅盖至听到"咔

B.插上电源线并接通电源,产品通电后,发出"滴"的一声,操作面板亮起,产

使其与锅底传感器充分接触。

contact the sensor at the bottom of the pot.

0.主机、电源线等任何工作中带电的部件 直接冲淋主机及电源线等任何工作中带电部件

以将产品及其配件放置于太阳下暴晒。

.产品冷却后,打开煲盖,取下内盖用清水将可拆盖清洗干净并用干软布擦 F水的湿布将密封圈擦干(注意:请勿用力拉扯密封圈,如拉扯变形会影 锁扣后即可把蒸汽阀分离为上盖和下座两部分,如图6所示。

加水,但最高水位禁止超过"稀饭"标示下的"1"刻度。 4.煲汤功能可按用户喜好的比例加水,但最高水位禁止超过"日本米"、"

米"标示下的"4"刻度。

3.煮稀饭功能的米水比例可参考内锅内侧"稀饭"刻度线指示,范围为1/2杯米

5.蒸功能最高水位不能超过蒸架上部或蒸笼底部。

食称作杂粮。包括:红米、黑米、紫米、高粱、大麦、燕麦、荞麦、麦

,配上杂粮中的一部份,煮出的饭被称之为杂粮饭,其优点在于

R:粮比较干燥,煮食前需先浸泡才能将营养充分吸水,同时谷物的坚硬

注意:不可用钢丝球擦洗,否则会损伤不粘涂层。 .如果有饭粒或其他杂物附着在线圈盘上,可软布擦干。 9.外壳及上盖用拧干水的湿布轻轻擦拭即可,切勿使用汽油或其它溶液,也不可 用水冲洗或将产品浸入水或其它液体中,以免产品损坏。

5.擦干蒸汽阀后,按照原样装回密封圈,将下座的两个卡脚对准并插入上盖的卡 脚槽内(图8),用手夹紧上盖和下座,同时旋动下座的蒸汽阀锁扣,使其卡 生上盖的锁扣槽内,此时听到"哒"一声代表已锁紧蒸汽阀。(注意:安装时





If it is still unable to troubleshoot after the phenomenon analysis

according to the chart above, please contact the company

maintenance station or dealer, non-professional personnel are

strictly prohibited to disassemble and assemble the machine.

上现象分析后仍无法排除故障,请与本公司维修点或经销商联系,严^责

●If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

• WARNING: This appliance is not intended for use by persons (including children) with reduce physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for