

CLEANING & MAINTENANCE

WARNING: Before cleaning, turn the fan off and unplug from the power supply.

1. To clean the fan use a soft cloth to wipe off any dust. If the fan is very dirty use a damp cloth and wipe dry. Do not use any cleaning detergents, sprays or other chemicals, as they will damage the fan.
2. Store the fan in the original packaging in a ventilated dry area.
3. Do not bend the Blade.
4. Do not use a cleaning solution that is harmful to paints or plastics.

Toyomi®


HIGH VELOCITY AIR CIRCULATOR INSTRUCTION MANUAL

Please read carefully and keep the instruction well

MODEL: POF 1255
220-240V~50Hz, 65W

MODEL: POF 1666
220-240V~50Hz, 150W

MODEL: POF 1877
220-240V~50Hz, 170W

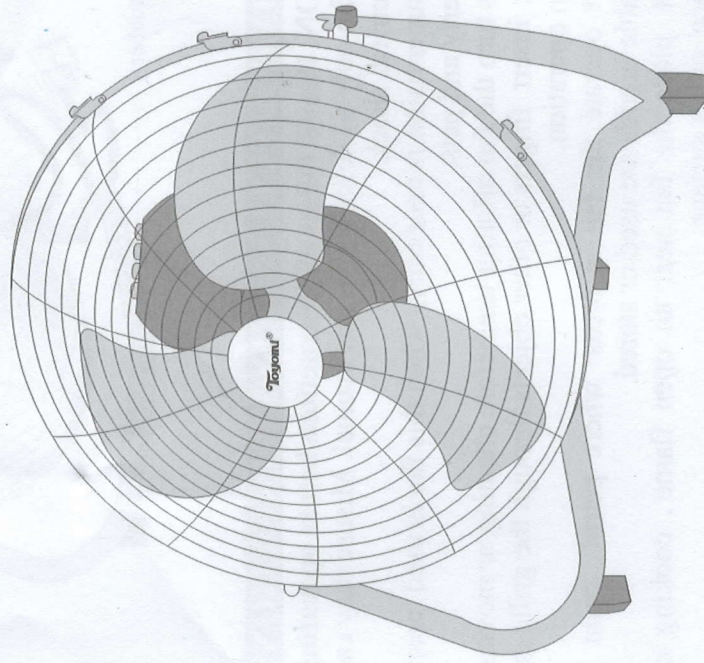

SERVICE & IMPORTANT NOTICE


- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- **WARNING:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

IMPORTED BY NATIONAL ELECTRICAL TRADERS

HIGH VELOCITY AIR CIRCULATOR

Thank you for choosing a **Toyomi** Air Circulator. Your new High Velocity Air Circulator has been designed using the latest in technology. With normal care and maintenance, your **Toyomi** Air Circulator will provide years of satisfactory performance.

PARTS DESCRIPTION

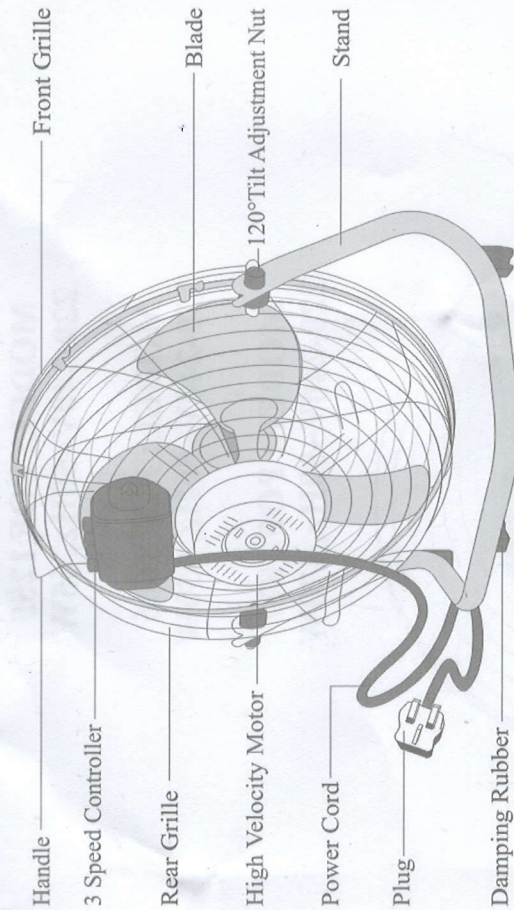

IMPORTANT SAFETY INSTRUCTIONS

CAUTION: Read & follow all instructions before operating this fan.

Use the fan only as described in this manual. Misuse may cause a fire or an electrical shock.

1. Close supervision is necessary, when this fan is used near children, the elderly and pets.
2. Always turn the fan off after use, before cleaning or moving location.
3. **Do not** insert fingers or other objects through the grille guard when fan is in operation.
4. **Do not** operate the fan in areas where petrol, paint or other flammable liquids are used or stored.
5. **Do not** place the fan near an open flame, cooking or heating appliance, or hot surface.

6. This fan is not intended for use in wet or damp locations. Never locate the fan in an area where it may fall into a bath or other water container.

7. This fan should not be operated outside.

8. Always use on a dry level surface.

9. **Do not** let the power cord hang over the edge of a table or counter.

10. Arrange the cord away from an area where it may be tripped over.

11. Never place the power cord under a carpet or rug.

12. To disconnect from the power supply, grip the plug and pull from the power socket. Never pull by the cord.

13. **Do not** hang or mount the fan on a wall or ceiling.

14. **Do not** operate if the fan guard is removed or damaged.

15. This product is designed for household use only.

16. **Do not** use fan in windows. Rain and moisture may create electrical hazard.

17. Always unplug the fan before moving it, putting on or taking off parts, cleaning, or whenever the fan is not in use. Be sure to pull by the plug and not the cord.

18. **Do not** unscrew Safety-lock Screw during operation.

OPERATION INSTRUCTIONS

1. Set the fan on a dry level surface.

2. Check that the mains voltage complies with the voltage stated on the nameplate.

3. Make sure the Speed Control is in "0" position.

4. To adjust airflow upward or downward: Tilt fan head to the desired angle.

5. Speed Controller, switches the motor on/off and allows choice of 3 speeds to be made: 0-Stop, 1-Low, 2-Medium, 3-High.

MULTI-PURPOSE AIR CIRCULATOR

Toyomi Air Circulators can be used alone or in conjunction with an air conditioning unit to circulate the cooled air or to force the air into other rooms. During summer months, the portable **Toyomi** Air Circulators can be used as a hassock fan to pick up the cooled air at floor level and circulate the cool air throughout the entire room.