

# Toyomi®

## MICRO-COMPUTER MULTI-FUNCTION COOKER POT

MODEL: RC4348SS  
220-240V~50/60Hz, 900-1070W  
CAPACITY: 5.0L

### INSTRUCTION MANUAL



FOR HOUSEHOLD USE ONLY.

#### SERVICE & IMPORTANT NOTICE

- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- **WARNING:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

IMPORTED BY NATIONAL ELECTRICAL TRADERS

10

#### IMPORTANT SAFEGUARDS

Read all instructions carefully before first use

- Do not use the appliance other than intended household use.
- Use only with 220-240V~ 50/60Hz power outlet. Ensure the AC cord is well connected to the power inlet of the appliance.
- Unplug from outlet when not in use and before cleaning. Allow unit to cool before putting on or taking off parts.
- Do not use attachments or accessories other than those supplied or recommended by the manufacturer.
- Do not use for outdoors.
- Do not let the cord hang over edge of the table or counter or touches hot surfaces
- Make sure the appliance is "OFF" when not in use, or before taking any parts out for cleaning.
- Always make sure the outer surface of the inner pot is dry before placing it into the cooker or it will cause the cooker to malfunction.
- Please be cautious when opening the lid during or after cooking, hot steam will escape and cause scalding.
- During the fermentation stage you may see steam coming out from the steam vent on the lid, this is normal. Do not cover, touch or obstruct the steam vent.
- Do not touch hot surfaces, use handle or knobs.
- Store in a cool dry place if not in use.


#### Instruction Before Using

1. Must ensure to remove all plastic or polyform packing and clear any unwanted items before placing the inner pot onto the heating plate. Rotate inner pot left or right to ensure alignment before cooking.
2. Power cord must be inserted firmly into the power inlet. Appliance must be earthed against leaking of electrical current. Do not use a universal socket with this cooker.
3. Stainless steel Garlic basket and inner pot can be washed with a soft sponge and washing liquid, do not use metal brushes or other hard sanitary tools to prevent damages to the pot. Stainless steel garlic basket and inner pot must be dry before usage. Do not soak or rinse the cooker machine under running water. Clean the inner part of cover with a soft damp cloth. Make sure the power is "OFF" before cleaning the appliances.

3.故障及排除  
3.Troubleshooting

序号 Serial No.	故障现象 Failure phenomenon	故障原因 Failure causes	排除方法 Troubleshooting methods
1	不通电 Power failure	电源线插头没插好 The plug of the power cord is not properly connected.	检查电源线插头是否插紧到位 Check whether the power cord plug is inserted in place.
		产品故障 Product failure	请送指定维修点检修 Please send it to our service centre to have it checked and repaired
2	显示E2或E3或E4 Display E2 or E3 OR E4		请送指定维修点检修 Please send it to our service centre to have it checked and repaired
3	显示E1或E5 Display E1/E5	内锅内无水干烧 The heating elements are overheated.	等陶瓷内胆冷却后, 拔头插后再插入插头, 重新设置。 After the ceramic inner pot is cooled, unplug and plug in again.
		产品故障 Product failure	请送指定维修点检修 Please send it to our service centre to have it checked and repaired

Name of Parts:

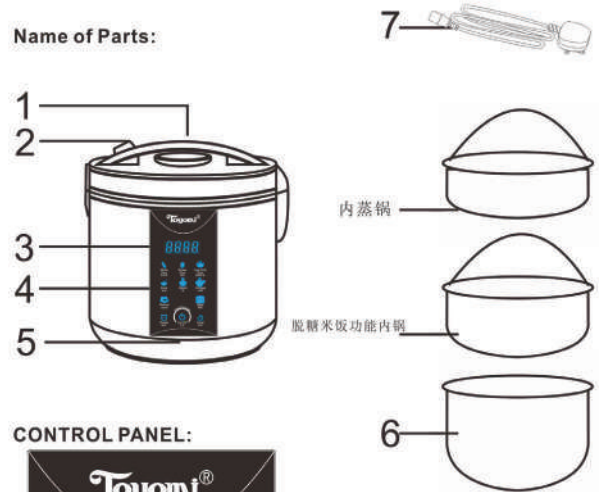

CONTROL PANEL:



1. Handle
2. Cover open button
3. Display screen
4. Mode panel
5. Power inlet
6. High heat ceramic pot
7. Power cord

Feature:

1. Heat resistant ceramic inner pot can be used directly on the stove.
2. Arc-bottom inner pot ensures the balanced stewing, convenient to scoop soup or clean it up.
3. Large control panel with adjustable soup flavors, you can select as you wish.
4. One-key "Reheat" function.
5. Equipped with "Braise" and a variety of functions of cooking soup and porridge, satisfying more cooking needs.
6. Double-layer thermal-insulation shell structure, with advantages of energy-gathering and scald-prevention.

Function Instruction:

- "Timer" Key: In the cooking process, the cooking time can be adjusted at any time according to the requirement. If you need to adjust the time, please press the "Timer" key, each time you press the key, the time on the screen will increase 5 minutes. If you hold on to the key button, the time will increase rapidly.
- "Preset" Key: Press the "Preset" key, each time you press the key, the time on the screen will increase 30 minutes. If you hold on to the key button, the time will increase rapidly.
- "Keep warm/Cancel" Key:
  - a. Press the "Keep Warm /Cancel" key, the indicator will display default "--:--", once the flashing indicator stops it will keep warm for 24 hrs. You may adjust the keep warm Time to your desire time by adjusting the "Timer" key. Once the timer cycle is over, it will go back to standby mode.
  - b. To stop any cooking process or cancel selection just press the "Keep Warm /Cancel" key to return to standby mode.
  - c. During the "Keep Warm" function, the "Keep Warm" Timer cannot be adjusted.
- "Braise" Key: Press the "Braise" key, the indicators of the "Braise" and "Normal" of flavors flashes on, the screen displays the default stewing time of 1 hour. (The function of reheat with ingredients added cannot be used for the braising).

煲饭或煲粥准备工作

The preparation of rice cooking & porridge cooking

①内锅内壁刻度线 (L/CUP) 表示使用各项功能时的参考线。

②The calibration lines on the inner-closure of ceramic inner pot (L/CUP) are the reference lines for use of functions.

例: 用随机赠送的量杯加一杯米 (加米方式: X X) 所加水量为液面平CUP侧1.0刻度线( )。

[建议按: 1杯米配1.2-1.3杯水的配比进行煲饭, 1杯米配6-8杯水的配比进行煲粥]

For example: Add a cup of rice with the complimentary measuring cup (How to add rice: X X). the added water amount is 1.0 of calibration line ( ) on CUP side of liquid level.

[Recommended to cook rice by 1 cup of rice with 1.2-1.3 cups of water, cook porridge by 1 cup of rice with 6-8 cups of water]

③将食物或米洗净后放入内锅内并加入适量的水, 再把内锅外壁的水珠、污物等擦拭干净后放入本体内, 盖上内锅盖。

④After cleaning the food or rice, put it into the inner pot and add proper amount of water. Then wipe the water drops and dirt on the coat of the inner pot and put them into it. Close the inner pot cover.

⑤接通电源, 此时显示屏显示 "0000", 长按开关键3秒, 显示屏显示 "OFF" 表示产品已处于待机状态。这时, 可按个人需要开始选择功能下达工作指令。

⑥Turn on the power supply, which shows "OFF" on the display screen, indicating that the product is in standby status. At this time, according to individual's requirement, you can start to select functions to work it.

脱糖米饭,

(准备步骤1: 产品除大的不锈钢内胆外, 另配有2个不锈钢蒸胆, 高的不锈钢蒸胆为脱糖米饭功能采用的蒸胆, 准备大的不锈钢内胆和高的不锈钢蒸胆。准备步骤2: 脱糖米饭配水比例, 把洗好的大米放入不锈钢蒸胆, 然后把不锈钢蒸胆放入大的不锈钢内胆, 水位线淹过大米即可)

插上电源线, 数码管显示 "0000", 长按开关键3秒, 数码管显示 "-OFF", 再按脱糖米饭键, 脱糖米饭指示灯由白色变蓝色闪亮, 5秒指示停止闪烁, 蓝色常亮, 进入加热程序, 功能完成, 脱糖米饭指示灯由蓝色变为白色, 蜂鸣提示10下, 进入保温状态。

温馨提示: 炖煮食物或煲粥时, 请参照内锅壁上的刻度线控制好食物量及水量, 因过多或过低都会造成炖煮时汤汁外溢或容易造成煮干、烧糊等现象。

Reminder: When stewing food or porridge, please refer to the line on the inner coat of the pot to control the amount of food and water. Too much or less water will cause the soup overflow or cause boil-dry, burning and other situations.

may flicker when it is powered. Please remove the plug and re-power it. This symptoms is normal, please do not worry and continue using the product.  
18. Please keep the sensor and the surface of aluminum pot clean and flat, otherwise it may influence the effect of the product.

1. 请使用与铭牌所标电压值一致的交流电源。
2. 请正确使用合格保护地线的电源，以确保人身安全。不要放在潮湿或靠近易燃物处使用，以免发生危险。
3. 不要将本产品放在儿童可以触及的地方，以免烫伤。
4. 近本产品工作时，切勿将脸或手靠近蒸汽口，以免烫伤。
5. 本产品工作时，切勿将脸或手靠近蒸汽口，以免烫伤。
6. 本产品工作时，切勿将脸或手靠近蒸汽口，以免烫伤。
7. 本产品工作时，切勿将脸或手靠近蒸汽口，以免烫伤。
8. 本产品工作时，切勿将脸或手靠近蒸汽口，以免烫伤。
9. 内锅限于在本产品中加热，不要将内锅直接放在明火上加热，也不要置于其它器具上进行加热。
10. 炖煮食物或煲粥时，请参照内锅壁上的刻度线控制好食物量及水量，否则容易造成煮干、烧糊等现象，严重时将会影响内锅的使用寿命。
11. 插入电源线时，必须插到底，以确保接触良好。
12. 经常保持电源插头、插座的干燥，禁止用湿手插拔电源插头，以防止触电。
13. 产品在通电工作时，请勿移动。
14. 产品在通电工作时，内部可能会发出轻微的“咯、咯”响声，这是器具调整火力的声音，不影响正常工作。
15. 中途断电，产品将回到待机状态，需重新设置，才能继续工作。
16. 加开水煲粥并不能缩短煲粥时间，只会使米粥煮得更烂，请注意使用。
17. 产品第一次使用时，发热体可能发出轻微异味，另显示屏在刚通电时可能显示闪烁，请拔下插头后重新通电，此两种现象属正常现象，请放心使用。
18. 请保持传感器及内锅表面清洁、平整，否则可能影响产品使用效果。

- "Reheat" key: Press the "Reheat" key, the cooker will heat up automatically, the screen will show "FLASHING ", When the procedure is finished, it automatically enters into "Standby" status, Screen will show "OFF".
- "Fast stew" key: Press the "Fast stew" button. "Fast stew" indicator turns on, showing the default stewing time "02:00" on the screen. No changes within 6 seconds it will automatically enter into the "Fast stew" function. When the procedure is finished, it automatically enters into "Keep Warm" status. The "Fast stew" indicator is off and the "Keep Warm" indicator is on.
- "Slow stew" key: Press the "Slow stew" button. "Slow stew" indicator turns on, showing the default stewing time "02:00" on the screen. No changes within 6 seconds it will automatically enter into the "Slow stew" function. When the procedure is finished, it automatically enters into "Keep Warm" status. The "Slow stew" indicator is off and the "Keep Warm" indicator is on.
- "Congee" key: Press the "Congee" button, the "Congee" indicator is on, "01:30" is flashing on screen, it will automatically enter into working status within 6 seconds if no changes are made, the "Congee" indicator lights will stay lit. When the procedure is finished, it automatically enters into "Keep Warm" status. The "Congee" indicator is off and the "Keep Warm" indicator is on.
- "Soup" key: Press the "Soup" button, the "Soup" indicator is on, "02:00" is flashing on screen, it will automatically enter into working status within 6 seconds if no changes are made, the "Soup" indicator lights will stay lit. When the procedure is finished, it automatically enters into "Keep Warm" status. The "Soup" indicator is off and the "Keep Warm" indicator is on.
- "Ginseng soup" key: Press the "Ginseng soup" button, the "Ginseng soup" indicator is on, "02:30" is flashing on screen, it will automatically enter into working status within 6 seconds if no changes are made, the "Ginseng soup" indicator lights will stay lit. When the procedure is finished, it automatically enters into "Keep Warm" status. The "Ginseng soup" indicator is off and the "Keep Warm" indicator is on.
- "White rice"/"Brown rice"/"Claypot rice"/ key: Press these buttons, the screen will show "CHASING FLASH ", it will automatically enter into working status within 6 seconds if no changes are made, the relative indicator lights will stay lit.

When the function is finished, it automatically enters into "Keep Warm" status. The relative indicator is off and the "Keep Warm" indicator is on.

#### Tips for inner pot maintenance

Before using the new inner pot, it's better to boil it with rice-washing water, or you can also boil porridge for one time with the inner pot, which can block the tiny holes of the inner pot to prevent water leakage and to extend its life span.

#### Cleaning methods:

- When the product is not in use for a long time, please clean and wipe it, then put it in the packing box. It should be stored in a ventilated and dry place to avoid dampness, or it will damage the product.
- Off and unplugged the power before cleaning the product, let the inner pot cool down before washing under tap water.
- Do not immerse the power cord and appliances into the water which may cause electric hazard. Do not immerse the inner pot immediately after cooking as it may cause damage or cracks.
- Use a damp cloth to wipe the outer surface of the appliances, do not The inner pot can be washed with detergent and soft sponge, do not use hard steel wire to clean as it may damage the surface.

#### Caution:

1. Please use AC power supply with the same voltage as the specification stated.
2. Please use the power supply with qualified protection grounding to ensure personal safety.
3. Do not put it near or on the surface of inflammable and explosive objects; do not use it in damp areas or near other heat sources to avoid malfunction and danger..
4. When using this product, it should be placed on a stable platform which is out of reach of children.
5. Steam will come out when the product is working. Do not put your face or hands close to the steam outlet

to avoid scalding; do not put the unprotected object above the product; do not cover the steam outlet with cloth or similar objects to avoid accidents or product failure.

6. When the product is working, the temperature of the inner pot and the glass cover will rise gradually. Do not touch it when working. After the work is completed, the temperature of the enclosure and the inner surface of the aluminum pot is very hot. Please do not touch it with your hands or body to avoid scalding.
7. The inner pot is only meant to be heated in this product. Do not heat the inner pot directly on an open fire or on other stoves.
8. Do not add cold water into the inner pot during the heating process, and do not immediately place the inner pot or the cover into the water after stewing, as sudden temperature change will cause it to crack and damage. (Inner pot and cover are not covered under warranty)
9. The inner pot are fragile. Be careful not to collide with hard objects or drop from high places, resulting in breakage and damage.
10. When stewing food or porridge, the proportion of food to water should not be too high. Otherwise, it will easily cause over-flowing after boiling, burning or other situations. This will affect the life span of the appliance in serious cases.
11. When inserting the power wire, it must be inserted to the bottom to ensure good contact.
12. It is necessary to keep the power plug and socket dry regularly. Do not use wet hand to insert and remove the power plug in order to prevent electric shock.
13. Do not move the product when it is on power.
14. When the product is operating, it may make a slight ticking sound inside which is from the adjustment of temperature of the device, and this will not influence normal work.
15. If the power is interrupted, the product will return to standby status and need to be reset before it continues to work.
16. Please note that adding boiled water to the porridge cannot shorten the time of cooking porridge, but will only make the porridge overboiled.
17. When the product is used for the first time, the heater may emit a slight odor, and the screen display