 





# MICRO-COM. HIGH HEAT STEW COOKER INSTRUCTION MANUAL

## SERVICE & IMPORTANT NOTICE

- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- **WARNING:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

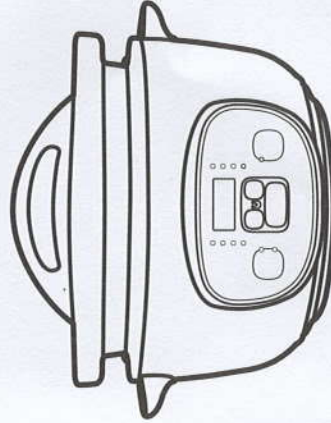

 **MODEL: SC 3036**  
**CAPACITY: 3.0L**  
**220-240V~50Hz**  
**POWER: 450-535W**

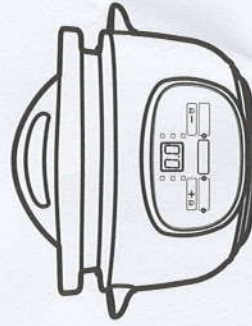

**MODEL: SC 1235**  
**CAPACITY: 1.2L**  
**220-240V~50Hz**  
**POWER: 300-360W**

IMPORTED BY NATIONAL ELECTRICAL TRADERS

FOR HOUSEHOLD USE ONLY.

使用产品前，请仔细阅读本使用说明书  
请妥善保管本使用说明书

Please read this instruction manual carefully before using the product.  
Please keep this operation manual properly.

感谢您选用 TOYOMI 微电脑电炖锅。使用时，请按本说明书进行操作，本产品  
仅限家庭或类似场所使用。

Thank you for choosing TOYOMI Micro-computer electric Cooker. Please  
operate it according to this instruction manual when using this product;  
this product is intended for household or similar application.

## 一、产品性能特点

 
1. 将传统砂锅烹饪转化家用电器, 实现智能免看管
2. “饭、菜、汤、粥”一锅全包容, 满足您和您家人烹饪需求
3. 快速煲炖, 时间更短, 烹饪更香, 满足即时上菜需求
4. 专业菜式程序控制, 味道更浓, 口感更好
5. 天然砂锅, 煲煮更营养健康

## A. Product characteristics

1. Transforming the traditional cooking casserole into the household appliance without the need of manual cooking.
2. Adding "rice, vegetable, soup, porridge" into one pot to satisfy the cooking needs for you and your family.
3. Quick stew method requires less time with more delicious cooking, satisfying the need of immediate serving.
4. Professional dish-style program control fulfills better taste & flavor.
5. Natural casserole cooking makes the food more nutritious and healthy.

## 二、部件名称介绍

### B. Introduction of parts

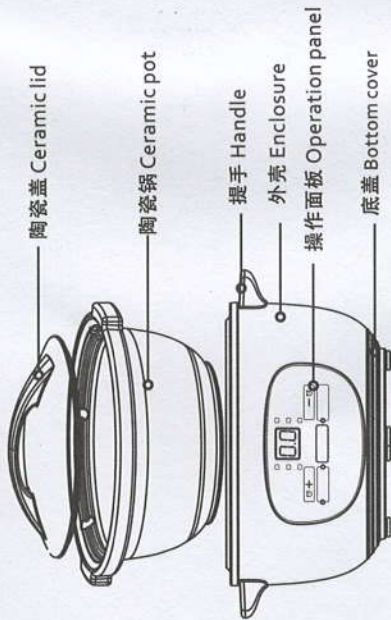

燕窝: Bird's Nest

参茸: Ginseng

鲍鱼: Abalone

快炖: Fast Stew

慢炖: Slow Stew

砂锅饭: Claypot Rice

 
 
砂锅粥: Claypot Porridge

红烧: Braise

预约/定时: Preset/timer

功能选择: Function

保温/取消: Keep Warm/cancel

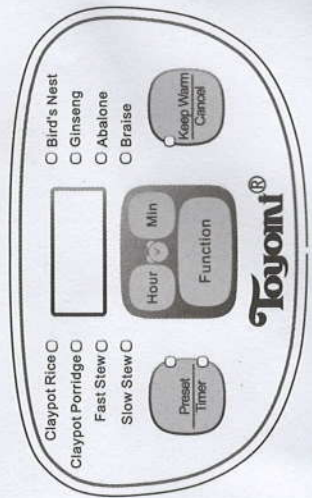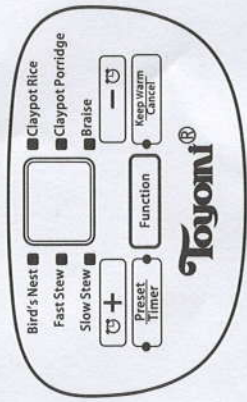

## 三、使用方法

### C. How to use

#### 1. 操作面板及按键说明:

1. Description of operation panel and keys:

1. “功能选择”键:

① 待机或设置状态下, 按动“功能选择”键, 功能指示灯显示顺序及数码管显示默认时间如下: 待机 (0.0) → 燕窝 (1.0) → 快炖 (1.5) → 慢炖 (3.0) → 砂锅饭 (-.) → 砂锅粥 (-.) → 红烧 (1.0) → 待机, 如此循环。

② 在任何工作过程中, 按动“保温/取消”键, 该键起“取消”作用, 产品回到待机状态。

1. “Function Selection” Key:

① In the state of standby or setting, press the “Function Selection” key, the displaying sequence of the function indicators and the default time of the nixie tube are as follows: Standby(0.0) → Bird's Nest (1.0) → Fast Stew (1.5) → Slow stew (3.0) → Claypot Rice (-.) → Claypot Porridge (-.) → Braise (1.0) → Standby, and this will repeat as above.

② In any operating process, press the “Keep Warm/Cancel” key which has the function of “Cancel”, and the product returns to the standby mode.

2. “预约/定时”键:

① 待机状态下, 按“预约/定时”键, 预约指示灯闪亮, 显示屏显示默认时间“2.0”也闪亮, 闪亮时间为6秒, 6秒内每按一次“预约/定时”键, 闪亮时限顺延; “2.0”闪亮时, 可以通过按“+”和“-”键调整预约时间。

② 按“功能选择”键后, 6秒内再按“预约/定时”键, 定时指示灯闪亮, 功能指示灯和显示屏显示的功能默认时间也都闪亮, 可以通过按“+”和“-”键调整定时时间。

③ 定时工作过程中, 再按“预约/定时”键, 功能指示灯保持恒亮, 定时指示灯和显示屏显示时间都闪亮, 也可以通过按“+”和“-”键调整定时功能及砂锅粥功能状态下不能使用时功能。

2. “Preset/Timer” Key:

① In the standby mode, press the “Preset/Timer” key, the presetting indicator flashes on, and the default time “2.0” displayed on with the time limit of 6 seconds. Each time by pressing the “Preset/Timer” key within 6 seconds, the flashing time limit will be postponed; when “2.0” flashes on, and you can press the keys of “+” and “-” keys to adjust the presetting time.

② After pressing the “Function Selection” key, press the “Preset/Timer” key within 6 seconds, the timing indicator flashes on, the function indicators and the default time displayed on the screen also flash on, and you can press the keys of “+” and “-” keys to adjust the presetting time.

③ In the working process of timing, press the “Preset/Timer” key again, the function indicator is constantly on, the timing indicator flashes and the default time displayed on the screen also flash on, and you can press the keys of “+” and “-” keys to adjust the presetting time.

time. (Timing function cannot be used when Claypot rice or Claypot porridge)

3. "+"、 "-" 键：先按“预约/定时”键（“预约/定时”键，左边为预约灯闪亮），再按动“+”键，显示屏显示的默认时间以0.5为增量递增。至“9.5”之后，此时再按则回到“0.0”。继续再按，则仍以0.5为增量递增，如此循环。长按该键，则快速递增，循环规律与短按相同，相反按“-”键则以0.5为减量递减。

3. "+" and "-" Keys: Press the "Preset/Timer" key first (the presetting indicator on the left of the "Preset/Timer" key flashes on), then press the "+" key, the default time displayed on the screen will increase by 0.5. When it reaches "9.5", if press it again, it will return to "0.0". Continue pressing, it will increase by 0.5 increments, and this will repeat itself. If press the key for longer time, then it will quickly increase with the same circulation pattern as the short-time press. On the contrary, if press "-" key, it will decrease by 0.5.

4. "+"、 "-" 键：先按“功能选择”确定功能，后按“预约/定时”键（“预约/定时”键右边为定时灯闪亮），再按动“+”键，显示屏显示的默认时间以0.1为增量递增。长按该键，则快速递增，循环规律与短按相同，递增至最大可调时间后再按“+”键时间则不再上升，这时按“-”键递减或按“保温/取消”键取消重新选择。相反按“-”键则亦之。

★“+”、“-”键只能在按“预约/定时”键后6秒内，“预约/定时”灯闪亮亮的情况下才能操作。

4. "+" and "-" Keys: Press the "Function Selection" key to confirm the function, then press the "Preset/Timer" key (the timing indicator on the left of the "Preset/Timer" key flashes on). At this moment, if press the "+" key, the default time displayed on the screen will increase by 0.1. If press the key for longer time, then it will quickly increase with the same circulation pattern as the short-time press. After it reaches the maximum adjustable time, if press the "+" key, the time will not increase. At this moment, if press the "-" key, it will not decrease progressively, or press the "Keep Warm/Cancel" key to cancel it and perform the re-selection. Press the "-" key will perform the opposite.

★“+” and "-" keys can only be operated within six seconds after pressing the "Preset/Timer" key, when the indicators of "Presetting" and "Timing" are flashing on.

5. “保温/取消”键：  
①待机或设置状态下，按动“保温/取消”键，功能指示灯显示顺序及数码管显示默认时间如下：

待机(0.0)→保温(-.-)→待机，如此循环。  
②在任何工作过程中，按动“保温/取消”键，该键起“取消”作用，产品回到待机状态。

5. "Keep Warm/Cancel" Key:

① In the standby or setting mode, press the "Keep Warm/Cancel" key, the displaying sequence of the function indicators and the default time repeat are as follows:

 
Standby(0.0) → Keep Warm(-.-) → Standby, and this will circulate as

above.

② In any operating process, press the "Keep Warm/Cancel" key which has the function of "Cancel", and the product returns to the standby mode.


四、“预约/定时”炖煮设置及工作说明（以“燕窝”功能预约4.0小时，定时1.5小时为例）

D. Preset stewing setting and operational description (taking 4-hour presetting of "Bird's Nest" function with 1.5-hour timing as an example)

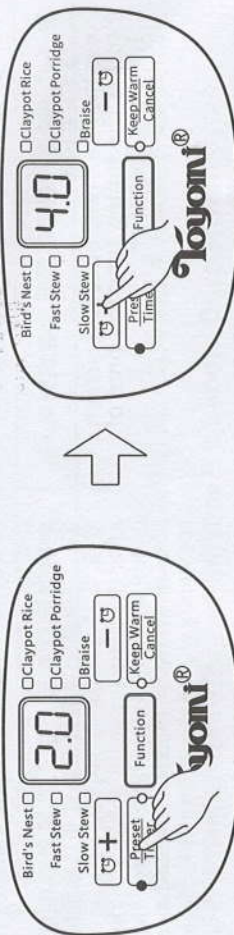


按“预约/定时”键，“预约/定时”左边指示灯和显示屏显示的默认预约时间“2.0”都闪亮。

 Press the "Presetting/Timer" key, the "Presetting/Timer" indicator and the default function time "2.0" displayed on the screen flash on at the same time.

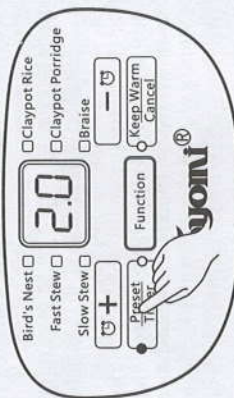


按“功能选择”键，再次“燕窝”功能指示灯和显示屏显示默认时间“1.0”都闪亮。

 Press the "Function Selection" key three times, the "Bird's Nest" function indicator and the default time "1.0" displayed on the screen flash on.

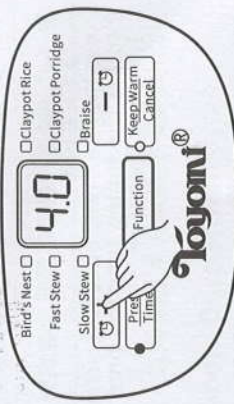


按“预约/定时”键，“预约/定时”左边指示灯和显示屏显示的默认预约时间为“4.0”即将亮。

 Press the "+" key to adjust the presetting time to "4.0", namely, adjust the presetting time to 4 hours.

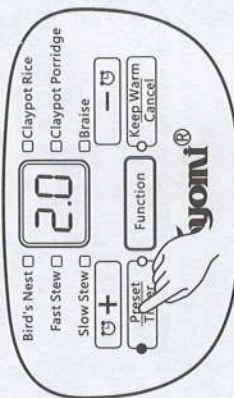

按“预约/定时”键，“燕窝”功能指示灯和显示屏显示默认时间“1.0”都闪亮。

 Press the "Preset/Timer" key, the "Bird's Nest" function indicator and the default time "1.0" displayed on the screen flash on.

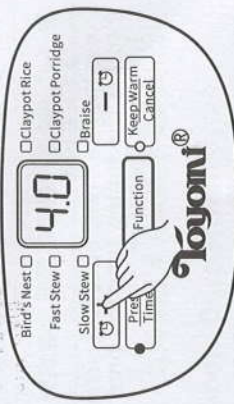

按“预约/定时”键，“预约/定时”指示灯和显示屏显示的默认功能时间“1.0”都闪亮。

 
Press the "Preset/Timer" key, the default function time "1.0" displayed on the screen flash on at the same time.

按“功能选择”键，再次“燕窝”功能指示灯和显示屏显示默认时间“1.0”都闪亮。


Press the "Function Selection" key three times, the "Bird's Nest" function indicator and the default time "1.0" displayed on the screen flash on.

按“预约/定时”键，“预约/定时”指示灯和显示屏显示的默认功能时间“1.0”都闪亮。


Press the "Preset/Timer" key, the default function time "1.0" displayed on the screen flash on at the same time.

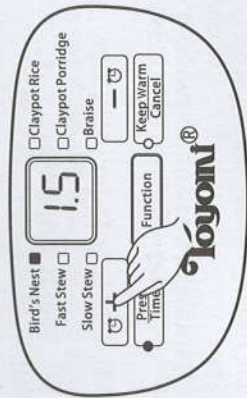

 
按“+”键1次，显示屏显示功能定时时间“1.5”并闪亮。  
Press the “+” key once, the screen displays the timing function time of “1.5” and flashes on.

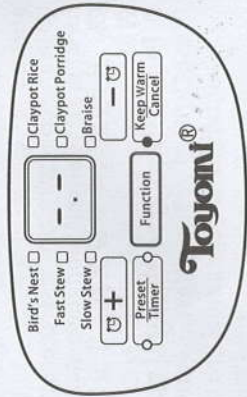

 定时时间结束后，进入无限时保温状态，保温功能指示灯恒亮，显示屏显示“0.0”并闪亮。  
After the timer is over, it enters into the unlimited-time keep-warm state, the “Keep Warm” function indicator is constantly on, the screen displays “0.0” with the “.” in the middle flashing on.

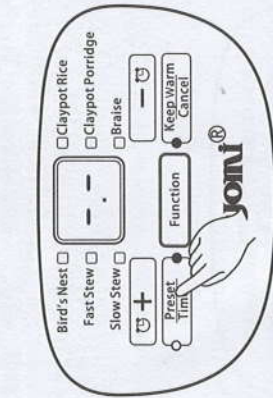

 必要时，先按“预约/定时”键，再按“+”键，将无限时保温调整为定时保温，最长可调至9.5小时。  
If necessary, you can press the “Preset/Timer” & “+” function keys to adjust the Keep-warm timing to maximum of 9-5.

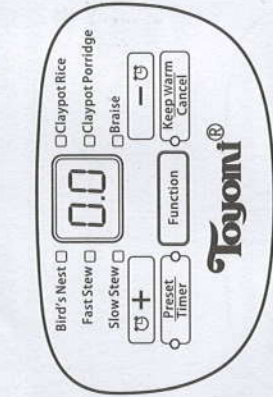

定时保温时间结束后，蜂鸣器鸣响提示进入待机状态，显示屏显示“0.0”。  
After the set Keep Warm time is over, the buzzer rings to remind that the product enters into the standby mode, and the screen displays “0.0”.

## 五、功能设置说明表:

### E. Instruction table of function settings

| 功能 Function                   | 燕窝 Bird's Nest | 快炖 Fast Stew | 慢炖 Slow Stew | 砂锅饭 Claypot Rice | 砂锅粥 Claypot Porridge | 红烧 Braise | 保温 Keep Warm |
|-------------------------------|----------------|--------------|--------------|------------------|----------------------|-----------|--------------|
| 默认时间 (小时) Default time (hour) | 1.0            | 1.5          | 3.0          | --               | --                   | 1.0       | --           |
| 定时时间 (小时) Timing time (hour)  | 0.1-2.0        | 0.1-3.0      | 1.0-5.0      | --               | --                   | 0.1-3.0   | 0.0-9.5      |
| 是否可预约 Presetting Yes/No       | 是 Yes          | 是 Yes        | 是 Yes        | 是 Yes            | 是 Yes                | 是 Yes     | 否 No         |

### 温馨提示:

#### Tips:

1. 预约最长调整时间为9.5小时。开始倒计时，数码管显示时间数字每0.1小时(6分钟)递减变化。  
1. The maximum of presetting time is 9.5 hours. Once activated, the displayed number of hours on the digital display progressively decreases by 0.1 hour (6 minutes).
2. 请根据各种食材的特性，按生活经验设定合适的预约时间，以使食材充分浸泡。浸泡易变质食材，预约时间不宜设置过长，以防止食材变质。  
2. Please set appropriate timer according to the characteristics of the food to avoid deterioration of food freshness.
3. 在炖煮或焖炖不易熟的食物时，或在低温环境下，请在默认定时时间的基础上，适当加长时间，为确保食物熟透。  
3. For food which needs longer cooking time or cooking at low temperature, please set according to ensure food is fully cooked.
4. 在工作过程中可以依您个人喜好调整工作时间，使食物达到合适的口感，建议带腥气食物先过水。  
4. You can adjust the cooking time according to your personal preference to make food taste better. It is recommended that the food with fishy smell be quick-boiled with water first.
5. 请按陶瓷锅上的水位标记往容器内加水，以保证正常炖煮，防止出现产品故障或造成危险。  
5. Please add water into the container according to the water level mark on the ceramic pot, this is to ensure the normal stewing and prevent the product from damage.
6. 产品炖煮过程若打开上盖，请先按“保温/取消”键停止工作，待水不沸腾时再开盖，以防止锅内沸水溅出烫伤。  
6. If you need to open the upper lid in the process of stewing, please press the “Function/Cancel” key first to stop the operation. Do not uncover the lid until the water stops boiling to prevent the boiling water from splashing out of the pot, causing scalding injury.
7. 定时“保温”工作时间结束后，产品直接进入待机状态。  
7. After Keep Warm timer is over, the product will automatically switches into standby mode.
8. 当产品进入保温状态后，为无限时保温，这时显示为“0.0”。若需停止保温，请按“保温/取消”键即可。  
8. When the product enters into the standby mode, the product will automatically switches into standby mode.

8. When the product is on unlimited timing keep warm mode, the screen displays "...-" at this moment. If you need to stop the keep warm function, you can press the "Cancel" key to stop it.

9. 做砂锅饭与砂锅粥的技巧:

1) 准备食材及器具

 
在砂锅中放入食材和料汁 (加入的食材和水不超过陶瓷锅容量的MAX水位), 再盖上砂锅盖。

2) 将准备好的食材和器具放入砂锅中。

3) Add food materials and sauce into the claypot (food materials and water added should not exceed the MAX water level of the capacity of the clay pot), then cover it with the claypot lid.


### 加料汁与食材

Add food materials & sauce into the claypot

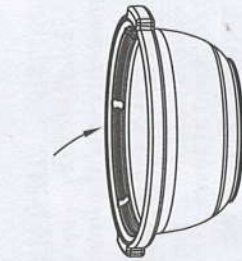

### 盖上砂锅盖

 cover it with the claypot lid

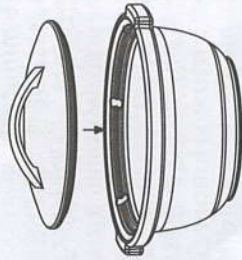

加入料汁与食材: Add sauces and ingredients.

盖上砂锅盖: Cover it with the claypot lid

注: a. "砂锅饭" 功能: 选择砂锅饭功能前, 请先往砂锅内加入少量食用油后再加入洗净后的大米, 增加口感同时避免粘锅。在工作10分钟左右时会有蜂鸣器响, 提示加入配菜 (加入配菜时, 再加入少量食用油, 骨类较难熟的实物, 应与大米一起加入)。

Note: a. "Claypot Rice" Function: Before selecting the Claypot Rice function, add a small amount of cooking oil into the casserole, then add into the rice after washing, it will improve the taste while prevent sticking. In about 10 minutes of cooking there will be a ringing buzzer to remind you to add ingredients (when adding ingredients, a small amount of cooking oil should be added, and foods that are difficult to cook like bones should be cooked together with rice).

b. "砂锅粥" 功能: 选择砂锅粥功能, 在工作15分钟左右时, 会有蜂鸣器响, 提示加入配菜 (骨类较难熟的实物, 应与大米一起加入)。

b. "Claypot Porridge" Function: Select the claypot porridge, and in about 15 minutes of operation there will be the ringing buzzer to remind you to add into side dishes (foods that are difficult to cook like bones should be added together with rice).

2) 接通电源, 操作面板上显示屏点亮, 处于待机状态。

2) Switch on the power, and the screen on the operation panel turns

on in the standby mode.

### 六、注意事项

#### F. Notes

1. 不要将陶瓷锅直接放在明火上加热, 并避免陶瓷件在较热时接触冷水, 以免发生爆裂。

1. Do not put the claypot directly onto the stove. Do not add cold water to the hot claypot, it will cause the pot to crack.

2. 请使用与铭牌所标电压值一致的交流电源。

2. AC power voltage should be in accordance with the voltage indicated on the product.

3. 请使用有合格保护接地的电源, 以确保人身安全。

3. For your safety, please use the power source with safety precaution.

4. 不要放在易燃易爆的物品附近或表面使用; 不要放在潮湿或靠近其它热源的地方使用, 以免发生故障和危险。

4. Do not place the appliance near or on the surfaces of the items that are flammable and explosive; do not place the appliance at the places that are wet or near other heat sources to avoid damage.

5. 使用本产品时应放置在儿童接触不到的稳固平台上。

5. When using this appliance, it should be placed at a firm and steady platform out of children's reach.

6. 产品工作时可能会冒出蒸汽, 切勿将脸或手靠近蒸汽口, 以免烫伤; 怕蒸汽的物体不要置于本产品上方; 切勿将抹布或类似物品覆盖在蒸汽口上, 以免引发意外或导致产品故障。

6. When the appliance is operated, it will produce steam, do not place your face or hands near the steam vent to avoid scalding; do not use rag or similar items to cover the steam vent, as to it will cause accidents or product failure.

7. 产品工作时, 上盖和外壳温度较高, 请勿触摸, 以免烫伤。

7. When the appliance is in use, its upper lid and exterior are very hot, do not touch them, it will cause scalding.

8. 切勿直接通电干烧或只加油加热, 避免出现故障和危险, 不用时请拔下电源插头。

8. Must add water and oil to the appliance before use. Pull out the power plug from the power point when not in use.

9. 插入电源线时, 必须插到底, 以确保接触良好。

9. You must insert the plug firmly to ensure good contact of electrical supply to the appliance.

10. 应经常保持电源插头、插座的干燥, 禁止用湿手插拔电源插头, 以防触电。

10. The power plug and socket should be kept dry, do not insert and pull the power plug with wet hands, in order to prevent from electric shock.

11. 产品在通电工作时, 请勿移动。

11. Do not move the appliance when the power is on and in operation.

12. 砂锅为易碎品, 慎防与硬物碰撞及从高处跌落, 造成破碎损坏。

12. The claypot is breakable, so prevent it from dropping, causing breaking damage.

13. 加水量应在最低水位线与最高水位线之间。加水过少或过多, 都可能

出现故障和危险。

13. The water amount added should be between the minimum and maximum water levels. Too little or too much water added may both lead to malfunction and danger.

14. 在工作状态下按动“保温/取消”键，产品将回到待机状态，即显示屏显示“0.0”。

14. Press the “Keep Warm/Cancel” key when in working condition, and the product will return to standby mode, i.e. the screen displays “0.0”.

15. 若中途断电，产品将回到待机状态，需重新设置，才能继续工作。

15. If the power is off halfway, the product will return to the standby mode, and it needs to be reset to continue the operation.

16. 产品第一次使用时，发热管可能发出轻微异味；另显示屏在刚通电时可能显示闪烁，请拔下插头后重新通电；此两种现象属正常现象，请放心使用。

16. When the product is used for the first time, the heating tubes may give out a slight odor; the screen may flash when it is just switched on, pull out the plug and switch it on again; it is normal, so please be rest assured when using it.

17. 炖煮食物或煮粥时，食物对水的比例不能过高，否则容易造成煮干、烧糊等现象，严重时将会影响内锅的使用寿命。

17. When stewing porridge or other food, the proportion of food to water cannot be too high. Dry boiling will cause severe damage to the claypot.

18. 工作结束，拿开砂锅后，产品内部余热温度较高，请勿直接触摸，以免烫伤。

18. After cooking and the casserole is removed, the balance heat inside the product is comparatively hot, do not touch it to avoid scalding.

19. 请监督孩童勿当本产品为玩具使用。

19. Make sure children are being supervised not to play with the appliance. It is not a toy.

20. 关于如何清洁与食物接触表面的细节

a. 错误使用引发潜在伤害的警告

b. 对加热元件表面经使用后有残余发热的说明

20. Cleaning instructions

- a warning of potential injury from misuse

- b statement that the heating element surface is subject to residual heat after use

## 七、保养和维护

### G. Repair and maintenance

#### 1. 清洗方法:

- ①. 产品清洗前应先将拔掉电源线，待冷却后再进行清洗。
- ②. 陶瓷件可用洗洁精和海绵清洗，请勿使用硬质钢丝清洗，以免损坏表面。
- ③. 可用湿毛巾擦拭机体外表面，切勿使用腐蚀性液体进行清洗。
- ④. 切勿将电源线、产品整机浸入水中或冲洗，以免电器进水，产生故障，影响安全使用。

#### 1. Cleaning Methods:

- ①. The power cord should be unplugged, after being cooled down before the product is cleaned.
- ②. The ceramic parts can be washed with detergent and sponge, and do not use abrasive instruments to clean it to avoid damage to the surface.

③. Use a wet towel to wipe the exterior of the appliance, do not use corrosive liquids for cleaning.

④. Do not clean the power cord and the main body in or with water to avoid product failure and danger.

#### 2. 保存方法:

产品长期不使用时，请清洁擦净后，装入包装箱中，应存放于通风干燥的地方，以免受潮，影响使用。

#### 2. Storage Method:

When the product is not in use for a long time, please wipe it clean, completely dry it, pack it into the box and store it in a ventilated and dry place for normal use.

#### 注意:

砂锅寄锅盖都属于易碎物品,不属于保修范围,请妥善存放。

#### Notice:

The claypot and claypot lid are fragile goods, which are not within the warranty services, so please handle and operate them with care.

八、故障及排除  
H. Failure and trouble shooting

| 序号<br>Serial No | 故障现象<br>Failure phenomenon                        | 故障原因<br>Failure causes   | 排除方法<br>Troubleshooting methods  |
|-----------------|---|--|--|
| 1               | 不通电<br>Power failure                              | 电源线插头没插好<br>The plug of the power cord is not properly connected.<br><br>产品故障<br>Product failure | 检查电源线插头是否插紧到<br>位<br>Check whether the power cord plug is inserted in place.<br><br>请送指定维修点检修<br>Please send it to our service centre to have it checked and repaired                                |
| 2               | 能通电但不加热<br>Fail to heat in the state of power on  | 出现干烧<br>Dry burn occurs<br><br>产品故障<br>Product failure   | 请拔电等砂锅放置冷却后再<br>通电<br>Please turn off the power, and do not turn it on again until the claypot cools down<br><br>请送指定维修点检修<br>Please send it to our service centre to have it checked and repaired   |
| 3               | 显示屏显示 E1<br>Displaying E1                         | 产品故障<br>Product failure  | 请送指定维修点检修<br>Please send it to our service centre to have it checked and repaired  |
| 4               | 显示屏显示 E2<br>Displaying E2                         | 出现干烧<br>Dry burn occurs<br><br>产品故障<br>Product failure   | 请拔电等砂锅放置冷却后再<br>通电<br>Please turn off the power, and do not turn it on again until the casserole cools down<br><br>请送指定维修点检修<br>Please send it to our service centre to have it checked and repaired |
| 5               | 砂锅饭不熟或烧焦<br>Soup rice is not well-cooked / burned | 加水量太少<br>Too little water added  | 调整加水量 (根据米的吸水性<br>不同, 加水量有所增减)<br>Adjust the water added<br>(Increase or decrease the water amount according to the different water-absorbing qualities of rice)                                     |