

# Toyomi®

## MICRO-COM. ELECTRIC SLOW COOKER INSTRUCTION MANUAL



**MODEL: SC 2050**  
**220-240V~50Hz**  
**175-208W**  
**CAPACITY: 2.0L**



**MODEL: SC 4040**  
**220-240V~50Hz**  
**255-304W**  
**CAPACITY: 4.0L**

FOR HOUSEHOLD USE ONLY.


## 部件名称介绍 Introduction of parts

### 1. 主要部件

#### 1. Main Components



### 2. 操作面板 Operation Panel

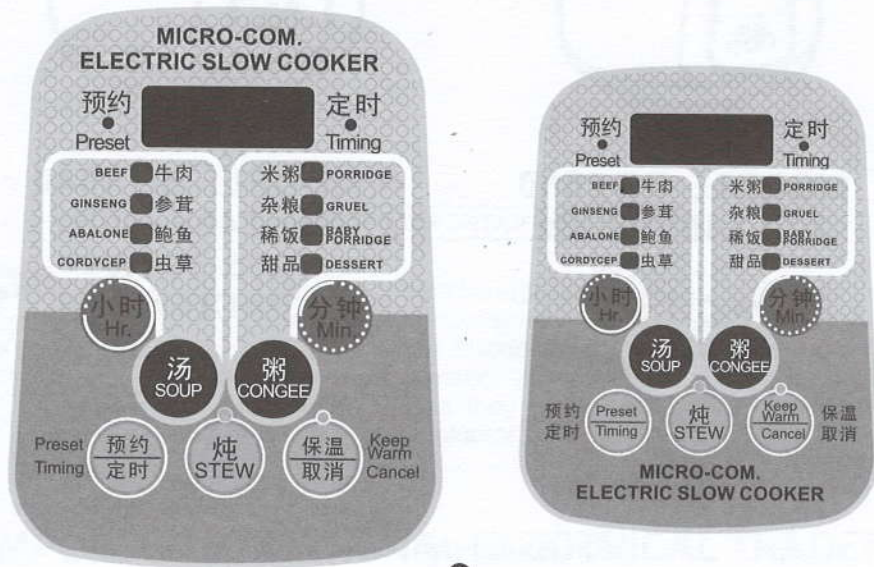

## 陶瓷内锅使用说明 How to use

### 1. 待机状态 Standby Mode

电炖锅通电后，屏幕显示“00:00”，表示电炖锅已进入待机状态。

When the electric stew pot is on, the screen displays "00:00", indicating that the electric stew pot has entered into the standby mode.

### 2. 陶瓷内锅使用说明 Instruction of the ceramic inner pot.

陶瓷内锅内的刻度线 (L/CUP) 表示使用各项功能时的水位参考线：

The scale mark (L/CUP) inside the ceramic inner pot provides reference for the water level when using various functions:

- 1) 使用“米粥”、“杂粮”、“稀粥”等功能时，水量根据所加米的杯数而定。  
例：煮3/4量杯的米时，需加水至标有“CUP”的水位刻度线“3/4”处；  
煮1量杯再加1/4量杯的米时，需加水至标有“CUP”的水位刻度线“1+1/4”处（注：根据个人喜好和所用米质的不同，可适当调整所加水量）

When using the functions of "GRUEL", "PORRIDGE", "BABY PORRIDGE", the amount of water depends on how many cups of rice is added. For example: when cooking 3/4 cups of rice, you need to add water to the scale mark "3/4" of the "CUP" water level scale line; when cooking 1 and 1/4 cups of rice, you need to add water to the scale mark "1+1/4" of the "CUP" water level scale line (Note: You can adjust the water amount added according to your personal preferences and different rice quality);

- 2) 使用“汤”“炖”等功能时，水量应控制在陶瓷内锅“L”水位刻度线的最低水位-最高水位之间。

When using the functions of "SOUP", "STEW", etc., the amount of water should be controlled between the minimum and the maximum water levels of the "L" water level scale mark of the ceramic inner pot.

### 3. 操作步骤 OPERATING INSTRUCTION

- 1) 首先，将米或食物洗净后，放入陶瓷内锅中，再按比例加入适量的水；  
First, place the cleansed rice or food into the ceramic inner pot, and then add the right amount of water;

- 2) 用干布将陶瓷内锅外壁擦干后放入主机体中；再盖上内锅盖；  
Wipe the outer part of the ceramic inner pot with a piece of dry cloth and put it into the main body, then cover it with the inner pot lid;

- 3) 插好电源线，接通电源。这时，屏幕显示“00:00”，表示电炖锅已进入待机状态；

Plug in the power cord and switch it on. At this point, the screen displays "00:00", indicating the electric stew pot has entered into the standby mode;



- 4)如需设置预约时间,则先按“预约/定时”键、再按“小时”、“分钟”键进行预约时间的设置后,再选择炖煮功能;  
If you need to set the preset timer, you can press the "Preset/ Timing" function first, and select the function of "Hr," and "Min." to set your desire preset timing then select the stewing function.
- 5)如无需设置预约时间,则直接按动“汤”键或“粥”键或“炖”键选定所需功能。这时,屏幕默认的定时时间及所对应的功能指示灯闪烁数秒钟后变为恒亮,表示开始进入炖煮状态(注:如需自行设定时间,则通过按动“预约/定时”键、再按“小时”、“分钟”键设定时间)。炖煮过程中,显示屏时间将以1分钟为单位进行递减;  
If there is no need to set the presetting time, you can directly press the "SOUP" key or "PORRIDGE" or " STEW" key to select the desired function. At this moment, default timing time on the screen and the corresponding function indicators will be constantly on after flashing for a few seconds, which indicates that it enters into the stewing state (Note: If you need to set the time by yourself, then you can set the time by pressing the "Preset Timer" function, and then pressing the keys of "Hr." and "Min." ). In the process of stewing, the displayed time on the screen decreases by 1 minute;
- 6)待食物煮熟后,将自动进入保温状态。这时,保温指示灯亮,屏幕显示"-- : --"。保温过程食物温度将维持在60°C-85°C左右;  
After the food is cooked thoroughly, it will automatically enter to keep warm mode. At this point, the keep warm indicator will be on and the screen displays "-- : --". During the keep warm process, the food temperature will be maintained at about 60°C to 85°C;
- 7)过程如需停止工作,只需按动“保温/取消”键一下即可。这时,相应的指示灯熄灭,产品停止加热并回到待机状态。最后,拔掉电源线切断电源即可。  
To cancel stop the stewing process, you can simply press the "Keep warm/Cancel" for one time. At this moment, the corresponding indicator goes out, the product stops heating and returns to the standby mode. Lastly, unplug the power cord to cut off the power supply.

#### 4.各功能的操作说明Operating instructions of various functions

序号 No.	功能 Function	默认时间 Default time	可调整定 时时间 Timing time can be adjusted	操作说明 Operating Instructions	手动调节说明 Instructions for manual adjustment
1	预约 Presetting	2小时 2 hours	可调整预约时 间为0~24小时 Adjustable presetting time is from 0 to 24 hours	先按“预约/定 时”键、再按 “小时”、“分 钟”键自行调 节时间 First press the “Preset/ Timing” key, and then press the “Hr.” key and “Min.” key to self- regulate the time	按“预约/定时”键后，再按动“ 小时”键，小时数字会在现有基 础上增加1，长按“小时”键会连 续变化但仍以1为增量，到24后 转到00；如此循环。 按“预约/定时”键后，再按动“ 分钟”键，分钟数字会在现有基 础上增加5，长按则分钟数字会连 续以5为增量递增，到55后转到 00；最高可预约24小时(注：保温 没有预约功能) After pressing the “Preset /Timing” function, then press the “Hr.” key.....existing time by holding onto the “Hr.” key, the figure will change continuously but it still will increase by 1, it turns into 00 when it reaches 24; Another cycle starts as the above. For “Min.” key the figure of minute will increase by 5 based on the existing time. By holding onto the “Min.” key the figure will increase continuously by 5, it turns into 00 when it reaches 55: The maximum preset time available is 24 hours. (Note: the keep warm function has no preset timer).
2	BEEF 牛肉	5小时 5 hours	4~10小时 4 to 10 hours	按“汤”键一下 Press the “Soup” key once	如需调整各功能的炖煮时间，可 通过按“预约/定时”键后，再按 “小时”、“分钟”键自行设定 (“小时”键每按动一次，炖煮



序号 No.	功能 Function	默认时间 Default time	可调整定 时时间 Timing time can be adjusted	操作说明 Operating Instructions	手动调节说明 Instructions for manual adjustment
3	GINSENG 参茸	4小时 4 hours	3.5小时~8小时 3.5 to 8 hours	连续按“汤”键 二下 Press the “Soup” key continuously twice	时间将按1小时为单位进行递增， 以此循环，“分钟”键每按动一 次，炖煮时间将按5分钟为单位进 行递增，以此循环。 If you need to adjust the stewing time of various functions, after pressing the “Preset/Timing” function, you can set it by pressing the keys of “Hr.” and “Minute” (Each time pressing the “Hr.” key, the stewing time will increase by 1 hour and start another cycle. Each time pressing the “Min.” key, the stewing time will increase by 5 minutes and start another cycle).
4	ABALONE 鲍鱼	3小时45分 3 hours 45 minutes	3小时~8小时 3 to 8 hours	连续按“汤”键 三下 Press the “Soup” key continuously three times	
5	MODEL: SC 4040 CORDYCEP 虫草	4小时 4 hours	3小时~8小时 3 to 8 hours	连续按“汤”键 四下 Press the “Soup” key continuously four times	
	MODEL: SC 2050	3.5小时 3.5 hours			
6	MODEL: SC 4040 米粥 PORRIDGE	3小时30分 3 hours and 30 minutes	3~4.5小时 3 to 4.5 hours	按“粥”键一 下 Press the “Congee”key once	
	MODEL: SC 2050	3小时 3 hours			
7	杂粮 GRUEL	4小时 4 hours	3小时~5小时 3 to 5 hours	连续按“粥” 键二下 Press the “Congee”key continuously twice	
8	MODEL: SC 4040 稀饭 Baby Porridge	3小时45分 3 hours 45 minutes	3小时~4.5小时 3 to 5 hours	连续按“粥” 键三下 Press the “Congee”key continuously three times	
	MODEL: SC 2050	3小时30分 3 hours 30 minutes			
9	甜品 DESSERT	3小时45分 3 hours 45 minutes	3小时~7小时 3 to 7 hours	连续按“粥”键 四下 Press the “Congee”key continuously four times	
10	炖 STEW	3小时30分 3 hours and 30 minutes	3小时~6小时 3 to 6 hours	按“炖”键一 下 Press the “Stew” key once	

序号 No.	功能 Function	默认时间 Default time	可调整定 时时间 Timing time can be adjusted	操作说明 Operating Instructions	手动调节说明 Instructions for manual adjustment
11	保温 Keep Warm	无 No	0~24小时 0 to 24 hours	按“保温/取消” 键一下 Press the “Keep warm/Cancel” key once	若无设置保温时间，则为限时 24小时保温。如需自行设定保温 时间，可通过按“预约/定时”键 后，再按“小时”、“分钟”键 自行设定。 If you need to set the keep warm timer, you can press the “Hr.” & “Min.” key to adjust. If timer is not set in Keep Warm mode, it will automatically keep warm for 24hours. After 24 hours it will stay at standby mode.

**温馨提示 : Tips:**

- 易变质的食物，建议不要设定长时间的预约或保温时间，以免食物变质；  
It is recommended not to set a long time of presetting or the heat preservation to prevent the food from deteriorating;
- 若单独选择“保温”功能并无设置时间时，24小时后产品将停止加热并进入到待机状态；若单独选择“保温”功能并设置时间时，定时时间结束后产品将停止加热并进入到待机状态；  
By selecting the “Keep Warm” function alone without setting the timer, it will keep warm for 24 hours and after that will go to standby mode. If timer is set after the desire timing, it will go to standby mode.
- 在所有加热功能工作过程中，可依您个人喜好随时调整炖煮时间，使食物达到最佳的口感；当环境温度较低时，建议延长炖煮时间。可调整的定时时间范围受总的工作时间不能超过该功能可调整的定时时间范围的限制。例：选择“汤”功能工作1小时后再调整定时时间，此时可调整的定时时间范围为3~9小时；选择定时“保温”功能工作1小时后再调整定时时间，此时可调整的定时时间范围为0~23小时。  
In the working process of all functions of cooking, you can adjust the stewing time according to your personal preferences at any time to make the foods achieve their best taste; when the ambient temperature is relatively low, it is recommended that you stew the food for a longer time. The adjustable timing time



range is limited by that the total working time cannot exceed the adjustable timing time range. For example: After selecting the "SOUP" function to work for one hour and then adjusting the timing time, at this moment the adjustable timing time range is 3 to 9 hours; after selecting the "Keep warm" function to work for one hour and then adjusting the timing time, at this moment the adjustable timing time range is 0 to 23 hours.

4. 预约状态时如需更改预约时间，则先按“保温/取消”键取消预约后，再重新进行功能设置；

To change the presetting time in the presetting state, you can press the "Function/Cancel" key to cancel the presetting first, and then reset the function;

5. 炖煮食物或煮粥时，请根据陶瓷内锅上的水位刻度线加入适当的水量，否则容易造成煮干、烧糊等现象；

When stewing food or porridge, please add the appropriate amount of water according to the water levels on the ceramic inner pot, otherwise it is likely to be boiled dry and burned;

6. 使用“米粥”、“杂粮”、“稀饭”等功能煮粥时，建议使用常温水；使用“牛肉”、“鲍鱼”、“虫草”、“参茸”、“甜品”、“炖”等功能炖煮食物，为节约炖煮时间，建议加100℃左右滚水炖煮。

When using the functions of "Congee", etc. to cook porridge, it is recommended that you use the normal-temperature water; when using the functions of "Soup" "Stew", to cook food, it is recommended that you fill hot water of about 100 °C to stew it in order to save time.

#### 注意事项Notes

1. 请使用有合格保护接地的电源，以确保人身安全。

For your safety, use the power source with ground protection.

2. 不要放在易燃易爆的物品附近或表面使用；不要放在潮湿或靠近其它热源的地方使用，以免发生故障和危险。

Do not place the product near or at the surfaces of the items that are flammable and explosive; do not put the product at the places that are wet or near other heat sources to avoid failures and danger.

3. 使用本产品时应放置在儿童触摸不到的稳固平台上。

When using this product, it should be placed at a solid platform out of children's reach.

4. 产品工作时冒出蒸汽，切勿将脸或手靠近蒸汽口，以免烫伤；怕蒸汽的物体不要置于本产品上方；切勿将抹布或类似物品覆盖在蒸汽口上，以避免引发意外或导致产品故障。



When the product is functioning, it will produce steam, do not let the face or hands near the steam vent to avoid scalding; the items that could be harmed by steam should not be put over the product; do not use the rag or similar items to cover the steam vents so as to avoid accidents and product failure.

5. 产品工作时，陶瓷内锅、内锅盖温度会逐渐上升，工作时切勿触摸。工作完成后主机外壳及铝锅内表面温度很高，手或身体请勿触摸或碰及，以免烫伤  
When the product is in operation, the temperature of the ceramic inner pot and the inner pot lid will gradually rise, please do not touch them. After operation is completed, the exterior shell of the main body and the inner surface of the aluminum pot are very hot. Do not touch them with your hands or else it may cause scald injury.
6. 本陶瓷内锅只限于在本产品中加热，不要将陶瓷内锅直接放在明火上加热或置于其它炉具上进行加热。并避免陶瓷件在较热时接触冷水，以免发生爆裂  
The ceramic inner pot can only be cook in this appliance, DO NOT place the ceramic inner pot on an open flame to heat or other stoves for heating, Please prevent the ceramic pot or cover from contacting cold water when they are very hot as it may cause it to crack.
7. 在陶瓷内锅内未盛炖煮食物时，切勿通电干烧，不用时请拔下电源插头。  
When there is no food to be stewed inside the ceramic inner pot, do not power on, it will damage the pot. please unplug the power when not in use .
8. 若产品出现缺水干烧，请立即拔掉电源，让产品自然冷却，冷却过程不能往陶瓷内锅内加水或将陶瓷内锅移出锅体，否则会导致陶瓷内锅损坏；  
while cooking, if the food is running out of water and boiling dry, please immediately unplug the power and leave the product to cool down. During the cooling process, do not add water into the ceramic inner pot or take the ceramic inner pot out of the pot body, otherwise it will damage the ceramic inner pot;
9. 加水量应在最低水位线与最高水位线之间。加水过少或过多，都可能出现故障和危险。  
The water amount added should be between the minimum and maximum water levels. Too little or too much water may lead to malfunction and danger.
10. 插入电源线时，必须插到底，以确保接触良好。  
When plugging in the power cord you must fully insert it in to ensure good contact.
11. 应经常保持电源插头、插座的干燥，禁止用湿手插拔电源插头，以防止触电  
The power plug and socket should be kept dry at all times. Do not touch, insert or pull the power plug with wet hands to prevent electric shock.

12.产品在通电工作时，请勿移动。

Please do not move the appliance when it is power on or cooking.

13.产品在通电工作时，内部可能会发出轻微的“嗒、嗒”响声，这是器具调整火力的声音，不影响正常工作。

When the appliance is in use, the interior part may emit a slight noise of "tock, tock...", which is the sound of the heating adjustment in the appliance and it will not affect its normal operation.

14.在工作状态下按动“保温/取消”键，产品将回到待机状态，即显示屏显示“00:00”。

During the working process, if you press the "Keep warm/Cancel" key, the product will return to the standby mode, the screen will display "00:00".

15.若中途断电，产品将回到待机状态，需重新设置，才能继续工作。

If the power is off halfway, the product will return to the standby state, and it needs to be reset to continue its operation.

16.产品第一次使用时，发热体可能发出轻微异味；另显示屏在刚通电时可能显示闪烁，请拔下插头后重新通电；此两种现象属正常现象，请放心使用。

When the product is used for the first time, the heating element may give out a slight abnormal odor, the screen may flash when just power on, so please unplug it and power in on again. These two symptoms are normal, so please rest assured when using it.

17.陶瓷内锅及陶瓷内锅盖均为易碎器皿，慎防与硬物碰撞及从高处跌落，造成破碎损坏。

The ceramic inner pot and cover are breakable parts, so be careful to prevent them from colliding with hard objects and falling from a height, causing damage.

18.炖煮食物或煮粥时，食物对水的比例不能过高，否则容易造成煮干、烧糊等现象，严重时将会影响陶瓷内锅的使用寿命。

When stewing food or porridge, the proportion of food and water cannot be too high or too low which may cause overflow or inaccurate cooking time causing it to boiled dry and burned. It will

## 保养和维护 Repair and maintenance

### 1.清洗方法

#### 1.Cleaning Methods:

①.产品清洗前应先拔掉电源线，待冷却后再进行清洗。

②.陶瓷件可用洗洁精和海绵清洗，请勿使用硬质钢丝清洗，以免损坏表面。

③.可用湿毛巾擦拭机体外表面，切勿使用腐蚀性液体进行清洗。

④.切勿将电源线、产品整机浸入水中或冲洗，以免电器进水，产生故障，影响安全使用。

①.The power cord should be unplugged, it must be cooled down before the product is being cleaned.

②.The ceramic parts can be washed with detergent and sponge, and do not use abrasive instruments to clean it to avoid damage to the surface.



- ③. Use a wet towel to wipe the exterior of the appliance, do not use corrosive liquids for cleaning.
- ④. Do not clean the power cord and the main body in or with water to avoid product failure and danger.

## 2. 保存方法

产品长期不使用时，请清洁擦净后，装入包装箱中，应存放于通风干燥的地方，以免受潮，影响使用。

## 2. Storage Method

When the product is not in use for a long time, please wipe it clean.

## 3. 故障及排除

### 3. Failure and trouble shooting

序号 Serial No.	故障现象 Failure phenomenon	故障原因 Failure causes	排除方法 Troubleshooting methods
1	不通电 Power failure	电源线插头没插好 The plug of the power cord is not properly connected.	检查电源线插头是否插紧到位 Check whether the power cord plug is inserted in place.
		插座没有电源供应 There is no power supply from the outlet	检查插座是否有电源供应 Check whether the outlet supplies power.
		产品故障 Product failure	请送指定维修点检修 Please send it to our service centre to have it checked and repaired
2	不加热 Not heating	发热体损坏 The heating elements are damaged	请送指定维修点检修 Please send it to our service centre to have it checked and repaired
		产品故障 Product failure	

### CAUTION:

陶瓷件为易碎品，不在保修服务范围，请小心使用。

The ceramic inner pot and cover are fragile items, which are not covered within the scope of warranty services, so please use with care.

使用产品前，请仔细阅读本使用说明书  
请妥善保管本使用说明书

Please read this instruction manual carefully before using the product.  
Please keep this operation manual properly.

感谢您选用 TOYOMI 微电脑电炖锅。使用时，请按本说明书进行操作，本产品  
仅限家庭或类似场所使用。

Thank you for choosing TOYOMI Micro-computer electric Cooker.  
Please operate it according to this instruction manual when using this  
product; this product is intended for household or similar application.

#### 产品性能特点

1. 多功能操作界面，随心选择，使用更加方便；
2. 选用优质全瓷内锅，煲炖食物更加营养、健康；
3. 24小时定时/预约时间设置，任由您掌控；
4. 文火慢炖，轻松炖出营养美味；
5. 煮粥、炖汤一锅多能，为您节约宝贵的厨房空间；

#### **I. Product performance characteristics**

1. Multifunctional interface for convenience.
2. Choose high-quality ceramic inner pots for healthier cooking.
3. 24-hour adjustable time setting.
4. Allows for slow cooking for nutritious and delicious food.
5. Multifunctional and compact to save space (eg, can be used for cooking porridge, stew soup etc.)

#### **SERVICE & IMPORTANT NOTICE**

- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarity qualified person in order to avoid a hazard.
- **WARNING:** This appliance is not intended for use by persons (including children) with reduce physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

**IMPORTED BY NATIONAL ELECTRICAL TRADERS**