

# Toyomi®

 
## Micro-com Electric Slow Cooker

MODEL: SC 3001

Capacity: 3.0L

220-240V~50Hz 215-255W

# INSTRUCTION MANUAL

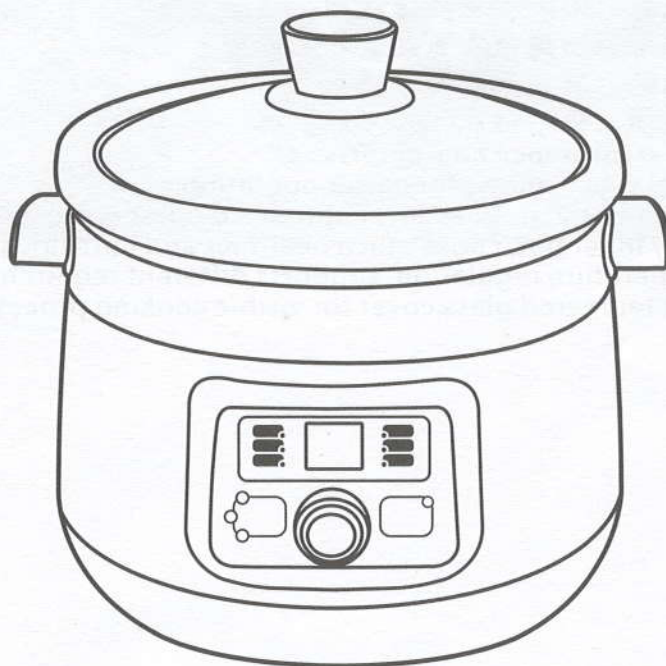

FOR HOUSEHOLD USE ONLY.

## 一、使用前

### I. Before Use

使用产品前, 请仔细阅读本使用说明书

请妥善保管本使用说明书

Please read this instruction manual carefully before using the product.

Please keep this operation manual properly.

感谢您选用 TOYOMI 微电脑电炖锅。使用时, 请按本说明书进行操作, 本产品仅限家庭或类似场所使用。

Thank you for choosing TOYOMI Micro-computer electric Slow Cooker. Please operate it according to this instruction manual when using this product; this product is intended for household or similar application.

 
### 二、产品性能特点

1. 旋钮操控, 操作更便捷;
2. 造型小巧温馨, 双层防烫壳体结构, 高端大气;
3. 选用优质内锅, 煲炖食物更加营养、健康;
4. 三档调温功能, 满足不同调温需求;
5. 透明钢化玻璃上盖, 炖煮过程一目了然。

### II. Product performance characteristics

1. Knob control which allows for easier operation.
2. Compact with warm, double-layer anti-scald outer enclosure.
3. High-quality inner pot, cooks much healthier and nutritious food.
4. 3-level Temperature regulation, supports different requirements.
5. Transparent tempered glass cover for visible cooking process.

三、控制面板  
III. Control Panel

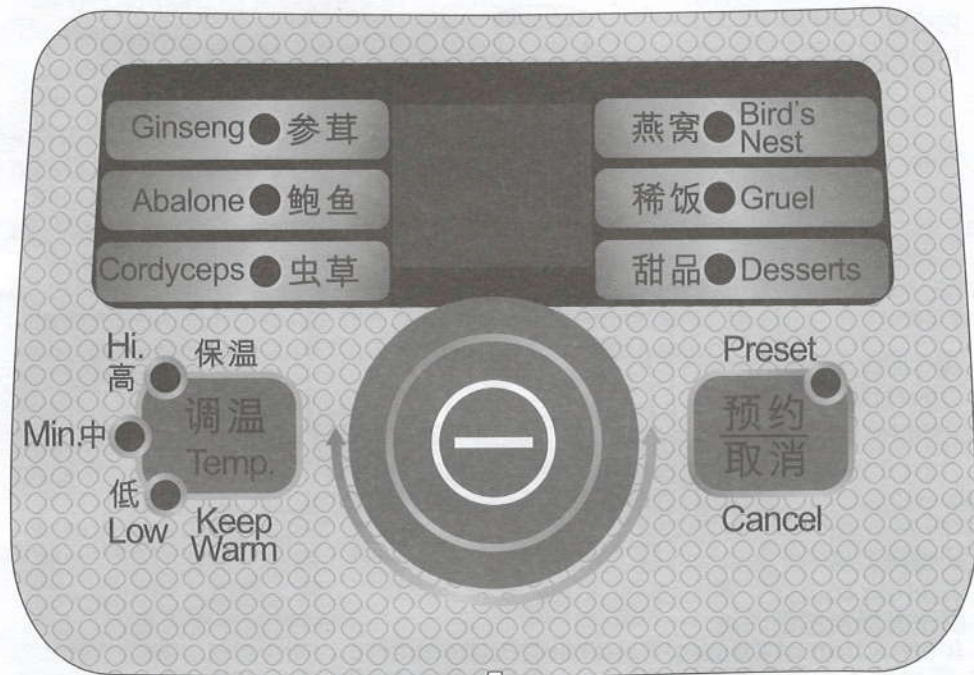 


#### 四、部件名称介绍

### IV. Introduction of parts

#### 1. 主要部件

#### 1. Main Components

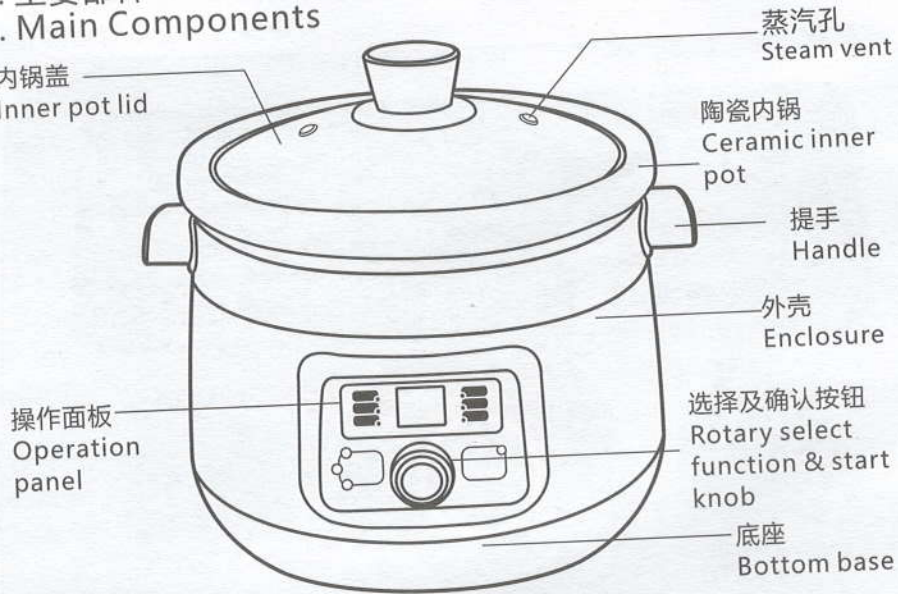

#### 五.使用方法

### V. How to use

#### •操作面板及按键说明

#### •Instruction of Control Panel and Buttons:

1. 待机状态: 显示屏显示 "0.0", 表示电炖锅已进入待机状态。
  2. "选择及确认按钮": 旋转时 (无限位) 用于选择功能, 调节时间; 按下时用于确认选择。
1. Standby Status: Display will show '0.0' when the pot is on standby.
  2. 'Knob': Select functions and regulate time by rotating it (no limit); confirm by pressing it.
- a. 待机状态时, 旋转 "旋钮" 为选择功能。顺时针或逆时针旋转第一格时 "Cordyceps 虫草" 功能指示灯开始闪亮, 后续以当前位置每顺时针或逆时针旋转一格, 则相应功能指示灯按顺向或逆向跳转到下一功能, 6个主功能依次循环。
  - b. 烹饪时间可调时, 旋转 "旋钮" 为调整烹饪时间。顺时针为递增, 逆时针为递减。(1小时以内, 旋钮每格以 "0.1小时" 为单位递增或递减。当时间大于1小时, 旋钮每格以 "0.5小时" 为单位递增或递减。)
- a. On standby status, the function is selected by rotating the 'knob'. With one clockwise (or counterclockwise) step rotation, the indicator of function 'Cordyceps 虫草' will be lighted; rotating more steps from the current position, the respective indicators will light up accordingly. There are 6 different main functions in one complete rotation.

b. To adjust cooking time, rotate the 'knob' to increase or decrease the cooking time. Rotating clock-wise increases time, vice versa. (Within 1 hour, time is increased or decreased in intervals of '0.1 hour' per knob turn. If time is longer than 1 hour, it will be increased or decreased in intervals of '0.5 hour' per knob turn.)

②. 按动“旋钮”：确定所选功能或所调时间。

②. Press the 'Knob': confirm the selected function or time.

a. 在选择功能时，若不按动“旋钮”，则选择无效，6秒后转待机。

b. 选择功能后在调整烹饪时间时，若无按动“旋钮”，则所调时间无效，6秒后转回默认时间，并进入所选功能的默认工作。

a. When selecting functions without pressing the 'Knob', it is regarded as invalid, and returns to standby status after 6 seconds.

b. After function selection, regulating time without pressing the 'Knob' would cause the time to be invalid, and the pot returns to the default work and time of the selected function.

3. “预约/取消”键：

3. 'Preset/Cancel' Button:

① 待机状态下，按“预约/取消”键，预约指示灯和数码管显示的默认预约时间“2.0”都闪亮，6秒内可旋转“旋钮”调整预约时间，最高可预约9.5小时，调整所需时间后，须按“旋钮”确认所调预约时间；接着进入功能选择，通过旋钮选择所需功能后，按“旋钮”确认所选功能，进入指定功能后预约才有效，预约指示灯长亮，相应功能指示灯长亮，预约时间结束所选功能才启动，自动进入程序。例：“参茸”设定预约3.5小时，按“预约/取消”键后3.5小时进入参茸炖煮程序。

② 不按“旋钮”确认功能，则预约无效，6秒钟后回到待机状态。

③ 在工作状态下按动“预约/取消”键，产品将回到待机状态，即显示屏显示“0.0”。

① On standby status, press the 'Preset/Cancel' button, the default time '2.0' of the reservation indicator and the digital display are lighted up, you could rotate the 'knob' to regulate the preset timing (Max. 9.5 hours) within 6 seconds. After the regulation of required time, please press the 'knob' to confirm the preset timing; then enter into function selection. After rotate the knob to select the function, press the 'knob' to confirm the required function. When entering into required function, the preset timing is activated. When the preset indicator and relative function indicator blinks, the preset time is over and will starts to cook. After the cooking is finished, then it will enter into keep warm mode automatically. For example, if the preset timing for "Ginseng" soup is 3.5 hours, it means the soup will starts to cook after 3.5 hours later.

③ If the function is confirmed without pressing the 'knob', the preset timing is invalid, and goes back to standby status in 6 seconds.

④ Pressing the 'Preset/Cancel' button in working status will return the product to standby status with a '0.0' display shown on screen.

4. "保温调温" 键:  
4. 'Keep warm Temp.' Button:

①在待机状态下, 按"保温调温"键, 默认中调温指示灯闪亮, 数码管显示"-.-", 数字区域和中心点同时闪亮, 6秒内每再按"保温调温"键, 调温指示灯闪亮, 变换次序为: 高调温→中调温→低调温。此时可通过旋转旋钮调整调温时间, 6秒内按下旋钮确认所设定时间, 进入定时调温状态, 调温指示灯长亮, 数字区域长亮, 中间点闪亮。高调温档位食物的温度保持在80°C左右, 中调温档位食物的温度保持在65°C左右, 低调温档位食物的温度保持在50°C左右。




②当调整调温时间后, 无法回到无限时调温状态。

① On standby status, press 'Keep Warm Temperature' button to light up the default Temp. setting indicator and display will light up '-.-' within 6 seconds, the Temperature indicator will light up. The order of change is: High Temp. → Medium Temp. → Low Temp.. At this time, you may regulate the Temp. time by rotating the knob, and then pressing it to confirm the set time within 6 seconds, entering into timing Temp. status. The Temp. and digital area will stay lighted up, and the center will be flashing. The food keeps at 80°C in high Temp. step, at 65°C in medium and at 50°C in low.

② After regulating the Temp., you cannot return to the Temp. panel again.




·操作说明:

Operation Instruction:

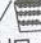①加米方式: 用随机赠送的量杯加米 (加米方式:  X  ✓  X)  
[建议按1杯米配10杯水的配比煮白粥、杂粮粥, 另也可根据个人喜好, 适当加减水量]

②将食物或米洗净后放入内锅内并加入适量的水 (最多不要超过八分满), 再把内锅外壁的水珠、污物等擦拭干净后放入主机内, 盖上内锅盖。在加八分满室温水的条件下, 各功能水开时间约2~5小时左右。为节约炖煮时间, 建议加70°C左右温水炖煮。

③接通电源, 此时显示屏显示"0.0", 证明电炖锅正处于待机状态 (本产品已接安全地线, 须把电源插头插进有安全接地装置的电源插座)。这时可按个人需要开始选择功能下达工作指令。

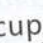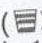① Adding rice with the included measuring cup ( X  ✓  X)  
Recommends to cook rice & cereals gruel with 1 cup of rice and 10 cups of water, also, you can regulate the water amount according to personal preference.

② After cleaning the pot, put food or rice inside the inner pot with proper water (Max. 80% full). Then put the pot into the machine and close the pot cover after cleaning water drops and dirt on pot outer coat. In the condition of adding 80% of normal water, the boiling time of each function is about 2-5 hours.

In order to save boiling time, you are recommended to use 70°C water temperature to cook.

③ Turn on the power supply, and the display is '0.0' on screen, which means the electric slow cooker is in standby status.  
 (The product has already been connected with safe grounding wire, hence insert the plug into a grounded power socket). At this time, start to select the function for work according to individual needs

**各功能的默认时间:**  
**The default time of each function:**

功能 Function	默认时间 Default time (hrs)	可调整定 时时间 Adjustable timing range	手动调节说明 Instruction of manual operation	预约功能 Preset function
Ginseng ● 参茸	3.5小时 3.5hours	0.0~9.5	如需调整各功能的炖煮时间, 可通过旋钮调整时间 If the stewing time of each function needs to be changed, you can rotate the knob.	有 Available
Abalone ● 鲍鱼	5.0小时 5.0hours	0.0~9.5		
Cordyceps ● 虫草	4.5小时 4.5hours	0.0~9.5		
燕窝 ● Bird's Nest	2.6小时 2.6hours	0.0~4.5		
稀饭 ● Gruel	4.0小时 4.0hours	0.0~4.5		
甜品 ● Desserts	4.0小时 4.0hours	0.0~9.5		
	无 N.A.	0.0~9.5	若无设置调温时间, 则为无限时调温, 直至按动“预约/取消”键取消调温功能为止。 如需自行设定调温时间, 可通过旋钮调整时间。 If Temp. function time is not set, it means the Temp. setting is unlimited time until manual cancellation by pressing 'Preset/cancel' button.	无 N.A.

### 温馨提示:

- 1.请根据各种食物的特性,按生活经验设定合适的预约时间,以使食物充分浸泡,易变质的食物,建议不要设定长时间的预约或调温时间,以免食物变质;
- 2.预约状态时如需更改预约时间,则先按“预约/取消”键取消预约后,再重新进行功能设置;
- 3.若单独选择“调温”功能并无设置时间时,产品将一直处于调温工作状态;若单独选择“调温”功能并设置时间时,定时时间结束后产品将停止加热并进入到待机状态;
- 4.当环境温度较低时,建议适当延长炖煮时间,以确保食物熟透。
- 5.产品炖煮过程若要打开玻璃盖,请先按“预约/取消”键停止工作,待水不沸腾时再开盖,以防止锅内沸水溅出烫伤。

### Reminder:

1. According to the food and personal experience, set proper cooking time, so that food can be fully cooked. It is recommended to not set a long cooking or Temp. regulation time, so as to avoid food from spoiling.
2. If you need to change the cooking time while food is still in process, first press the "Preset/Cancel" button to cancel it, and then re-set the function;
3. If the function of "Temperature" is selected separately without setting time, the product will always be in keep warm status; if the function of "temperature adjustment" is selected separately from the setting time, the product will stop heating and enter standby status after a short while;
4. When the room temperature is low, it is suggested that the stewing time be prolonged to ensure that the food is thoroughly cooked.
5. If needed to open the glass cover during the stewing process, please press the "Preset/Cancel" button to stop the work, and then open the cover when the water is not boiling, so as to prevent the boiling water from splashing causes scald.

## 六、注意事项

### VI. Consideration

1. 请使用与铭牌所标电压值一致的交流电源。
2. 请使用有合格保护接地的电源,以确保人身安全。
3. 不要放在易燃易爆的物品附近或表面使用;不要放在潮湿或靠近其它热源的地方使用,以免发生故障和危险。
4. 使用本产品时应放置在儿童接触不到的稳固平台上。
5. 产品工作时,会冒出蒸汽,切勿将脸或手靠近蒸汽口,以免烫伤;怕蒸汽的物体不要置于本产品上方;切勿将抹布或类似物品覆盖在蒸汽口上,以避免引发意外或导致产品故障。
6. 产品工作时,内锅、玻璃盖温度会逐渐上升,工作时切勿触摸。工作完成后主机外壳及铝锅内表面温度很高,手或身体请勿触摸或碰及,以免烫伤。



- 7.本内锅只限于在本产品中加热，不要将内锅直接放在明火上加热或置于其它炉具上进行加热。并避免内锅、玻璃盖在较热时接触冷水，以免发生爆裂。
- 8.在内锅内未盛炖煮食物时，切勿通电干烧，不用时请拔下电源插头。
- 9.若产品出现缺水干烧，请立即拔掉电源，让产品自然冷却，冷却过程不能往内锅内加水或将内锅移出锅体，否则会导致内锅损坏；
- 10.插入电源线时，必须插到底，以确保接触良好。
- 11.应经常保持电源插头、插座的干燥，禁止用湿手插拔电源插头，以防止触电。
- 12.产品在通电工作时，请勿移动。
- 13.在工作状态下按动“预约/取消”键，产品将回到待机状态，即显示屏显示“0.0”。
- 14.若中途断电，产品将回到待机状态，需重新设置，才能继续工作。
- 15.产品第一次使用时，发热体可能发出轻微异味；另显示屏在刚通电时可能显示闪烁，请拔下插头后重新通电；此两种现象属正常现象，请放心使用。
- 16.内锅及玻璃盖均为易碎器皿，慎防与硬物碰撞及从高处跌落，造成破碎损坏。

17.炖煮食物或煮粥时，食物对水的比例不能过高，否则容易造成煮干、烧糊等现象，严重时将会影响内锅的使用寿命。

1. Please use AC power supply with the same voltage as stated in the specification.
2. Please use the power supply with qualified protection grounding to ensure personal safety.
3. Do not put it near or on the surface of inflammable and explosive objects; do not use it in damp areas or near other heat sources to avoid malfunction and danger.
4. When using this product, it should be placed on a stable platform which is out of reach from children.
5. Steam will come out when the product is working. Do not put your face or hands close to the steam outlet to avoid scalding; do not put the unprotected object above the product; do not cover the steam outlet with cloth or similar objects to avoid accidents or product failure.
6. When the product is working, the temperature of the inner pot and the glass cover will rise gradually. Do not touch it when working. After the work is completed, the temperature of the enclosure and the inner surface of the aluminum pot is very hot. Please do not touch it with your hands or body to avoid scalding.
7. The inner pot is only meant to be heated in this product. Do not heat the inner pot directly on an open fire or on other stoves. And avoid washing with cold water when the inner pot and glass cover are hot, so as to avoid damage due to extreme temperature change.
8. When food is not in the inner pot, do not turn on power, and remove the power plug when not in use.
9. If there is water shortage in the product, please immediately remove the power supply and leave the product cool naturally. During the cooling process, water cannot be added to the inner pot

- or remove the inner pot from the pot body, otherwise the inner pot will be damaged;
10. When inserting the power wire, it must be inserted to the bottom to ensure good contact.
  11. It is necessary to keep the power plug and socket dry regularly. Do not use wet hand to insert and remove the power plug in order to prevent electric shock.
  12. Do not move the product when it is on power.
  13. Press the "Preset/Cancel" button in the working state, and the product will return to standby status, that is, the display '0.0' on screen.
  14. If the power is interrupted, the product will return to standby status and need to be reset before it continues to work.
  15. When the product is used for the first time, the heater may emit a slight odor, and the screen may flicker when it is powered. Please remove the plug and re-power it. This is normal, please do not worry and continue using the product.
  16. The inner pot and glass cover are fragile. Be careful not to collide with hard objects or drop from high places, resulting in breakage and damage.
  17. When stewing food or porridge, the proportion of food to water should not be too high. Otherwise, it will easily cause boiling, burning or other situations. This will affect the service life of the inner pot in serious cases.

## 七、保养和维护

### VII. Repair and maintenance

#### 1. 清洗方法

##### 1. Cleaning Methods:

- ① 产品清洗前应先拔掉电源线，待冷却后再进行清洗。
  - ② 切勿将电源线、产品整机浸入水中或冲洗，以免电器进水，产生故障，影响安全使用。
  - ③ 可用湿毛巾擦拭机体外表面，切勿使用腐蚀性液体进行清洗。
  - ④ 内锅和玻璃盖可用洗洁精和海绵清洗，请勿使用硬质钢丝擦洗，以免损坏表面。
- ①. The power should be cut off before cleaning the product, and after cooling.
  - ②. Do not immerse the power wire or product in water or wash it, so as to avoid contact of electrical parts from water, avoiding malfunction and unsafe use.
  - ③. Wet towels can be used to wipe the outer surface of the body; do not use corrosive liquid for cleaning.
  - ④. The inner pot and glass cover can be cleaned with detergent and a sponge. Do not use rigid wire scrubs to scrub it to avoid damaging the surface.

#### 2. 保存方法

##### 2. Storage methods

产品长期不使用时，请清洁干净后，装入包装箱中，应存放于通风干燥的地方，以免受潮，影响使用。

When the product is not in use for a long time, please clean it and pack it in a packing box. It should be stored in a ventilated and dry place to avoid dampness, or it will affect the function.

### 3.故障及排除

#### 3.Troubleshooting

序号 Serial No.	故障现象 Failure phenomenon	故障原因 Failure causes	排除方法 Troubleshooting methods
1	不通电 Power failure	电源线插头没插好 The plug of the power cord is not properly connected.	检查电源线插头是否插紧到位 Check whether the power cord plug is inserted in place.
		插座没有电源供应 There is no power supply from the outlet	检查插座是否有电源供应 Check whether the outlet supplies power.
		产品故障 Product failure	请送指定维修点检修 Please send it to our service centre to have it checked and repaired
2	不加热 Not energized	发热体损坏 The heating elements are damaged	请送指定维修点检修 Please send it to our service centre to have it checked and repaired

4.非专业人员切勿拆卸、维修本产品。

5.如果电源线损坏，为避免危险，必须由本公司或维修部或类似部门的专业人员来更换。

6.当产品出现故障且无法排除时，切勿自行维修，请与我司设立在当地的特约维修网点或本公司客户服务部联系解决。

7.内锅和玻璃盖为易碎品，不在保修范围，请小心使用。

4.Non-professionals must not disassemble or repair this product.

5.If the power cord is damaged, it must be replaced by a professional in the company or maintenance department or similar department to avoid the risk.

6.When the product is faulty and cannot be removed, do not repair it, please send it to TOYOMI service centre to solve the problem.

7.The inner pot and glass cover are fragile and are not covered by warranty, please use with care.

**SERVICE & IMPORTANT NOTICE**

- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- **WARNING:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

**IMPORTED BY NATIONAL ELECTRICAL TRADERS**