

SERVICE & IMPORTANT NOTICE

 
If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

WARNING: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.


Toyoimi®

STEAM IRON INSTRUCTION MANUAL

Please read carefully and keep the instruction well

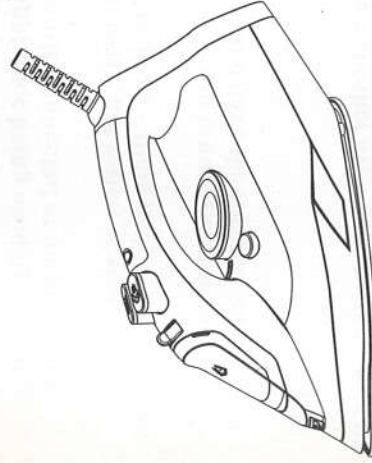

 MODEL: SI 2371
220-240V ~50/60Hz,
1800-2200W

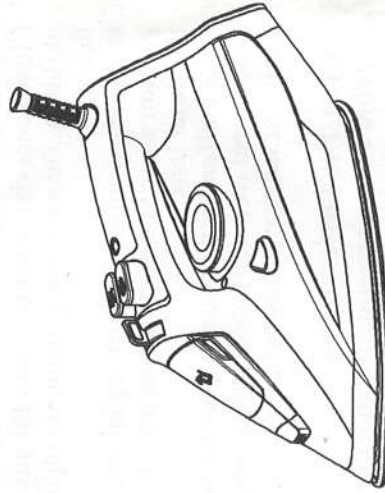

MODEL: SI 2322
220-240V ~50Hz,
2000-2400W

When using your flatiron, basic safety precautions should always be followed, including the following:

IMPORTED BY NATIONAL ELECTRICAL TRADERS

PLEASE NOTE!

Do not use chemical additive, scented substances or decalcifiers. Failure to comply with the above-mentioned regulations leads to the loss of warranty.

READ ALL INSTRUCTIONS BEFORE USING

Use iron only for its intended use.

To protect against a risk of electric shock, do not immerse the iron in water or other liquids.

The iron should always be turned to "Off" before plugging or unplugging from outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.

Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.

Always disconnect iron from electrical outlet when filling with water or emptying and when not in use.

Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron. Take it to a qualified serviceman for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.

Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.

Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down - there may be hot water in the water tank.

If the malfunction indicator goes on, the flatiron is not operating normally. Disconnect from the power supply socket and have the flatiron serviced by a qualified service personnel.

SPECIAL INSTRUCTIONS

To avoid a circuit overload, do not operate another high voltage appliance on the same circuit.

If an extension cord is absolutely necessary, a 13-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

SEE THESE INSTRUCTIONS

More specifically:

DO NOT let children or untrained persons use the appliance without supervision.

NEVER immerse the iron, cable or plug in any liquid.

DO NOT leave the hot iron on fabrics or on flammable surfaces.

DO NOT leave the appliance unnecessarily plugged in. Disconnect the plug from the mains when the appliance is not being used.

 
NEVER touch the appliance with wet or damp hands.

DO NOT use the power cord or the appliance in order to pull the plug out of the power socket.

DO NOT leave the appliance exposed to the weather (rain, sun, etc.).

DO NOT leave the iron or without supervision when it is connected to the power supply.

DO NOT fill the water tank with water before removing the plug from the power socket.

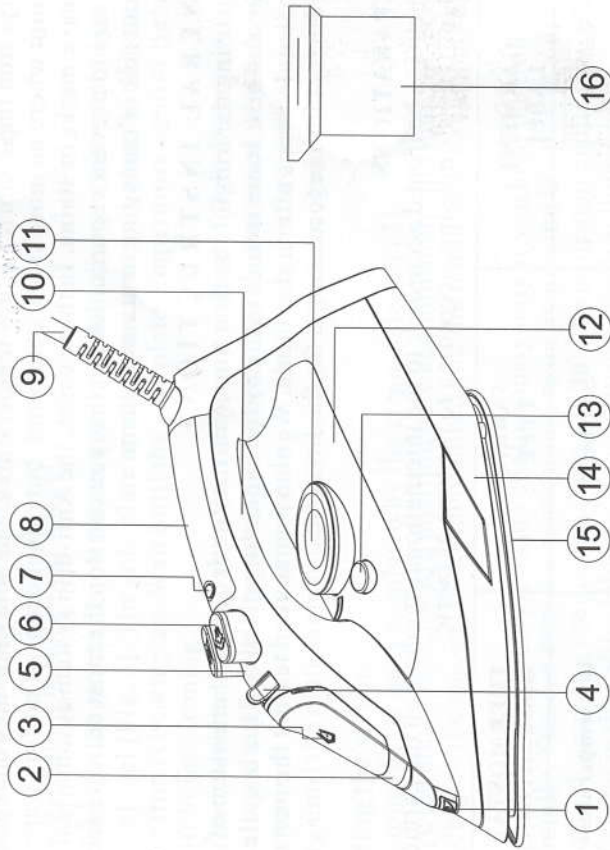

DESCRIPTION OF DEVICE

- (1). Spray nozzle
- (2). Top cover
- (3). Fill cover
- (4). steam button
- (5). Shot-steam button
- (6). Spray button
- (7). Temperature light
- (8). Up handle
- (9). Mains cord
- (10). Handle
- (11). Thermostatic knob
- (12). Water tank
- (13). Self-cleaning button
- (14). Back cover
- (15). Soleplate
- (16). Fill cup

ANTI-CALC SYSTEM

A special resin filter inside the water tank softens the water and prevents scale build-up in the plate. The resin filter is permanent and does not need replacing.

Please note:

Use tap water only. Distilled and/demineralised water makes the "Zero-Calc" anti-calc system ineffective by altering its physicochemical

characteristics.

Do not use chemical additives, scented substances or decalcifiers. Failure to comply with the above-mentioned regulations leads to the loss of warranty.

ANTI-DRIP SYSTEM



 

With the anti-drip system, you can perfectly iron even the most delicate fabrics. Always iron these fabrics at low temperatures. The sole plate may cool down to a point where no more steam comes out, but rather drops of boiling water that can leave marks or stains. In these cases, the Anti-drip system automatically activates to prevent vaporization, so that you can iron the most delicate fabrics without risk of damaging or staining them.

GENERAL INSTRUCTIONS

When using the iron for the first time, you may notice a slight emission of smoke and hear some sounds made by the expanding plastics. This is quite normal and it stops after a short time. We also recommend testing the iron over ordinary cloth before using it for the first time.

REPARATIONS

Garments to be ironed according to the international symbols on the garment label, or if this is missing, according to the type of fabric.

GARMENT LABEL	FABRIC TYPE	THERMOSTAT REGULATION
	Synthetic	Low temperature
	Silk-wool	Medium temperature
	Cotton-linen	High temperature
	Fabric not to be ironed	

Start ironing the garments that require a low temperature. This reduces the waiting times (the iron takes less time to heat up than to cool down) and eliminates the risk of damaging the fabric.

STEAM IRONING

Empty the water tank

Check that the plug is disconnected from the power socket. Move the steam selector (3) to "0" [Fig. 1]. Open the lid (2).

Raise the tip of the iron to help the water enter the opening without

overflowing.

- Slowly pour the water into the water tank using the special measure (12) and making sure not to go over the maximum level (about 260ml) indicated by "MAX" on the reservoir [Fig. 2].
- Close the lid (2).

Selecting the temperature.

- Place the iron in a vertical position.
- Insert the plug in the power socket
- Adjust the thermostat knob (9) according to the international symbol on the garment label [Fig. 3]. The sole plate temperature control light (8) indicates that the iron is heating up. Wait until the sole plate temperature control light goes off before ironing.
- Warning: during ironing, the plate temperature control light (8) comes on at intervals, indicating that the selected temperature is maintained. If you lower the thermostat temperature after ironing at a high temperature, do not start ironing until the plate temperature control light comes on again.

Selecting the steam.

The amount of steam is regulated by the steam selector (3).

- Move the steam selector to a position between minimum and maximum depending on the amount of steam required and the temperature selected [Fig. 1].

Warning: the iron gives off steam continuously only if you hold the iron horizontally. You can stop the continuous steam by placing the iron in a vertical position or by moving the steam selector to "0". As indicated on the thermostat knob (9) and in the initial table, you can only use steam at the highest temperatures. If the selected temperature is too low, water may drip onto the plate.

Selecting Shot-steam and steam when ironing vertically.

Press the shot-steam button (4) to generate a powerful burst of steam that can penetrate the fabrics and smooth the most difficult and tough creases. Wait for a few seconds before pressing again [Fig. 4].

By pressing the shot-steam button at intervals you can also iron vertically (curtains, hung garments, etc.) [Fig. 5].

- **Warning:** the shot-steam function can only be used at high temperatures. Stop the emission when the sole plate temperature control light (8) comes on, then start ironing again only after the light has gone off.

DRY IRONING

To iron without steam, follow the instructions in section "steam ironing", leaving the steam selector (3) on position "0".

Spray Function

Make sure that there is water in the water tank. Press the spray button (5) slowly (for a dense spray) or quickly (for a vaporized spray) [Fig. 6]. Warning: for delicate fabrics, we recommend moistening the fabric beforehand using the spray function (5), or putting a damp cloth between the iron and the fabric. To avoid staining, do not use the spray on silk or synthetic fabrics.

LEANING

Please note: before cleaning the iron in any way, make sure that the appliance plug is not connected to the any power socket. Any deposits, starch residue or impurities left on the sole plate can be removed using a damp cloth or an unabrasive liquid detergent. Avoid scratching the sole plate with steel wool or metallic objects. The plastic parts can be cleaned with a damp cloth then wiped over with a dry cloth.

SELF-CLEANING

The self-cleaning feature cleans inside the sole plate, removing impurities. We recommend using it every 10-15 days. Directions: Fill the water tank up to the maximum level indicated and set the steam selector (3) to " ? " 9) to the maximum temperature and wait for the light (8) to turn off. Pull the plug out of the power socket and hold the iron horizontally over the tank.

Hold the cleanout button (10) setting until all the boiling water, steam, impurities flushes out [Fig. 7]. When the soleplate has cooled down, you can clean it with a damp cloth.

HOW TO PUT IT AWAY

Disconnect the plug of the iron from the power socket. Empty the water tank by turning the iron upside down and gently shaking it. Leave the iron to cool down completely. Wind the main cord round the cord storage facility. Always place the iron away in a vertical position.

ADVICE FOR GOOD IRONING

We recommend using the lowest temperatures with fabrics that have unusual finishes (sequins, embroidery, flush, etc.). For synthetic garment (e.g. 40% cotton 60% synthetics), set the thermostat to the temperature of the fibre requiring the lower temperature. If you don't know the composition of the fabric, test the temperature on a hidden corner of the garment. Start with a low temperature and increase it gradually until it reaches the ideal temperature. Avoid iron areas with traces of perspiration or other marks: the heat of the sole plate fixes the stains on the fabric, making them irremovable, with the risk of forming a yellow mark. To avoid leaving a shining mark on silk, woolen or synthetic garments, iron

them inside out.

To avoid leaving a shining mark on velvet garments, iron in one direction (following the fibre) and do not press down on the iron. The heavier the washing machine is loaded, the more garments come out creased. This also happens when the spin drying revolutions are very high. Many fabrics are easier to iron if they are not completely dry. For example, silk should always be ironed damp.

PLEASE NOTE!

- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been
- Given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance
- The iron must not be left unattended while it is connected to the supply mains
- The plug must be removed from the socket-outlet before the water tank is filled with water
- The iron must be used and placed on a stable surface
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision
- Keep the iron and its cord out of reach from children less than 8 years of age when it is ON or cooling down.