

# MAINTENANCE

**1**

**Filter maintenance**  
Take out the central HEPA filter and wash by running water, just as above picture shows.

**2**

Assemble the dried accessories as picture shows.

**3**

Take out the exhaust filter tapping it or washing in running water drying naturally then put it back.

## SERVICE & IMPORTANT NOTICE

- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarity qualified person in order to avoid a hazard.
- **WARNING:** This appliance is not intended for use by persons (including children) with reduce physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safe.

**IMPORTED BY NATIONAL ELECTRICAL TRADERS**




**ELECTRIC VACUUM CLEANER**  
MODEL: VC 9347

220-240V~50HZ

## INSTRUCTION MANUAL

Please read carefully and keep the instruction well

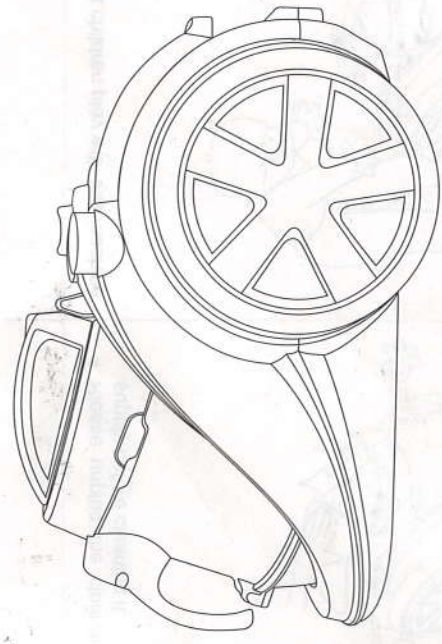

This appliance is for household use only.

Thanks for purchasing this product. Please read the instruction manual carefully before operation and well preserve it.

## SAFETY DIRECTIONS


1. Check before operation that the local power supply is the same as the specifications on the rating plate.



2. Don't use the vacuum cleaner to suck glowing ash, glowing cigarettes or matches, water, damp dust, etc..





3. Don't let children play with this machine.

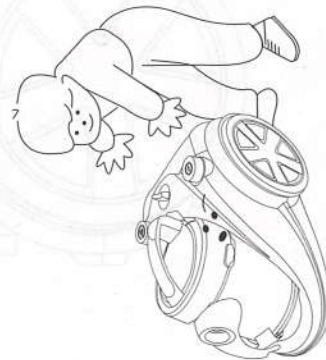

4. Please unplug the cleaner from the supply before cleaning it.




## PARTS NAME

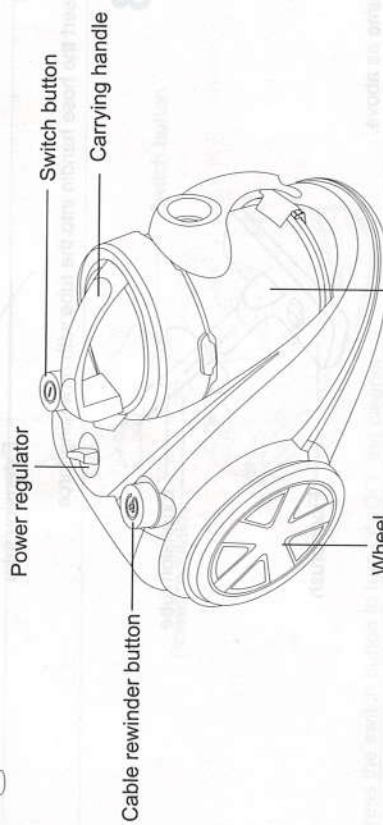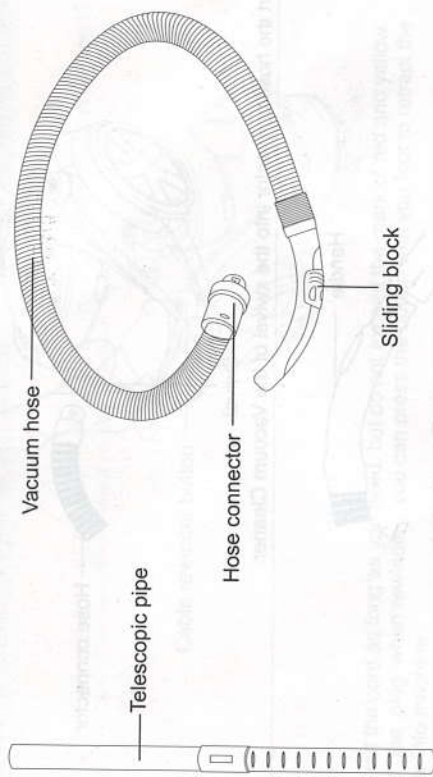

# OPERATION METHOD

1

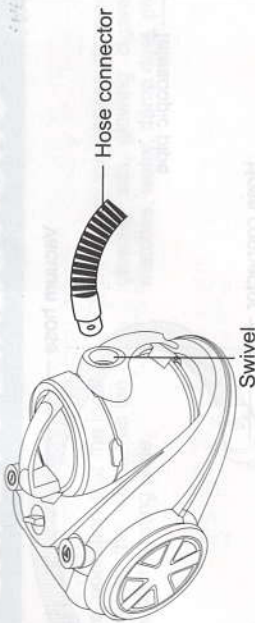


Insert the hose connector into the swivel of the Vacuum Cleaner.

2




Insert the hose handle into the tube with a twisting force.

3

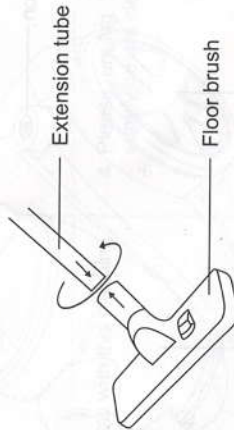

Same as above.


4

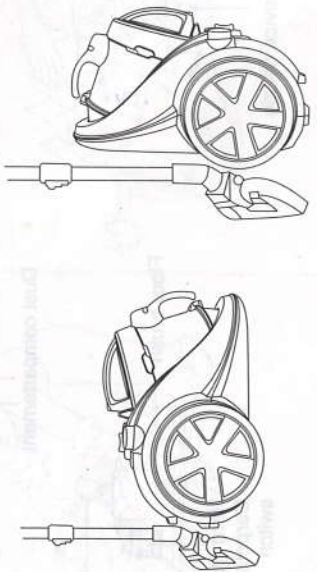

Standing position. Put the fixing block into the hole on the body.


# OPERATION METHOD

1

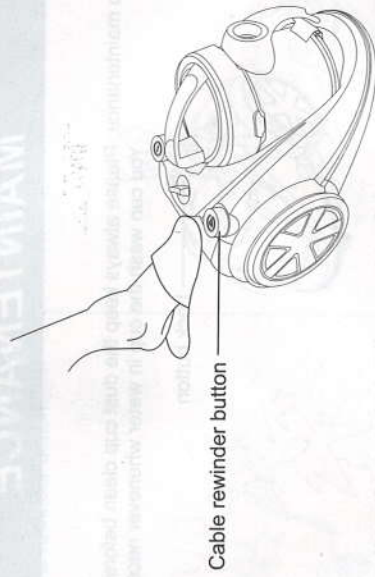


1. Pull out the cord as long as you need, but do not exceed the mark of red and yellow.
2. Hold the plug when rewinding, you can press the button with your foot to retract the cable into machine.

2

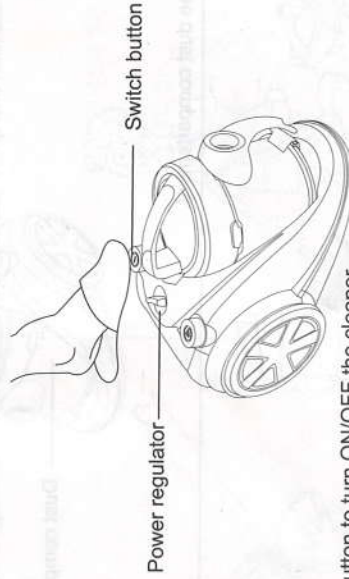

1. Press the switch button to turn ON/OFF the cleaner.
2. Using power regulator to adjust the power steplessly. Please set the power regulator at MIN position before turning on the unit. (only for models with this function)

3

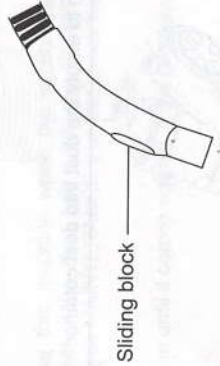


You can adjust the air flow by push the sliding block up and down.


**WARNING:** This machine is a cyclonic design, no dust bag filter. The LED dust indicator will light up when the dust compartment is full, or filters are clogged. You can follow below **maintenance** instructions resolve this problem.

## MAINTENANCE

- 1** Dust cup maintenance: Please always keep the dust cup clean before each operation. You can wash the cup in water whenever necessary.

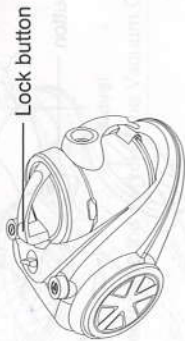

Press the locking block, then push front to open the dust compartment.

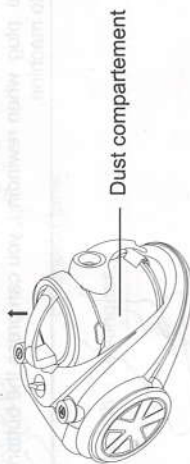

Take up the dust compartment.







Press the automatic release button to empty the dust into dust container.



Push the dust compartment down to fix it on the body.

## CAUTION

<p>Don't pull the cord to unplug, when you would like retract the cable, hold the plug and then press the rewinder button.</p> 	<p>Keep off from ovens and stoves, etc..</p> 
<p>Don't suck at large fragments or sharp objects.</p> 	<p>Don't wrest, tramp and haul the house.</p> 

**WARNING:** Never use this machine when the suction power becomes very weak. When this happens, please check if the dust bag is full (see TO REPLACE DUST BAG); then check both filter if they are dirty (see MAINTENANCE); at last check the floor brush, tube, hose if any part is jammed.

Don't use the machine until it comes normal. If the problem remains, please submit to Repairing Center.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.