



BMW READING INSTRUCTIONS WITH CODIFICATION REQUIRED


PLEASE NOTE:

Since the master ECU and the slave ECU have an identical file, the XTREME Performance Tool will read only on the master ECU. Then the XTREME Performance Tool will offer the writing procedure for both control units.

- Reading: 40 min.
- First writing: 15 min. each ECU
- Next writings: few min.

WARNING: FOR CORRECT READING & WRITING OPERATIONS YOU MUST:

Step 1: Connect a stabilized power supply to the car battery (**12VDC / 60A suggested**)

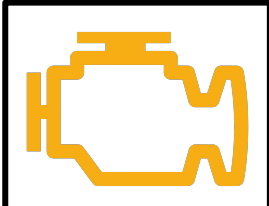Step 2: To turn on Terminal 15 / Ignition Switch, please press the Start / Stop button 3 times without pressing the brake pedal, making sure the **Check Engine light**  **is visible**

Step 3 : Fasten seat belt ensuring no one is sitting in the driver's seat. (**Keep the car key inside the vehicle**)




Do not Start the Vehicle at any time during the procedure described above.

***Mandatory Instructions are provided in order to perform the reading / writing procedures. Failing to comply with the instructions may compromise the functionality of the system, which remain under the client's exclusive liability. ***



ECU CONFIGURATION

- A) Connect the OBDII / diagnostic cable to the device and to the plug of the vehicle*
- B) Wait for the correct identification of the communication protocol for the vehicle.
Follow the guided procedure on the display of the unit.

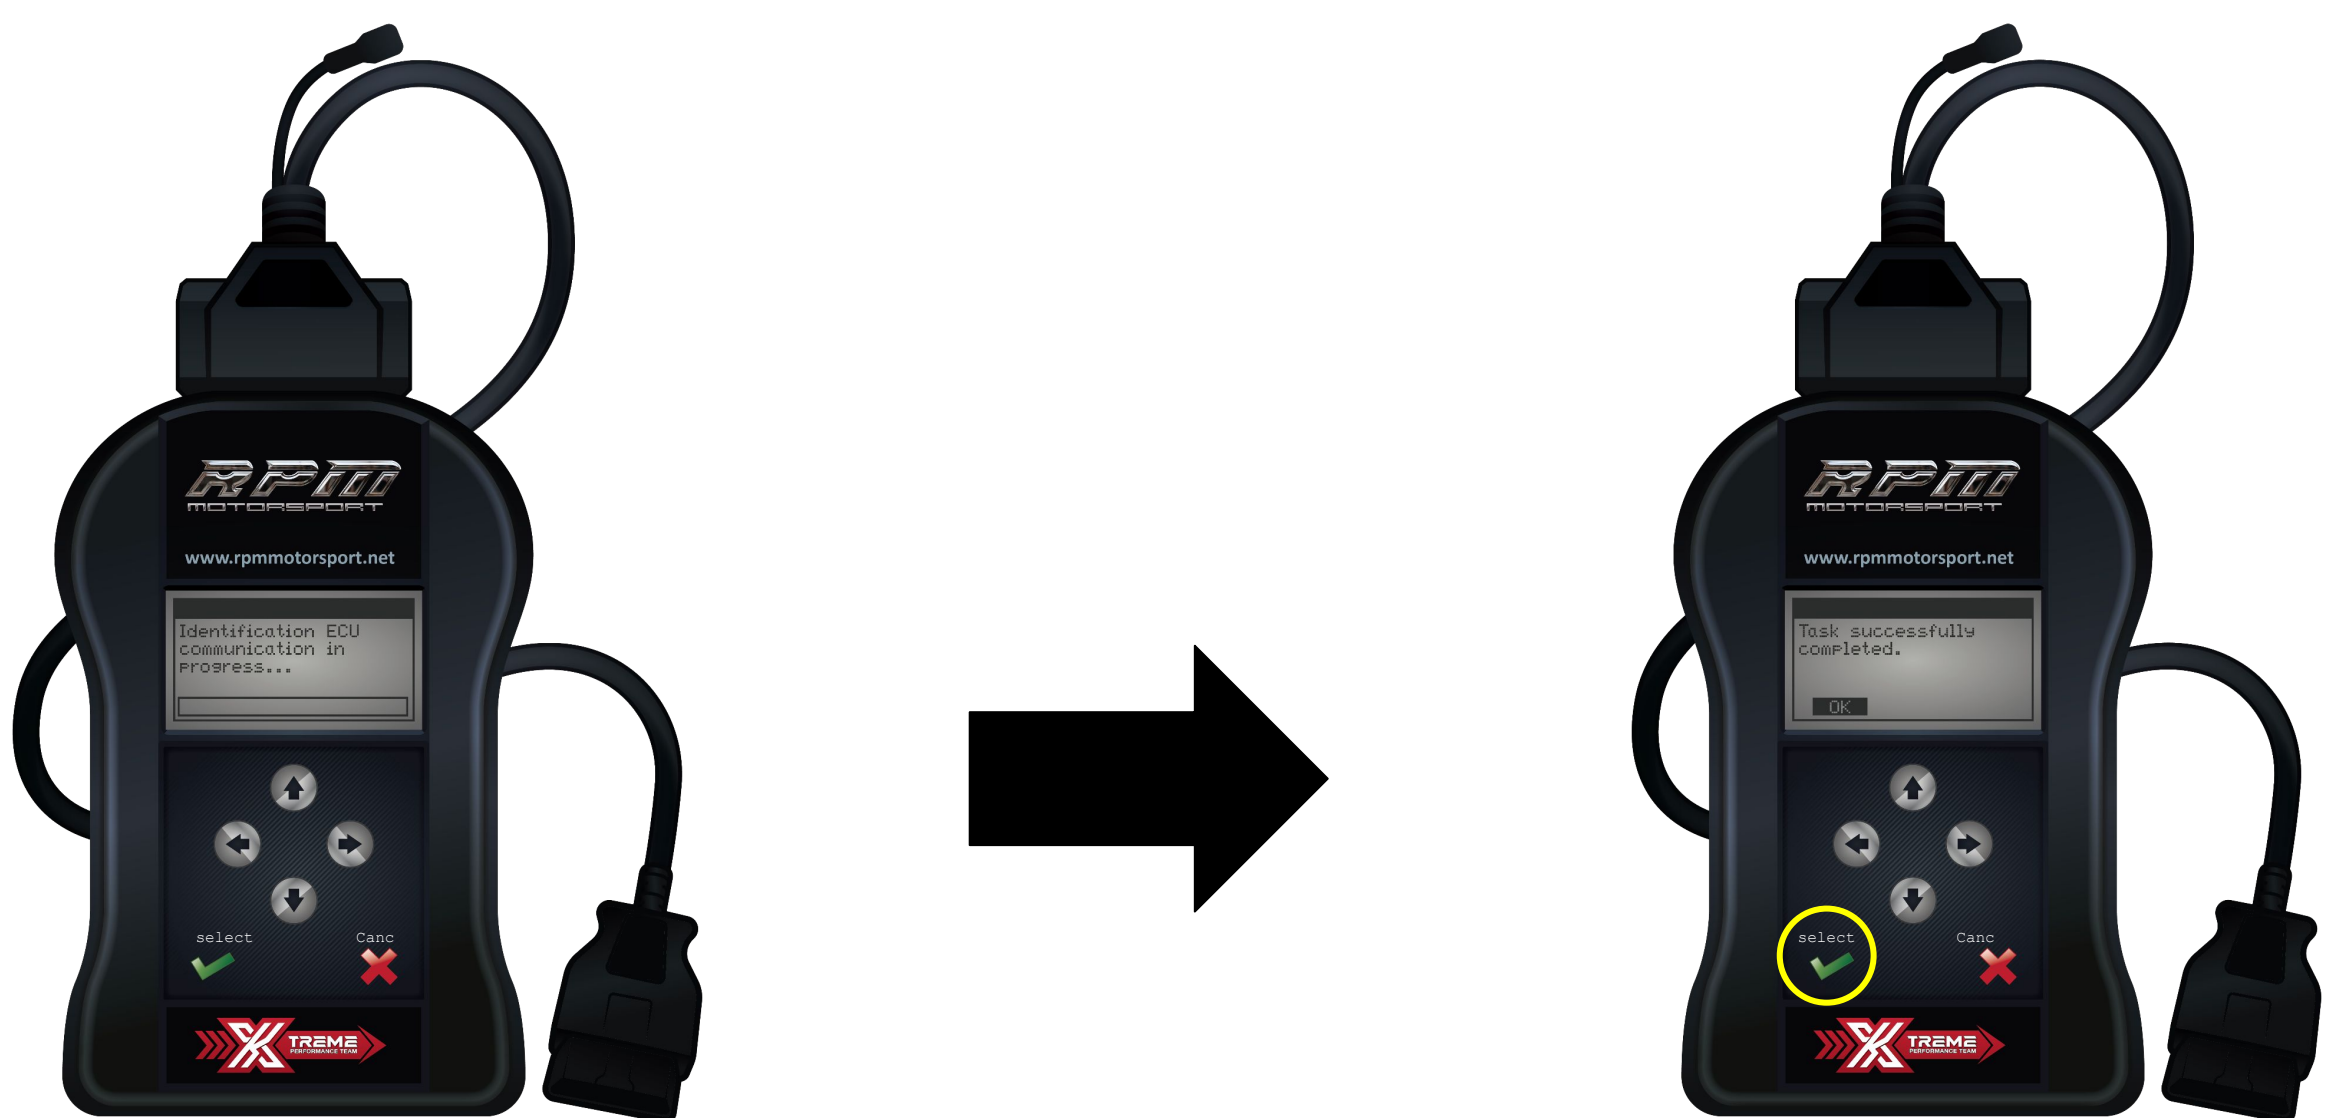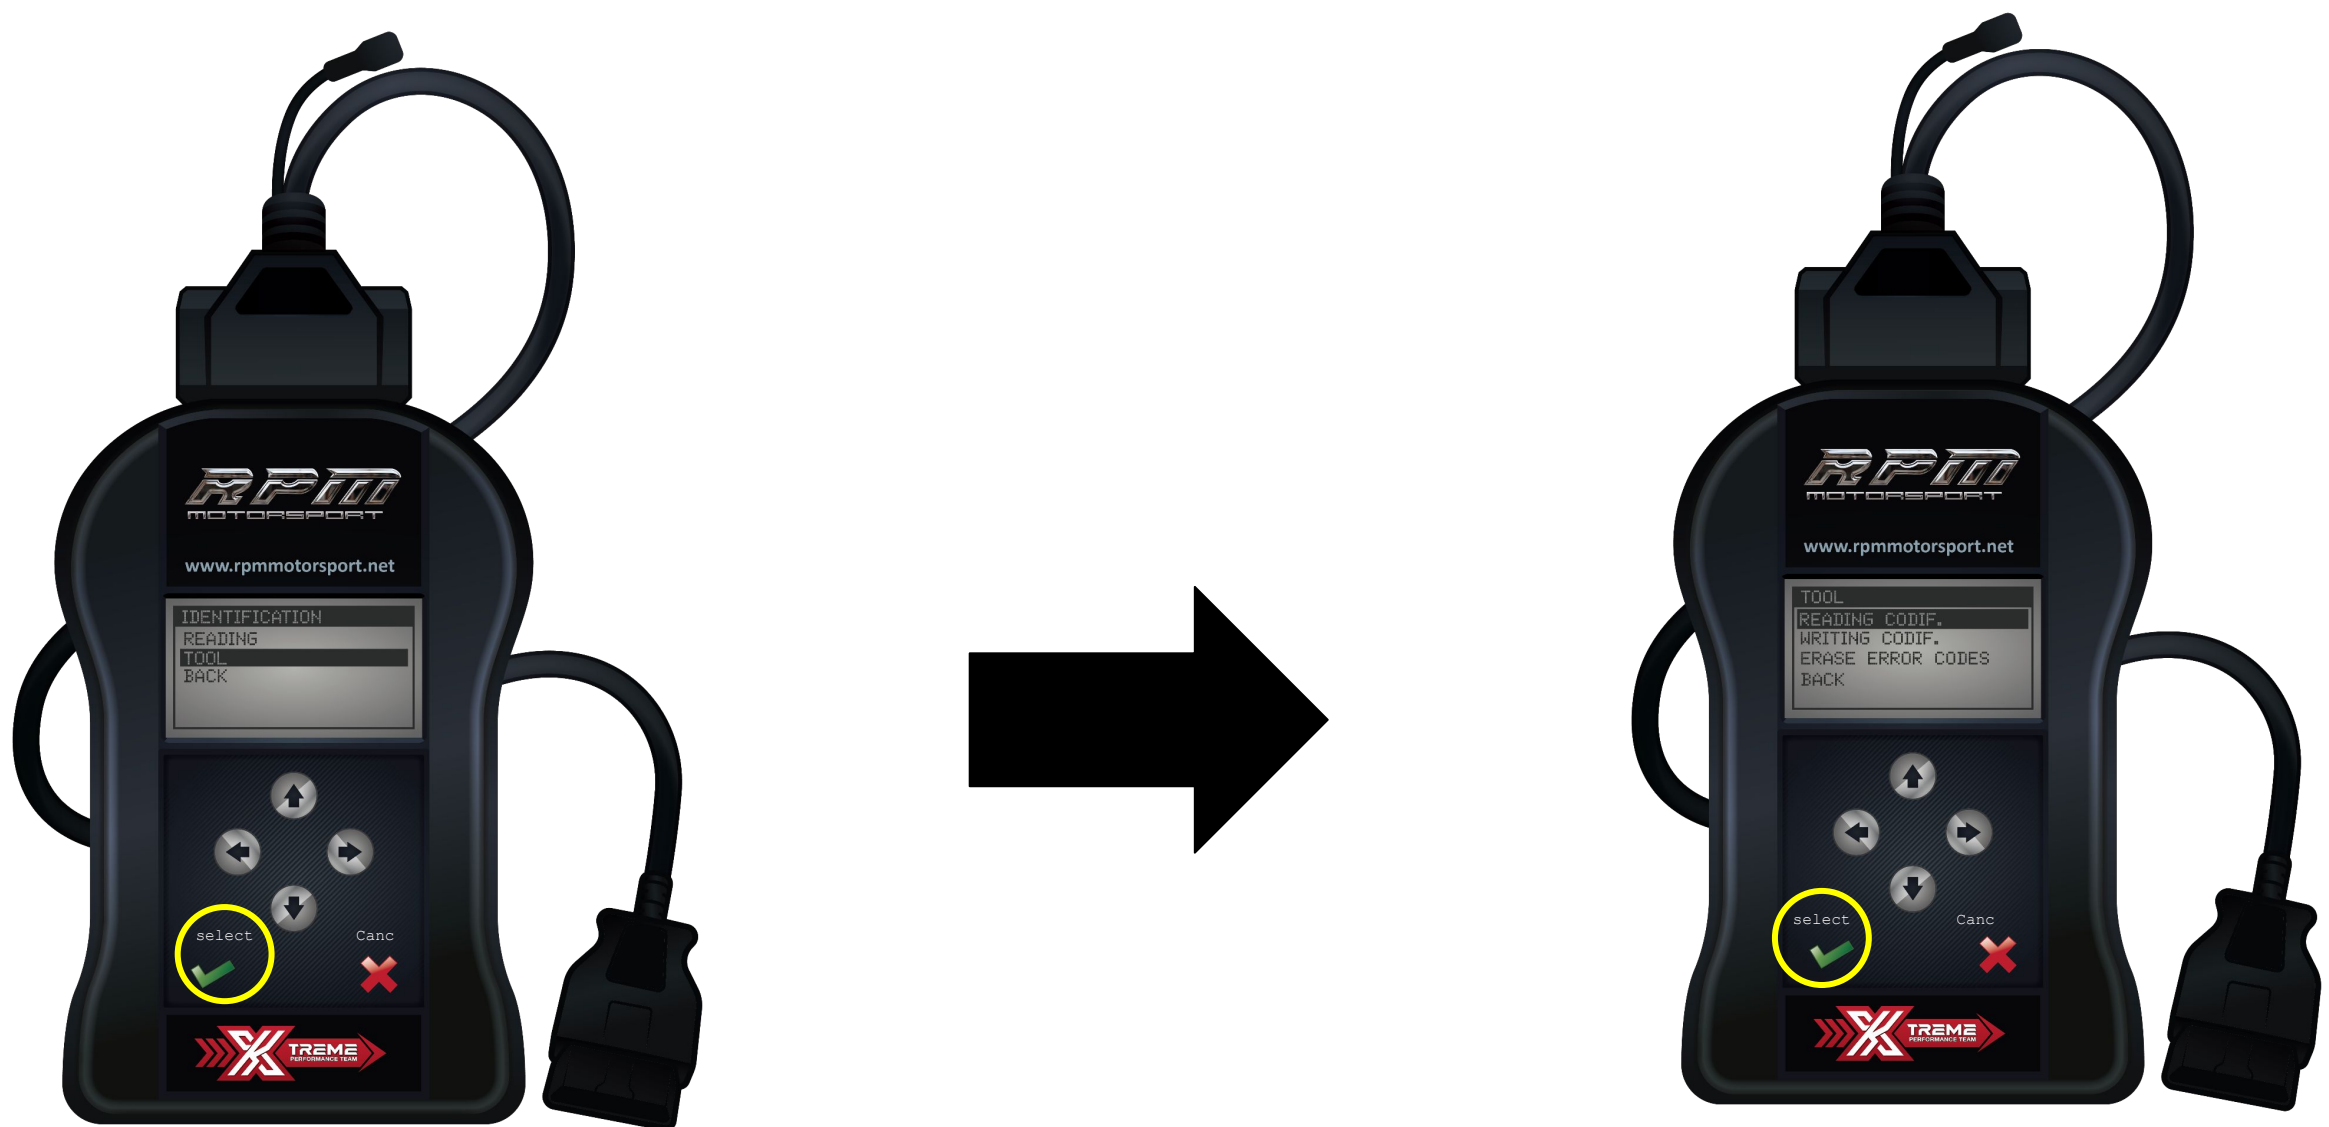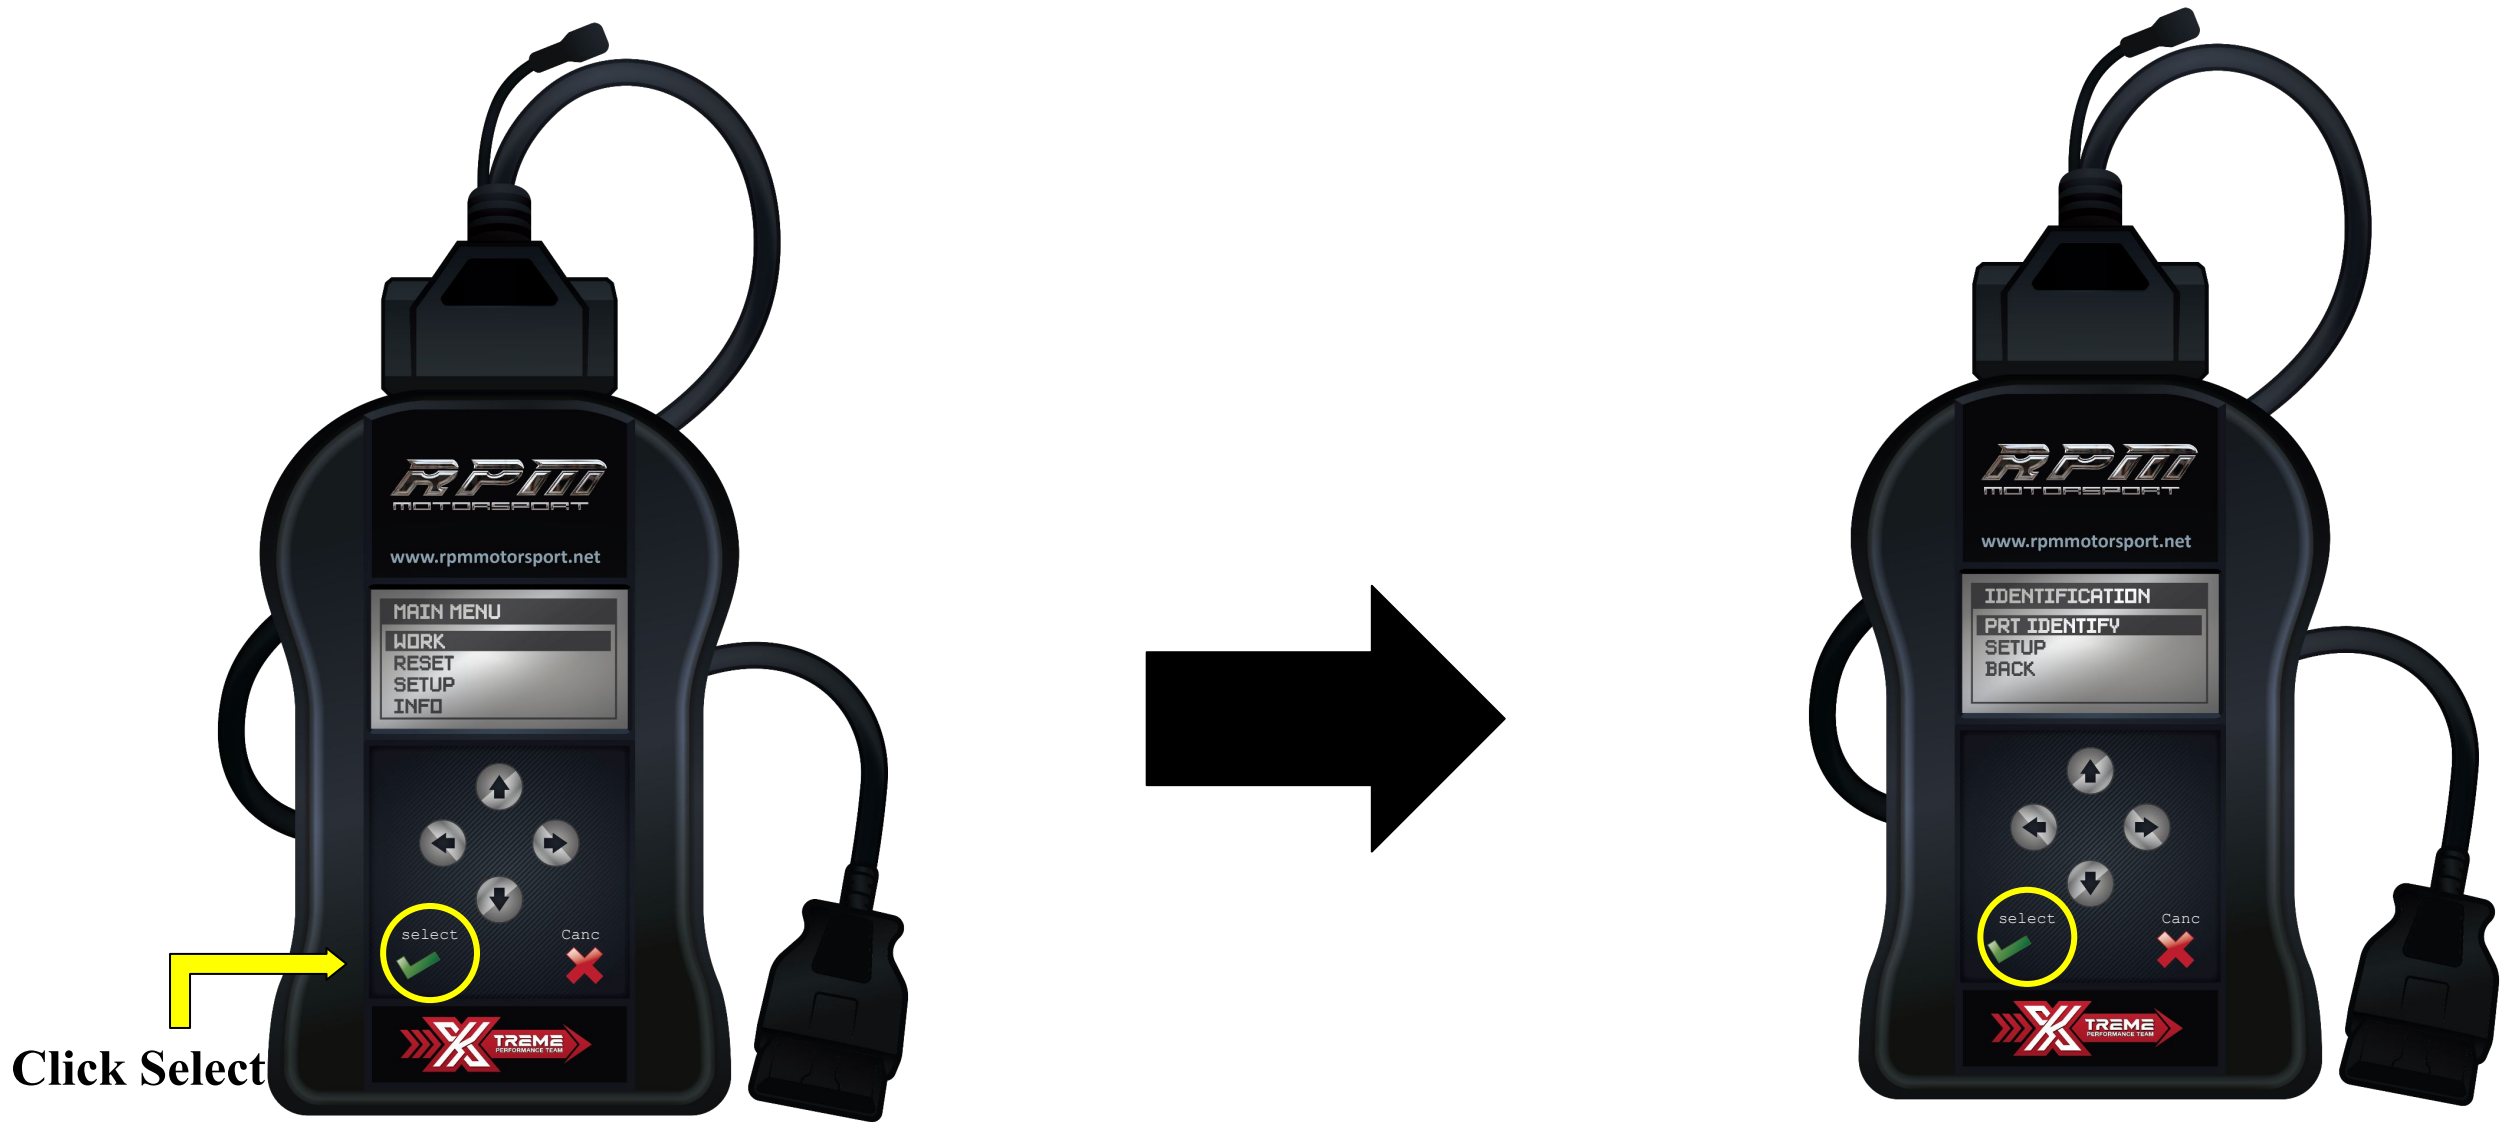


*Please keep the XTREME Performance Tool device plugged in to your vehicle & continue with the Reading Instructions on the next page



BMW M5 F90 READING INSTRUCTIONS

After the correct identification of the protocol proceed with the reading (or identification only) of the software stored in the vehicle ECU/DME, always following the guided procedure on the display of the unit.

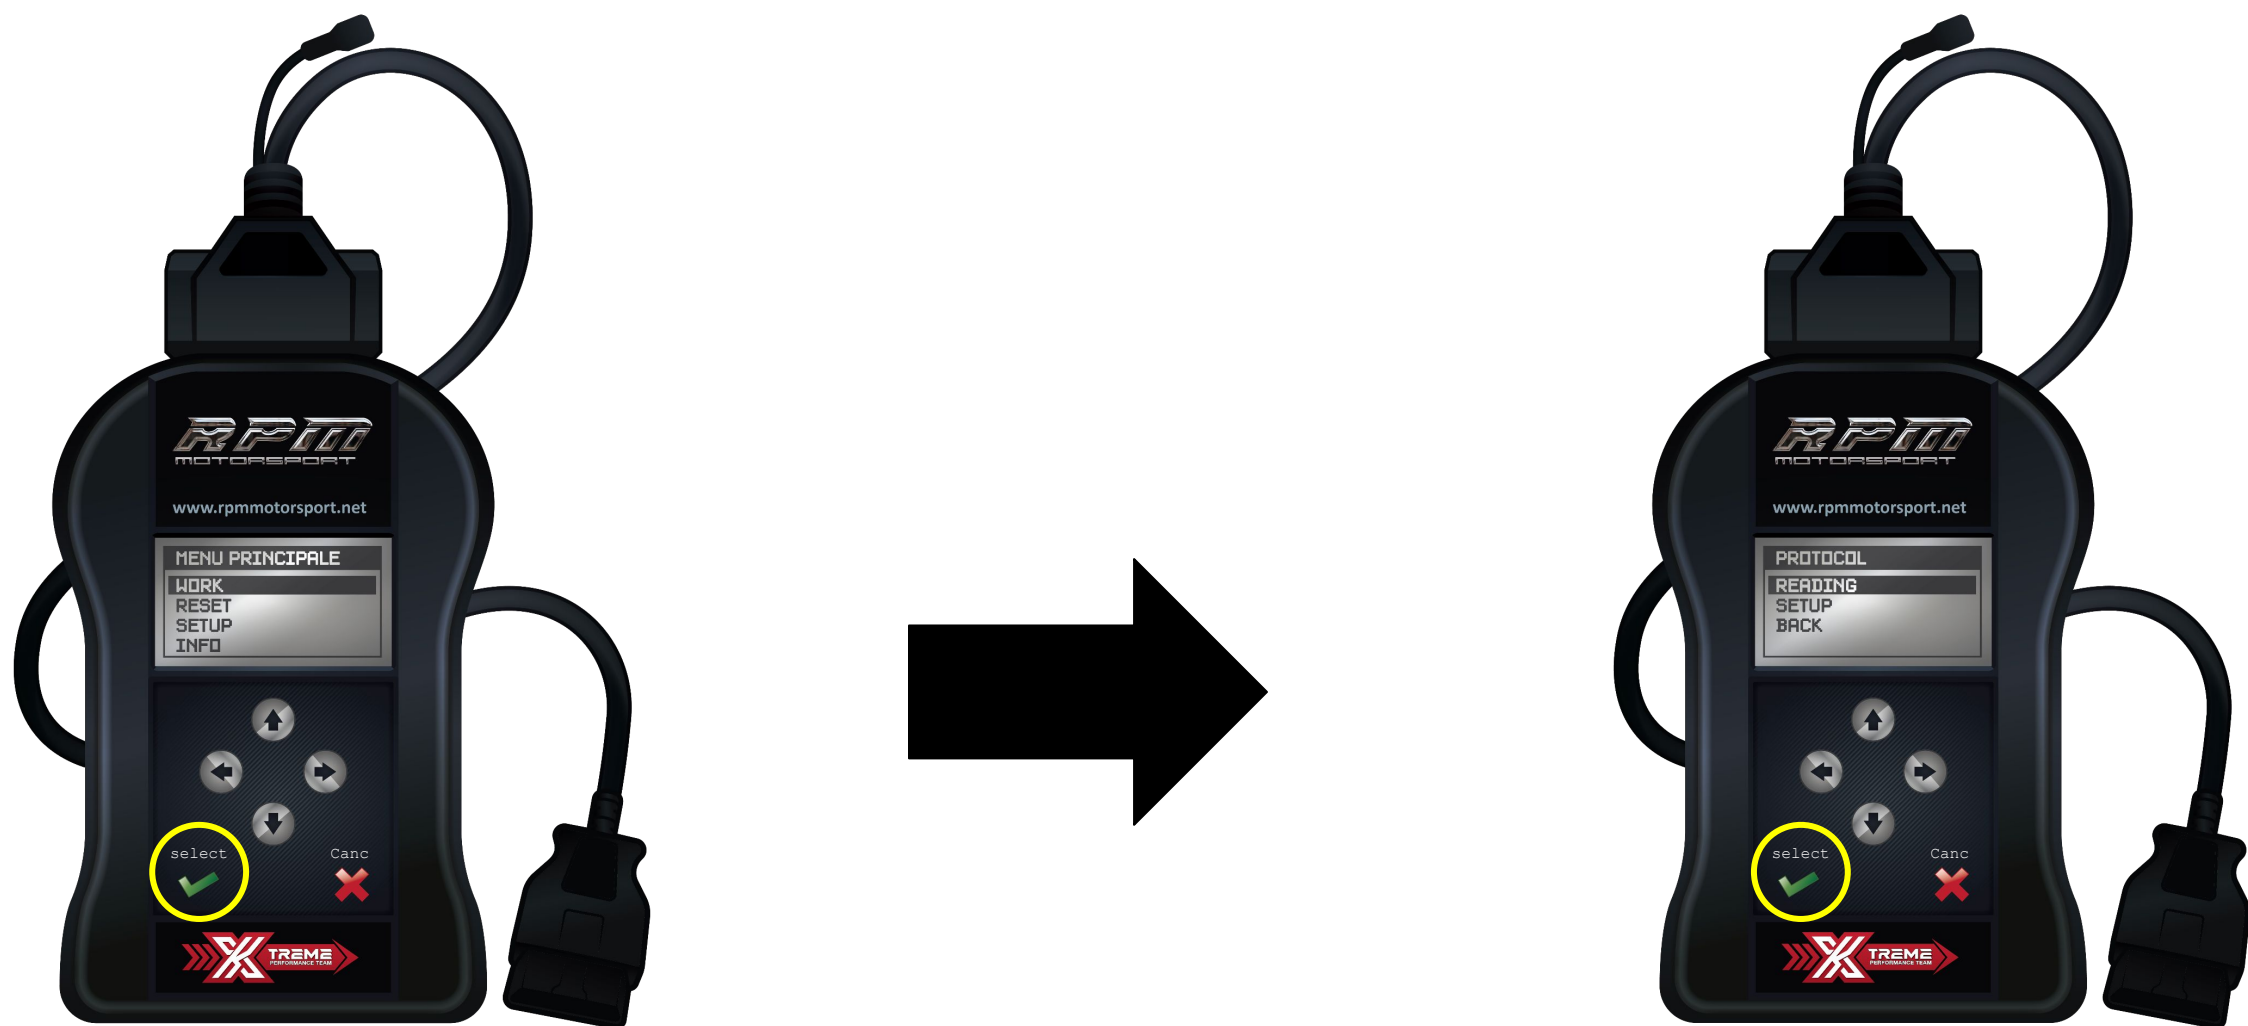


***Please unplug the XTREME Performance Tool device from your vehicle before plugging the USB cable to your PC.**




SOFTWARE INSTALLATION

[\(CLICK TO DOWNLOAD\)](#)

1. **XTREME Performance Client Setup**

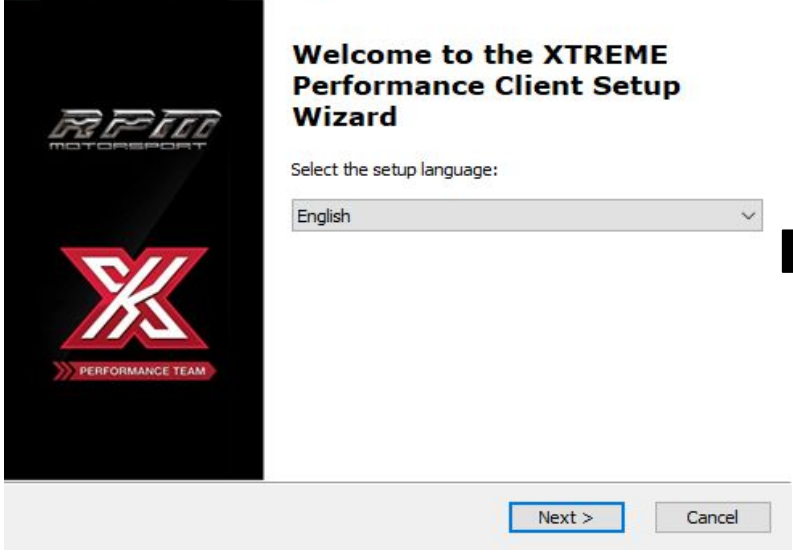


2. **XTREME Performance Client Setup**

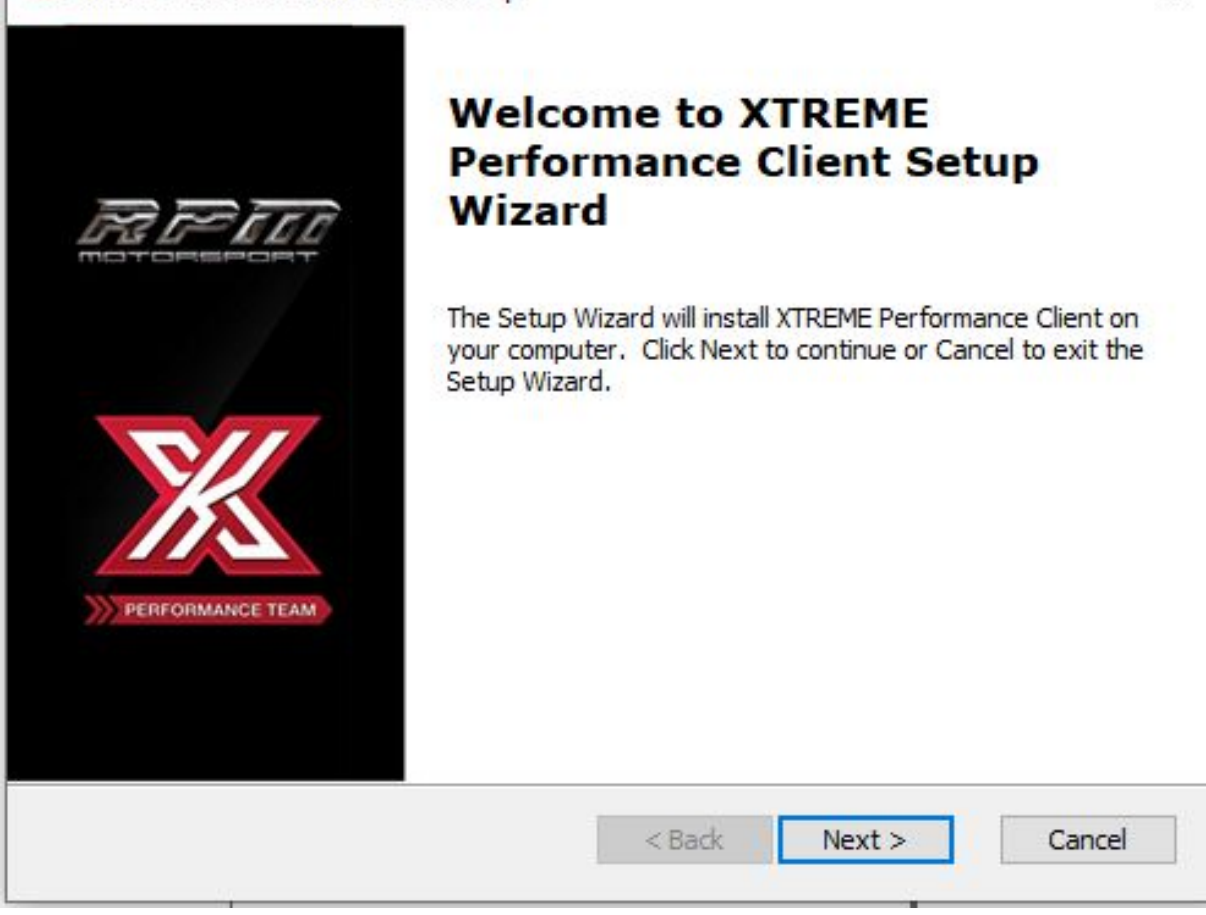


Select the directory where the XTREME Performance software will be installed and follow the setup procedure by clicking NEXT.


3. **XTREME Performance Client Setup**

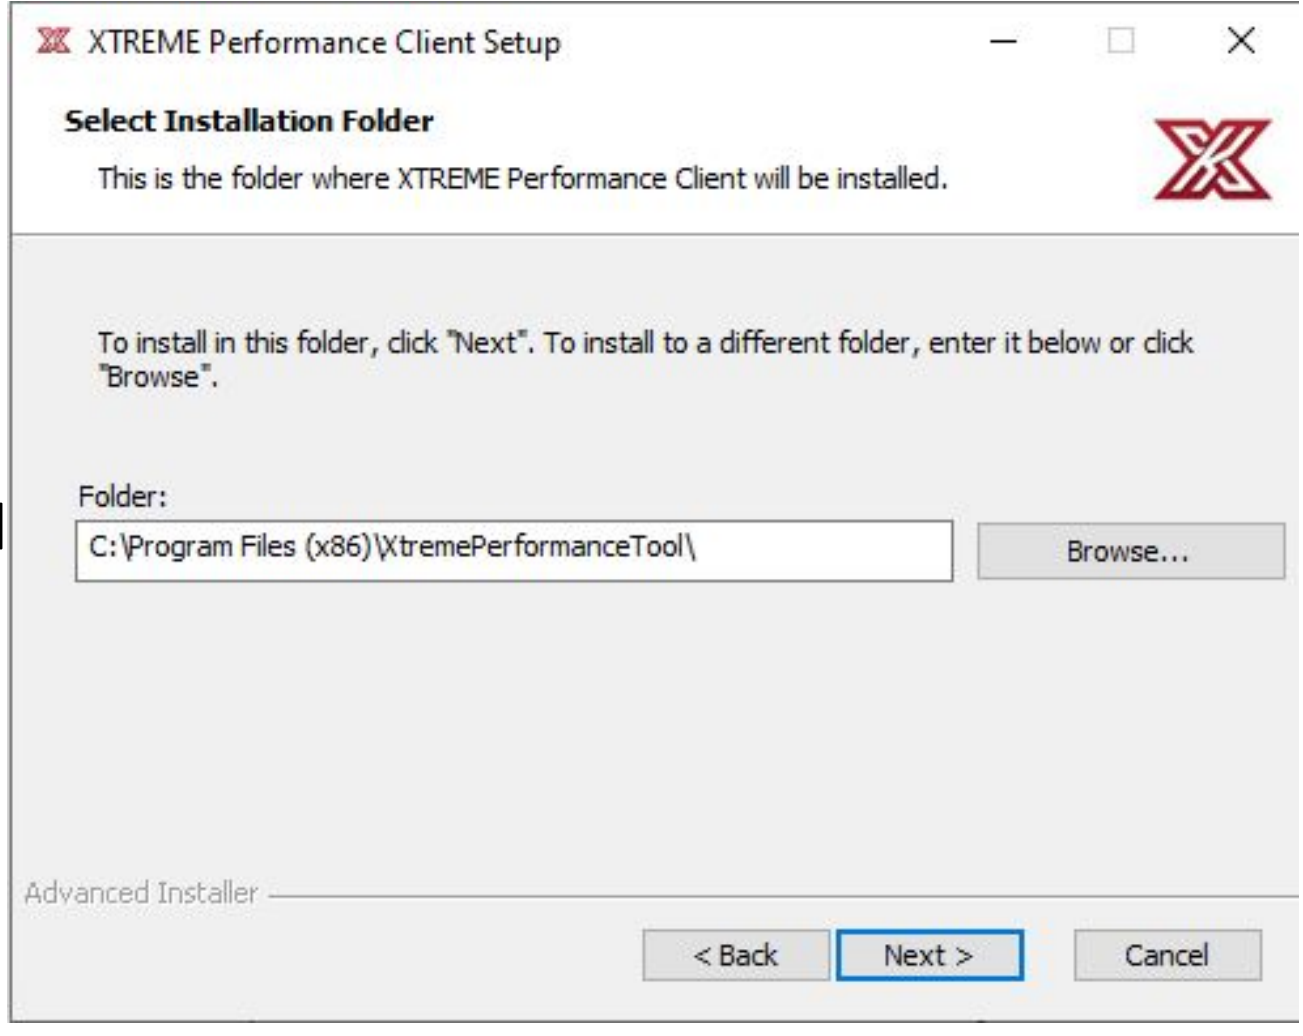


4. **XTREME Performance Client Setup**

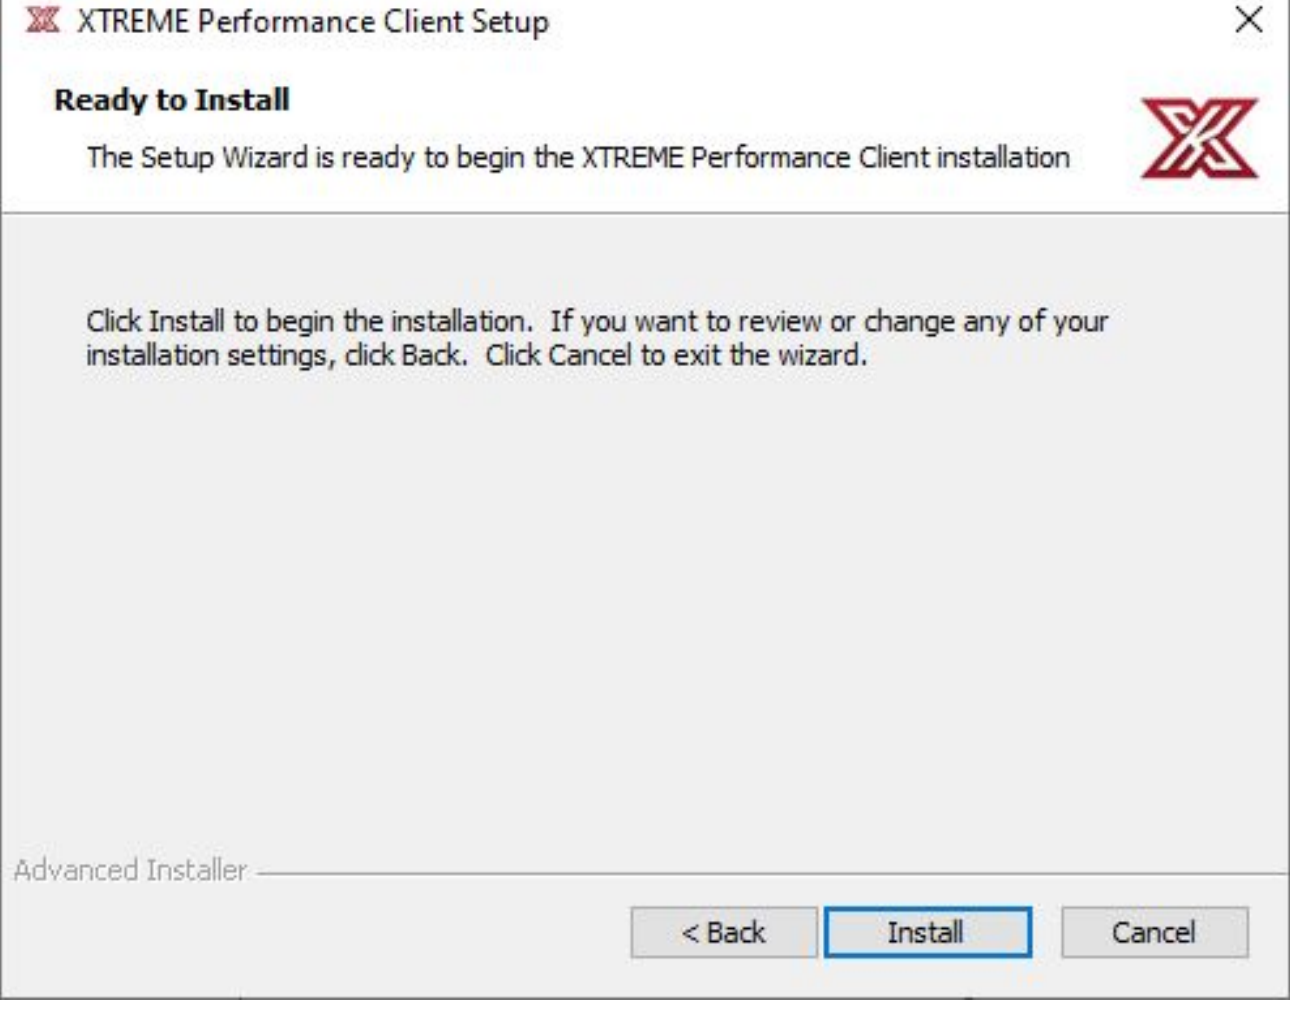

5. **XTREME Performance Client Setup**

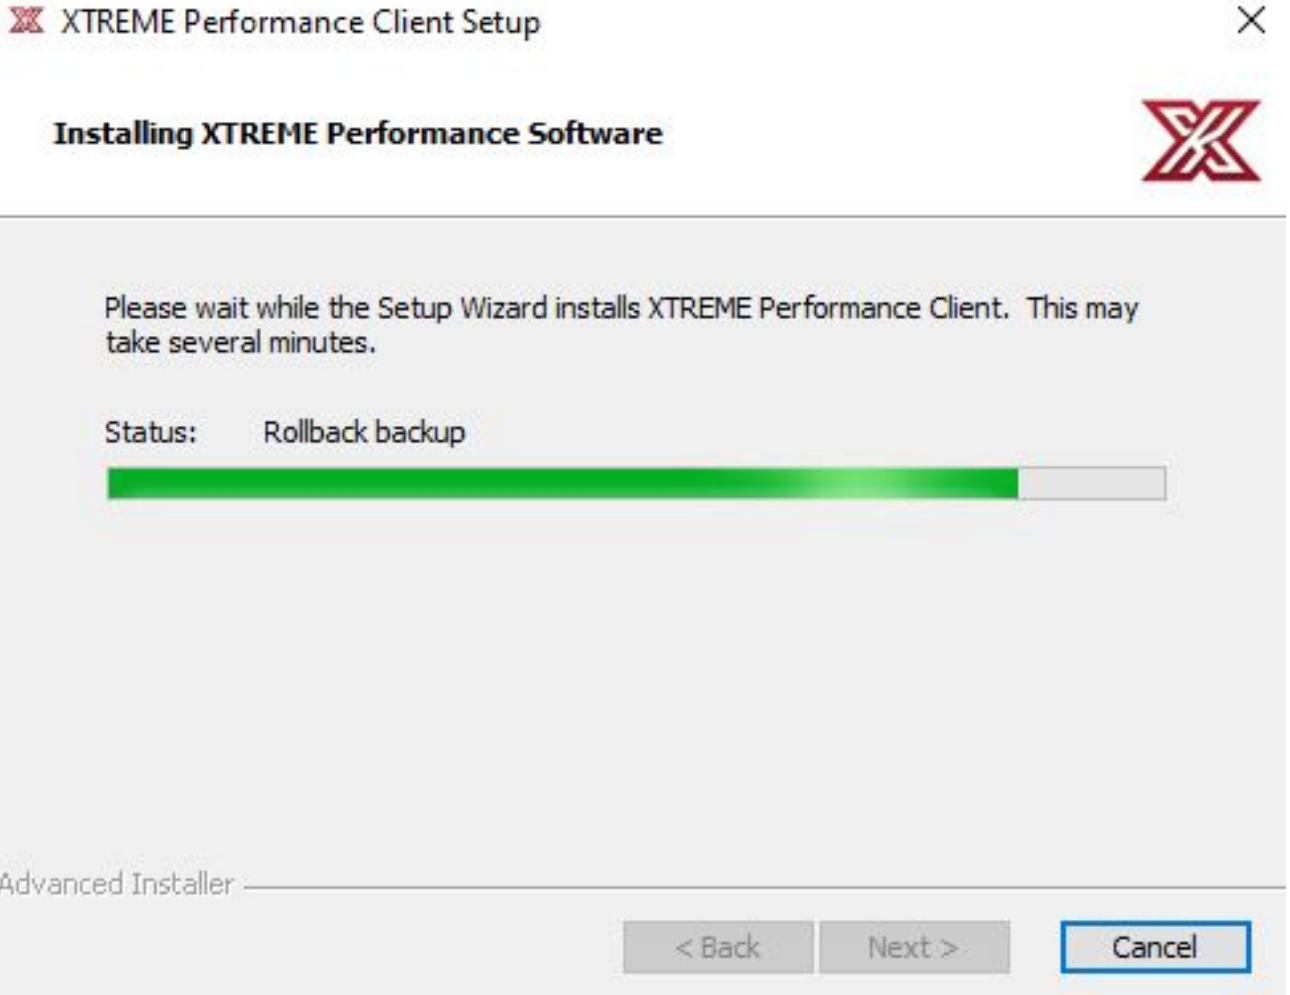

6. **XTREME Performance Client Setup**






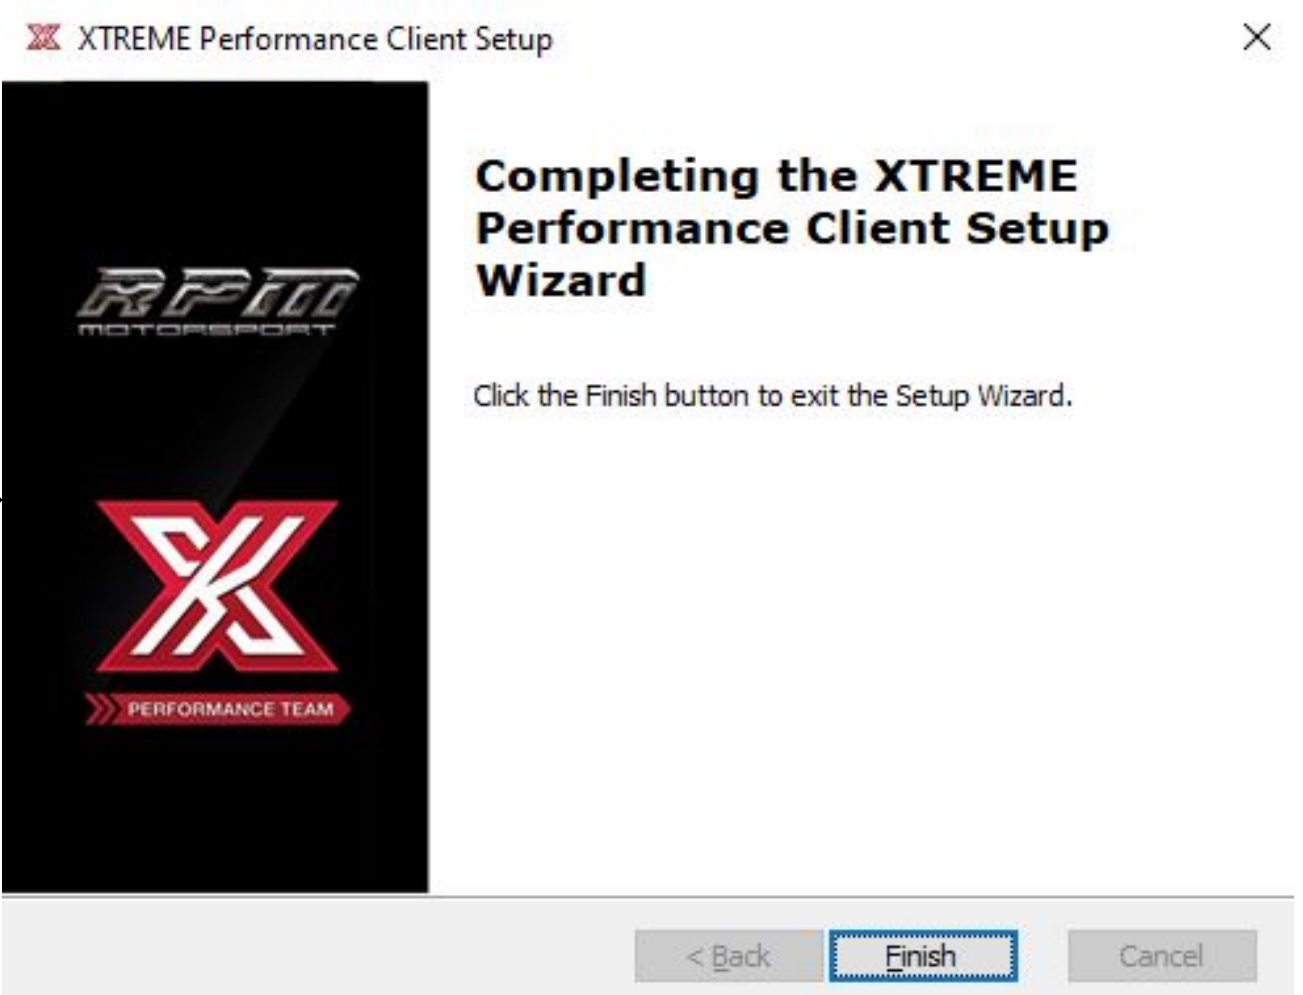


The software is now currently installed and ready to be used. After the first installation, connect the XTREME Performance Tool via USB to the PC and perform the mandatory system update



DOWNLOADING THE ORIGINAL FILE

 A) Plug the device to the USB port and press the button “Xtreme Performance Tool”.
Follow the guided procedure.

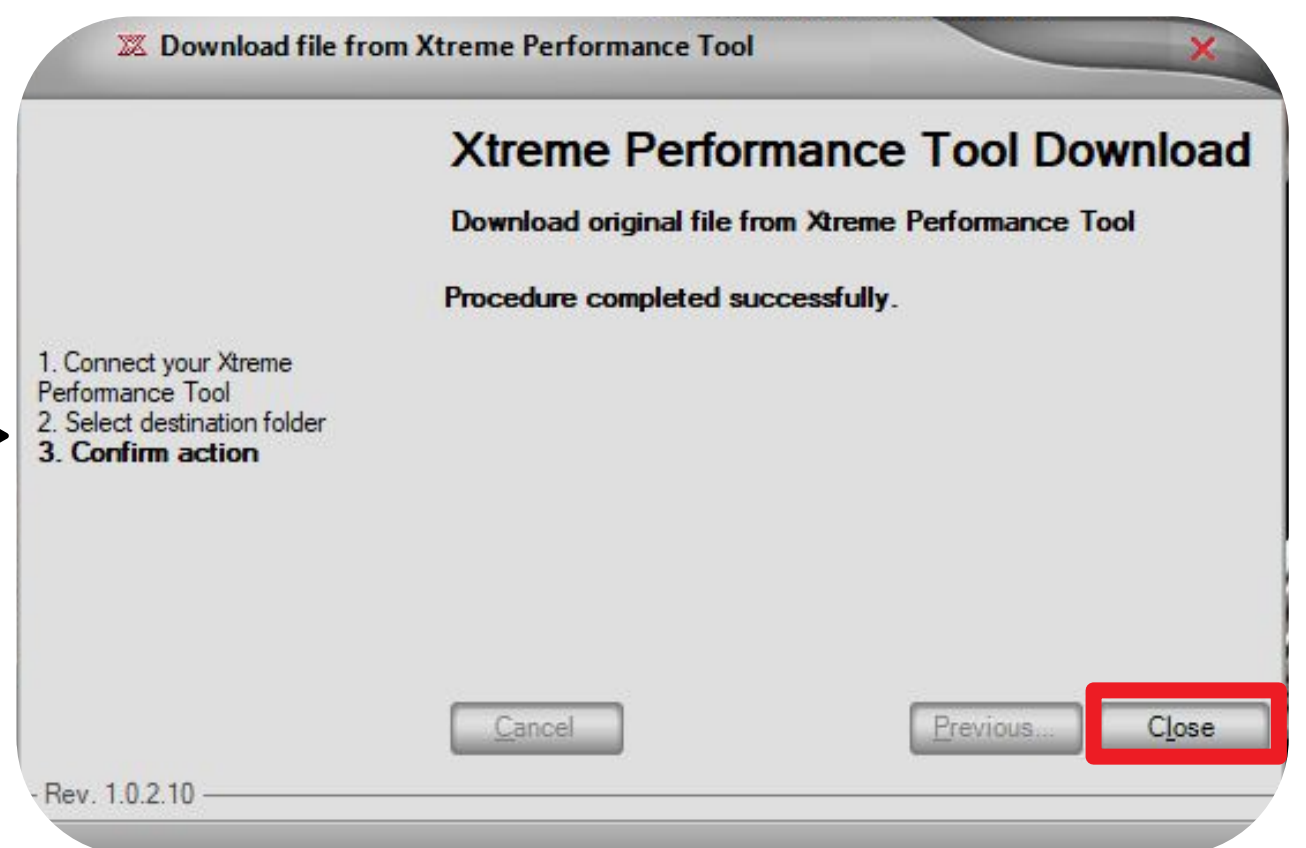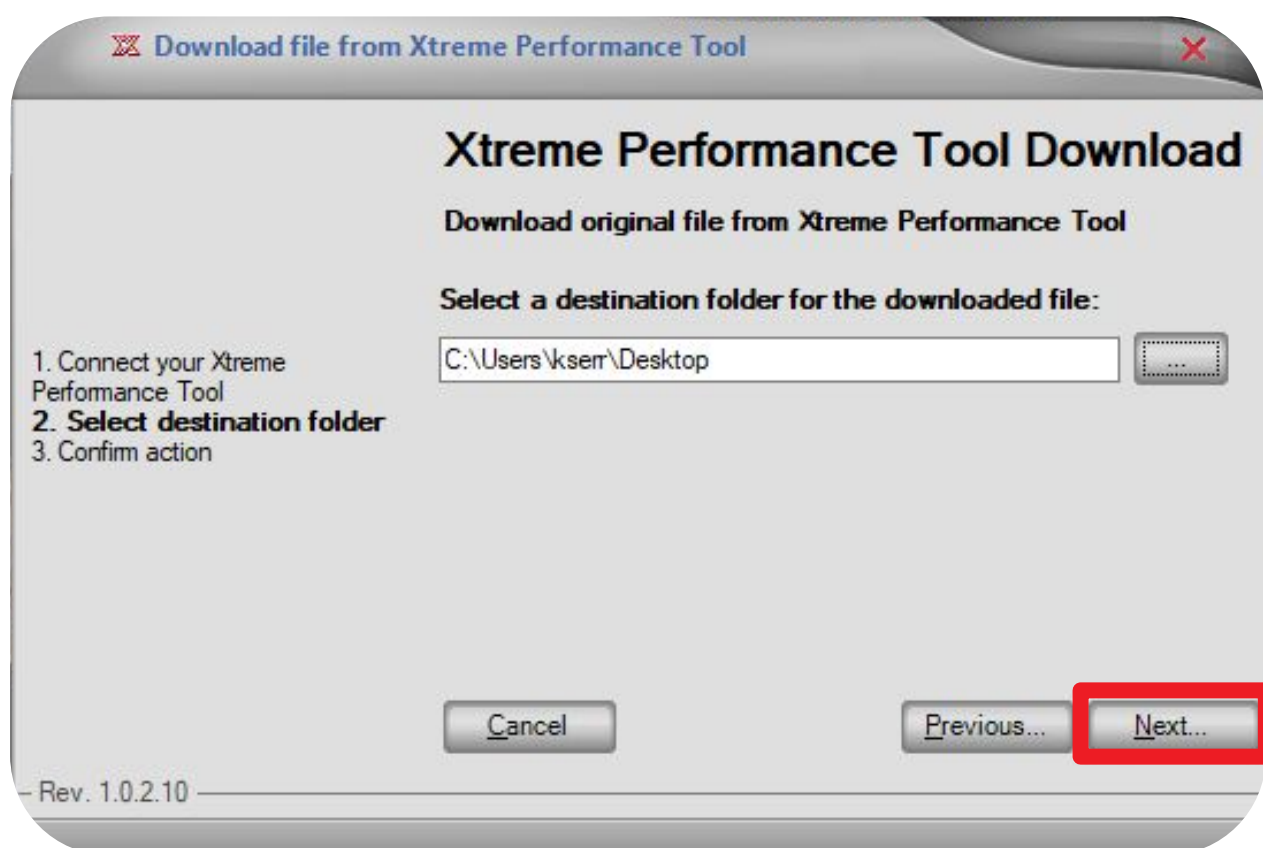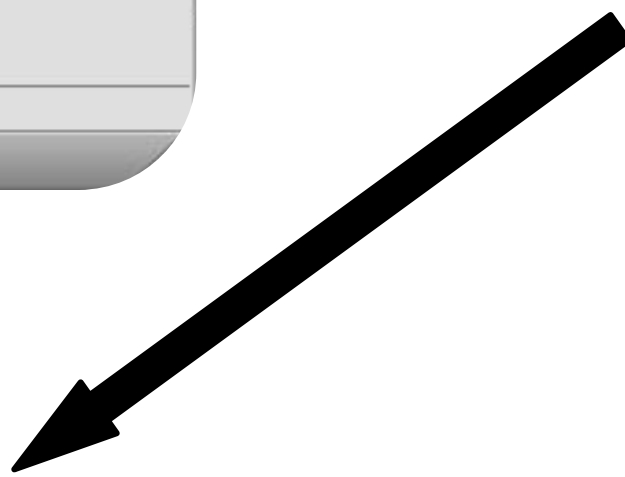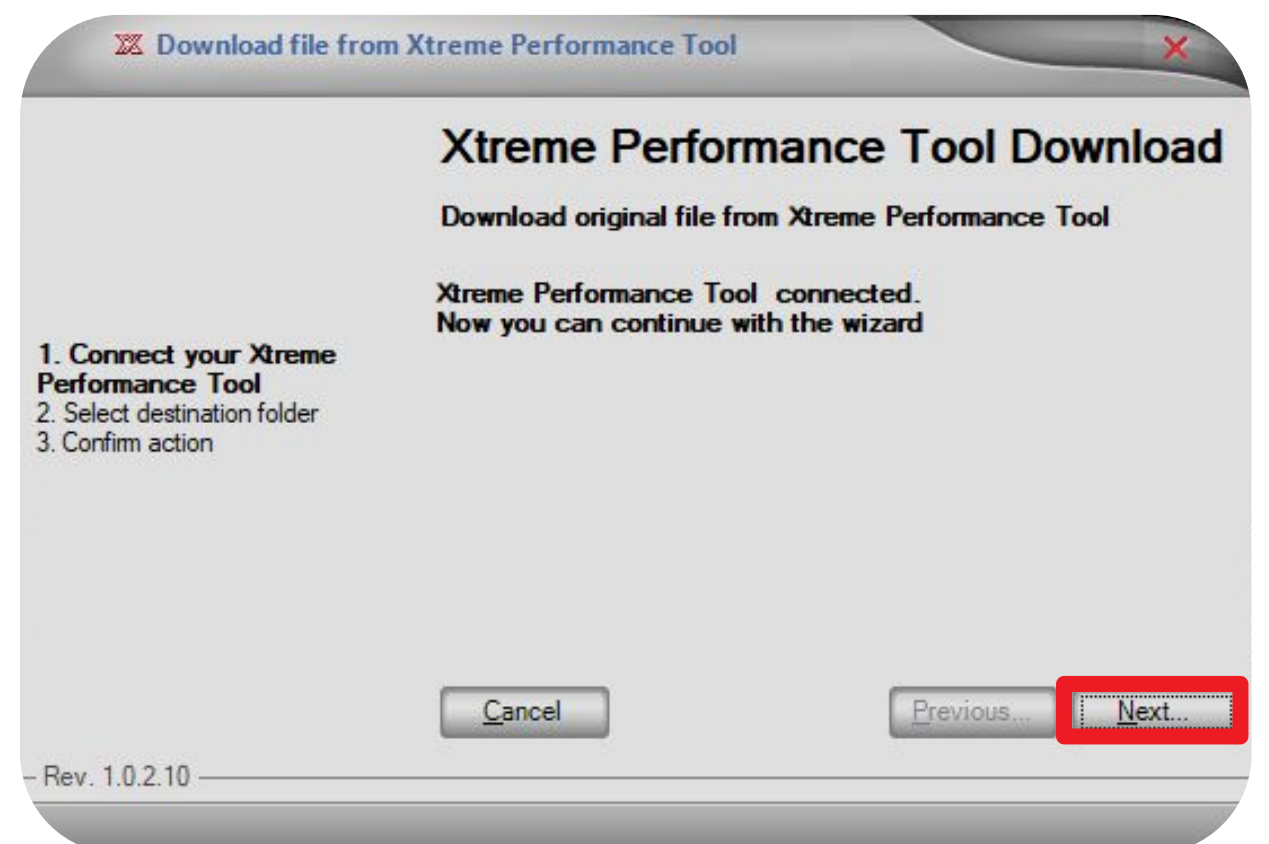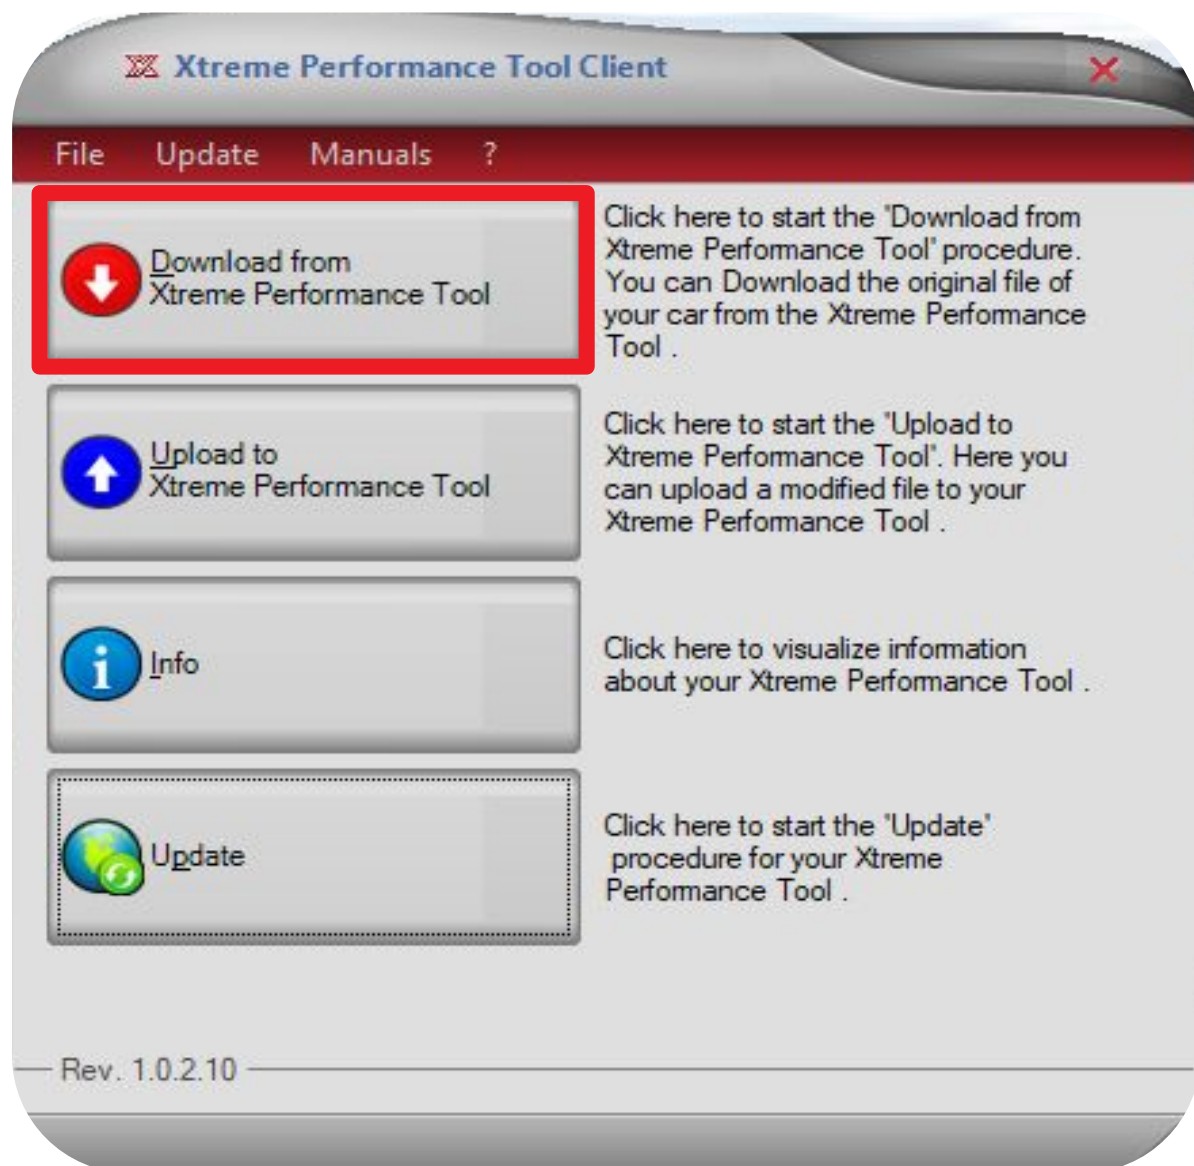

B) Do not send file via Tool. Send file **via e-mail** to your Manager.

