

NL | ELECTRONIC LOCK INSTRUCTIONS



GETTING STARTED:

Use a Brand New Duracell Coppertop 9-Volt Battery expiring 5 years into the future.
WHY THIS SPECIFIC BATTERY? *Because it has the highest amperage output that is needed to operate the safe lock.*

GENERAL LOCK INFORMATION:

LOW BATTERY: A series of signals indicates that the battery is weak and must be replaced. **ONLY USE a Brand New Duracell Coppertop 9-Volt Battery that expires at least 5 Years in the future. Otherwise the lock will NOT work correctly.** The battery compartment is located at the bottom of the keypad.

LOCKOUT: Manipulation protection: Entry of four consecutive invalid codes results in a 5 minute lockout. During this period, the LED flashes every 10 seconds and any key pressed causes a long signal. After 5 minute period, entry of two or more invalid codes restarts 5 minute lockout.

CHANGING DEFAULT COMBINATION:

NOTE: The following instructions are for changing the combination for the first time from the set default combination.

- Enter **default combination** to unlock the safe: **1-2-3-4-5-6**
- **Open the door and extend the bolts**
- **Press and HOLD [0] on keypad until double signal.** LED light will remain on during next steps:
- Enter **DEFAULT combination: 1-2-3-4-5-6 [double signal]**
- Enter **NEW combination: six-digit code [double signal]**
- **Re-enter NEW combination [double signal]**
- Your new combination is now set

IMPORTANT: Make sure you test your new combination several times with the door open before closing the safe to ensure your new code was set properly.

REPLACING USER COMBINATION:

- Enter **existing user six-digit combination** to unlock the safe
- **Open the door and extend the bolts**
- **Press and HOLD [0] on keypad until double signal.** LED light will remain on during next steps:
- Enter **existing user combination [double signal]**
- Enter **NEW combination: six-digit code [double signal]**
- **Re-enter NEW combination [double signal]**
- Your new combination is now set
- **Test new combination several times before closing the door**



KBL-10-MC



EL-25-U



DB-25-U

Time Delay Programming & Operating Instructions

To Open with Time Delay Activated

1. Enter valid six-digit code: i.e. 1-2-3-4-5-6 (factory code);
2. Lock gives a beep and LED flashes each time a digit is entered;
3. If code is correct, lock gives a double beep after the last digit is entered: time delay counting starts, LED flashes every two (2) seconds.
4. When time delay elapses, open window starts counting: lock beeps every two (2) seconds
5. Enter valid six-digits code again;
6. If code is correct, lock gives a double beep after the last digit is entered
7. Within three (3) seconds, turn handle to the open position
8. Open Safe Door

Changing Code

1. Press and hold "0" until double beep, LED stays ON;
2. Enter existing (*OLD*) six-digit code: i.e. 1-2-3-4-5-6;
3. Enter *NEW* six-digit code: i.e. 2-6-9-3-7-0
4. Enter *NEW* six-digit code again, to confirm; if a mistake is made, wait 30 seconds and repeat from step 1.
5. If lock gives a double beep, code has been correctly changed and *NEW* code can be used. Otherwise, lock will continue to work with the *OLD* code.

Attention

Always change code with door open. Open several times with *NEW* code before closing safe door. If *NEW* code does not work, try with *OLD* code and repeat the procedure to change code.



KBL-10-MC



EL-25-U



DB-25-U

Time Delay Programming & Operating Instructions

Adding Second User (Function 1)

1. Press and hold "1" until double beep, LED stays ON.
2. Enter six-digit manager code (double beep if valid)
3. Enter new six-digit second user code twice
 - a. *The second user code can be changed - see code change instructions above.*

Deleting Second User (Function 3)

1. Press and hold "3" until double beep, LED stays ON.
2. Enter six-digit manager code (double beep if valid)
3. User is deleted

Programming Time Delay (Max 99 min) Open Window (Max 19 min) (Function 9)

1. Press and hold "9" until you hear a double beep, LED stays ON.
2. Enter six-digit manager code (double beep if valid)
3. Enter time delay and open window in two digit values (double beep)
i.e. if you want to program a 26 minute delay and 12 minute open window, enter: "2612". If you want to cancel time delay, enter "0001" in open window
4. Enter time delay and open window two digit values again to confirm (double beep if valid operation)

Attention

If you change values during time delay, the time delay value may only be increased. Smaller values will be ignored. To decrease time delay value, or de-active Time Delay, enter function #9 during open window.



by **LpLOCKS**



Base Line Key Pad—Dual User Operating & Set-Up Instructions

General

The lock operates with a six-digit code. A secondary code can be added. When pressed, each key is confirmed with an audio and LED signal.

After entry of a valid code a double signal will follow. An invalid entry is followed by a long signal. After 10 seconds without entry, current code being entered will be cancelled.

Open

Enter code (factory code = 1-2-3-4-5-6), unlock door and open. If not opened within 3 seconds, the lock secures automatically. *If code entry failed on first attempt wait 20 seconds before re-entering.*

Locking:

Close door and turn handle fully to closing position. The lock is secured. Verify locked status by trying to turn handle back.

Manipulation protection:

Entry of four consecutive invalid codes-keypad is blocked for 5 minutes. During this period, the LED flashes every 10 seconds and any key pressed causes a long signal. After expiration, entry of two more invalid codes, restarts the 5 minute blocking period.

Security reference:

All codes are to be securely stored. Do not use personal data (i.e. birthdays, telephone numbers etc.) as the code. ***Change the factory code before you start using the safe!***

ACTIVATE Second User Code

Press and Hold Key [1] until double signal. The LED remains on during the following action:

- Enter main code.
- Enter Secondary code twice (Double signal after each)

(The secondary code can be changed like the main code. With the main code, the secondary code can be deleted. The main code cannot be deleted).

Change Code (With Safe Door OPEN)

Press and Hold Key [0] until double signal. The LED remains on during the following actions:

- Enter old code (double signal)
- Enter new code (double signal) and repeat new code (double signal)
- Try new code
- In case of entry errors (long signal), the old code remains valid.

Delete Second User

Press and hold Key [3] until double signal. The light remains on during the following actions:

- Enter main code.
- The secondary code is deleted.

Battery Low Warning and Battery Change

A series of signals indicates that the battery is weak and must be replaced. Use only 9V ALKALINE—batteries! The battery compartment is located at the bottom of the entry unit.

Fresh Duracell and Energizer Batteries Recommended.