



SecuRam Electronic Lock Instructions

OPENING THE LOCK

The lock operates with a numeric six-digit code or a word with 6 letters.

- Enter the existing six (6) digit code. Comes from the factory set to 1-2-3-4-5-6 and/or 1-1-1-1-1-1. *Each key press is confirmed with an audio and light signal.*
- After entry of a valid code, a double signal follows.
- Within three seconds, turn safe handle clockwise to open the door.

To lock the safe, turn the safe handle counter-clockwise.

WRONG TRY PENALTY

- Entry of four consecutive invalid codes starts a 5-minute delay period. (LED will flash at (5) second intervals.)

LOW BATTERY INDICATIONS

A series of signals indicates that the battery is weak and must be replaced. *Uses (1) 9-Volt Alkaline battery. We recommend the use of Duracell™ or Energizer™ Alkaline batteries. The lock manufacturer recommends replacement of the battery at least annually.*

CHANGING YOUR BATTERY

- Slide the keypad housing up and carefully pull away from mounting surface to expose battery compartment.
- Remove 9-Volt battery and replace with new one with "use date" at least 5 years in the future.
- The connector is easily removed by unsnapping it from the two terminals on the top of the battery.
CAUTION: HOLD ONTO BATTERY TERMINAL TO AVOID PULLING WIRES OUT OF HOUSING.
- Carefully position the keypad over the mounting screws and slide the keypad housing down. Ensure that there are no wires or cables trapped between the input pad and the safe door. Pinched cables can result in a short circuit.

WARNING: NEVER ATTEMPT TO CHANGE YOUR COMBINATION WITH YOUR SAFE DOOR SHUT. OPEN THE DOOR AND EXTEND THE DOORBOLTS BEFORE PROCEEDING !

CHANGING YOUR CODE

- Enter zero six (6) times.
- Enter your existing six (6) digit code one time.
- Enter NEW six (6) digit code two times.
- If a mistake is made, wait thirty (30) seconds and repeat steps 1-3.

Test operation of the lock several times before putting any items in the safe or before shutting the door.

IF YOU DO NOT KNOW THE EXISTING COMBINATION, DO NOT ATTEMPT TO FOLLOW THE CHANGING INSTRUCTIONS.

USER IS RESPONSIBLE FOR MAINTAINING THE COMBINATION.