

WARRANTY INFORMATION

Limited Lifetime Warranty

This safe comes with a Lifetime Warranty against break-ins and attempted break-ins. Just reach out to Stealth either through calling or email and send a Copy of the Police Report and we will replace it for you at no charge for the life of the safe. This safe also comes with a 2 Year Parts & Labor Warranty covering the lock and all components of the safe.

Register your Warranty when you first receive your safe at:

www.StealthSafes.com/Register-your-Warranty

QUESTIONS OR CONCERNS

Please Contact our Customer Service Team if you have ANY Questions or Concerns:

Business Hours: **Monday - Sunday | 8:30am - 5:00pm**

Call or Email us at: **(877) 486-7233 | info@stealthsafes.com**

ONLINE INSTRUCTIONS

Visit our Website to see Online Instructions for Setting up your New Safe:

www.StealthSafes.com/Instructions

For Video Instructions, Scan QR Code Below:




SCAN QR CODE FOR PRODUCT INSTRUCTIONS

Use your Smartphone Camera or QR Scanner to Watch an Instructional Video on Setting Up your New Safe



INSTRUCTIONS & TROUBLESHOOTING

S&G ELECTRONIC LOCK

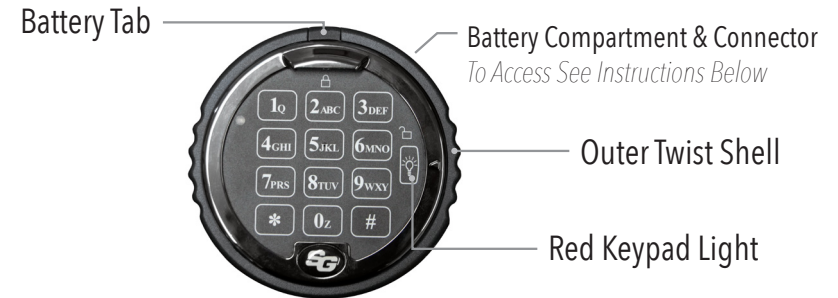

MASTER DEFAULT CODE IS: **1 2 3 4 5 6 #**

LOCK & SAFE TROUBLESHOOTING

No Beep or Red Flash when ANY Button is Pressed

Please replace the battery with a Brand New Duracell Coppertop 9-Volt Battery with an expiration date 5 Years in the future.

Long Continuous Beep During Any Programming Steps

This is an error beep that something you entered was incorrect to the programming sequence. Please restart from beginning steps.


Two Long Beeps/Red Flashes when Pressing Any Button

You are in Lockout Mode due to 5 Wrong Entry Attempts in a row. The Lockout period will last 5 Minutes (with power connected). Please note, removing the battery will only pause this 5 Minute timer, just to resume when the battery is plugged back in.

www.StealthSafes.com

OPENING THE SAFE FOR THE FIRST TIME

STEP 1: INSTALLING A BATTERY

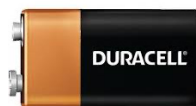

Use a Brand New **Duracell Coppertop 9-Volt** Battery expiring 5 years in the future. *Battery Not Included.*

Why This Battery? *It has the highest amperage output needed to operate the safe lock.*

Locate the Battery Tab on the top of the Keypad (see diagram)



Pull the Battery Tab Straight UP

[AT THE SAME TIME]

Pull the Entire Outer Shell Straight UP


Locate the Battery Compartment on the back/side of the keypad



Pull out Battery Connector. Connect New Duracell 9-Volt Battery (Described Above). Slide Connected Battery Back into Compartment.

Slide Down Outer Ring & Lock down by Twisting

STEP 2: OPENING WITH MASTER DEFAULT CODE

- Enter Master Default Code **1 2 3 4 5 6 #** on Keypad
- Twist Outer Shell of Keypad Clockwise  to open the safe

STEP 3: SETTING YOUR MASTER USER CODE

- Keep Door OPEN & Twist Keypad back to Locked Position
- First Enter **2 2 *** on the keypad
- Then Enter your **OLD** Code (Master Default Code) **1 2 3 4 5 6 #**
Lock will beep 5 times
- Enter your **NEW** 6-Digit Code followed by #
Lock will beep 3 Times
- **Re-Enter** your **NEW** 6-Digit Code followed by #
Lock will beep 3 Times
- Your Master User Code is Now Set!

NOTE: If at any point you made a mistake with your entry and need to clear the lock, you can wait 10 seconds for it to clear itself or simply press ****** *Do not wait more than 10 seconds in between entries on keypad or lock will clear your input.*

ADJUSTING KEYPAD VOLUME / SILENT MODE

VOLUME LEVELS: 0=SILENT | 1=QUIET | 2=LOUD

- Enter **7 8 *** on keypad
- Then Enter the **Master User Code** followed by #
Lock will beep 5 times
- Enter the desired **Volume Level** (ex. 0 for Silent) followed by #
Lock will beep 3 Times
- Re-Enter the desired **Volume Level** (ex. 0 for Silent) followed by #
Lock will beep 3 Times



SCAN QR CODE FOR PRODUCT INSTRUCTIONS

Use your Smartphone Camera or QR Scanner to Watch an Instructional Video on Setting Up your New Safe