



# Congratulations on your purchase!

This user manual will help you assemble and operate your new electric bicycle. Be sure to read **ALL OF THE INFORMATION** in this manual before riding.

#### NOTE TO ALL RIDERS UNDER THE AGE OF 18:

It's very important that you get parental permission before riding your electric bicycle.

**TOOLS INCLUDED:** 15mm&18mm open-end wrench, combination wrench.



### **Contents**

Don't Ride Until You Read This	04
Warning Message	05
Unpacking and Product Specs	09
Get to Know Your E-Bike	10
1. Handlebar	11
2. Seat	13
3. Front Wheel & Front Brake	14
4. Pedals	15
5. Fenders	16
6. Adjustments	17
7. Uninstalling the Battery	18
8. Reinstalling the Battery	18
Charge your E-Bike	19
Charge your Battery	20
Tire Inflation Instructions	21
Maintenance & Repair	23
Meter Function	26
Function Mode	34
Battery Information	36
Battery Assembly	36
Charging the Battery	36
Charging the battery	30

Precautions for Battery Protection	37
Troubleshooting Guidance	38
Warranty	39



### Don't Ride Until You Read This:



**ALWAYS** wear a helmet when riding your electric bike.



Make sure your electric bike has a **full battery** before taking it out to ride.



**Always** be aware of local road laws, and follow them.



**Do not** ride the bike under the influence of drugs or alcohol.



**Always** respect pedestrians.



**Do not** ride under wet conditions. The electric bike may slide from under your feet causing injury. Wet conditions may damage the electronics and void the warranty.



**To conserve electricity,** use assist mode and avoid zero starting, frequent braking, driving against the wind, carrying heavy loads including other people and riding with insufficient air pressure.




**WARNING:** Lithium-ion Batteries and/or products that contain Lithium-ion Batteries can expose you to chemicals including cobalt lithium nickel oxide, and nickel, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov



### **Warning Message**

 
- 1. **Avoid water -** The electric bike is not waterproof. The electronics may be damaged due to water and water damage is not covered by our warranty. Riding in wet conditions is also very dangerous and may result in injury.
- 2. **Avoid prolonged exposure** to sun or rain and avoid storage in places with high temperatures or corrosive gas.
- 3. Abuse We do not cover physical damage due to negligent care and extreme riding.
- **4. Whenever you ride** the **GOTRAX** Electric Bike, you risk severe injury or even death from loss of control, collisions, and falls. Use caution and ride at your own risk.
- **5. Do not modify** the product from the manufacturers original design.
- **6. Do not exceed** the posted speed limit and obey all traffic laws.
- **7. Avoid touching** the charging port directly and do not let it make contact with a metal object.
- **8. Keep hands and all body parts away** from moving parts while operating the electric bike.
- **9. Before riding -** be sure to check the electric bike over and make sure the electric bike is operating correctly before each use.
- 10. Before riding be sure to check that the braking system is functioning properly; also be sure to check that all safety labels are in place and you understand the safety warnings.
- **11. Before riding -** be sure that any and all axle guards, chain guards, or other covers or guards supplied by the manufacturer are in place and in serviceable condition.
- **12. Before riding** be sure to check that the tires are in good condition, inflated properly, and have sufficient tread remaining.
- **13. Never exceed** the 264lbs (120 kg) maximum load rating.
- **14.** The electric bike should never be used by children under the age of 16.

- **15. Maximum Speed -** Your electric bike goes the maximum speed of 20 mph.
- **16. Make note that additional insurance may be required** to cover situations you encounter while riding an electric bike. It is recommended that you contact an insurance company or broker for advice and consultation.
- **17. To conserve electricity**, use assist mode and avoid zero starting, frequent braking, driving against the wind, carrying heavy loads including other people and riding with insufficient air pressure.

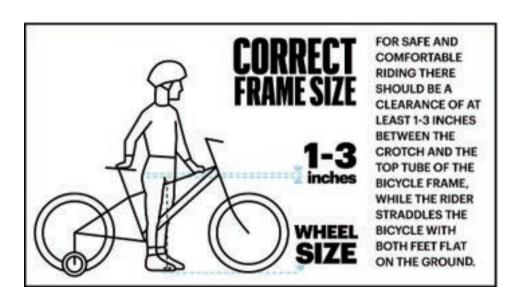







**Incorrect** Forehead exposed



A properly fitting, CPSC approved, bicycle helmet should be worn at all times when riding your bicycle. In addition, if you are carrying a passenger (only use an approved child safety seat), and remember, the passenger must also be wearing a helmet.

The correct helmet should:
-be comfortable
-be lightweight
-have good ventilation
-fit correnctly
-cover the forehead
-be securely fastened on the rider.

**FCC REGULATIONS This device complies with Part 15 of the FCC Rules.** Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the


#### following measures:

- \*Reorient or relocate the receiving antenna.
- \*Increase the separation between the equipment and receiver.
- \*Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- \*Consult the dealer or an experienced radio/TV technician for help.



## Unpacking and Product Specs

The following accessories are included with your 90% pre-assembled GOTRAX bike.

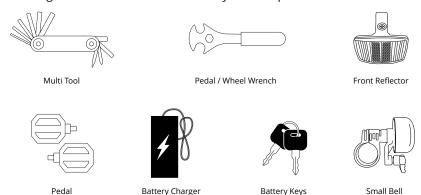

ITEM	SPECIFICATIONS
Model	CTI3
Product Dimensions	1890x720x1190 mm (74.4x28.3x46.8 in)
Package Dimensions	1495x310x880 mm (58.8x12.2x34.6in)
Max Load	120 kg (264 lbs)
Max Speed	32km (20 mph)
Battery	48V 13.6Ah
Pedal-Assist Mode	85 km (53 miles)
Pure Electric Mode	45 km (28 miles)
Max Angle of Climb	14 degrees
Charging Time	5hours 5hours
Charger	Input 100-240V 50/60Hz AC Plug; Output 54.6V 3A Three-core charging port
Tire Pressure	25-45 P.S.I
Bell/Horn Specifications	Bell
Frame Material	6061 Aluminum Alloy
IP Level	IPX4



# **Get To Know Your E-Bike**



### 1. HANDLEBAR

You will use the 5mm allen key on the multi tool for these steps.



**1.** Unscrew the bolts and remove the covers, bolts and sleeves, leaving all washers in place.



2. Place the handlebar riser on the front fork, tighten the bolts on the top the stem and the handlebar. of the stem, and fix the stem on the front of the bicycle.



3. Loosen the fixing screws between and adjust the handlebar to an angle which is comfortable for riding.



**4.** Align the handlebar with the center **5.** Add Top Cap to Stem Bolt. position, tighten and fix the bolts on both sides of the handlebar.





6. Upon final assembly, revisit this step to confirm alignment with stem and front wheel.

### You will need the +/phillips screw driver in the multi tool to install.



### Light Installation.

Remove allen bolt and wrap bracket around center of stem. Reapply bolt and using the 4mm allen key tighten and secure. Adjust light angle for preference.

You will need the 3mm allen key on the multi tool to install.



Monitor Installation.

Remove bolts and place monitor on handlebar with a bracket on each side of the stem. Make sure that you can clearly see the monitor while sitting the the seat. Insert the bolts - tighten and secure.

You will need the +/phillips screw driver in the multi tool to install.



Front Reflector Installation.

Remove the screw and place bracket over the handlebar on the left side closest to the monitor, if you are sitting on the seat. Tighten and secure the screw.

### 2. SEAT



1. Push the saddle down.



2. Open the folder of the seat tube.



3. Adjusting and rotate the seat.



4. Finally lock the folder.

# 3. FRONT WHEEL & FRONT BRAKE

#### YOUR BIKE HAS A BOLT ON MECHANISM



**1.** Remove packing block from disc brake caliper

- Do Not Throw Away
- Re-install Packing Block whenever you remove your front wheel.



**2.** Position the front wheel so it's centered between the front fork legs with the axle resting inside the fork drop outs.



**3.** Align the disc brake rotor so it is centered in the slot of the brake caliper.



Tighten nuts securely to the fork drop outs

**CAUTION** 

**4.** Tighten one axle nut part way then tighten the other nut, repeat until both sides are tightened securely. Be sure that the wheel is centered between the fork legs.

### 4. PEDALS



- 1. Drive side of bike select R-Right pedal
- 2. Insert pedal into Crank/Drive side and start to turn CLOCKWISE.
- 3. Once hand tight apply pedal wrench to pedal and tighten and secure.



- 1. NON drive size of bike select L-Left pedal
- 2. Insert pedal into Crank Arm/NON- Drive side and start to turn COUNTER CLOCKWISE.
- 3. Once hand tight apply pedal wrench to pedal and tighten and secure.

#### MATCH PEDAL and CRANK ARM CAREFULLY

Right pedal is applied to drive side/side with crank and gears and threads/twist on CLOCKWISE Left pedal is applied on NON-DRIVE side/side with disk rotors and twist COUNTERCLOCKWISE

#### **USE PEDAL WRENCH AND CONFIRM PEDALS ARE TIGHTENED AND SECURE**

**Check frequently** 

### 5. FENDERS

### You will use the 5mm allen key on this step



1. Locate front fork brake arch center hole and align front fender and insert bolt and nut thru brake arch and mounting bracket on fender.

#### You will use the 4mm allen key on the following 2 steps





**2.** Move the fixing rod to the corresponding fixing plate position and tighten the bolts on both sides.



### 6. ADJUSTMENTS

Please confirm STEM AND FRONT WHEEL are in alignment.



### 7. UNINSTALLING THE BATTERY

- 1. Turn key until you hear CLICK
- 2. Lifting battery out

3. Frame area is clear of battery. Check connectors toward the bottom of battery cavity









### **8. REINSTALLING THE BATTERY**

- **1.** With open battery cavity, check connectors. Key is not needed to install battery
- **2.** Place bottom of battery into frame cavity and slide down to connect
- **3.** Battery should be inside cavity and press closed to hear a click
- **4.** Key is not needed to install battery but if in place remove and enjoy the ride

# **Charge your E-Bike**

Before using the electric bike, you must fully charge the battery.



- 2. Plug one side of the charger into the charging port and plug the other into an outlet.
- 3. A red light indicates the battery is charging, green indicates the battery is full.
- 4. Charging Time: 5 hours.

# **Charge your Battery**



Plug one end of the charger into the battery and the other end into the power supply.



Red light shows the battery is charging, green light is full.



#### **Power indicator:**

Press the button to light up. The three-color light corresponds to the power: blue(high),green(middle)and red(LOW).



#### **Tires and Tubes**

After assembling your bike, it will be necessary to inflate the tires. Check the sidewall of the tire for the correct tire pressure (PSI) and inflate tires accordingly with a MANUAL BICYCLE PUMP. Improper inflation is the biggest cause of tire failure. Due to the slightly porous nature of bicycle inner tubes, it is normal for your bike tires to lose pressure over time. For this reason it is critically important to maintain the proper tire inflation on your bike.

1. Your bicycle has been equipped with tires which the bike's manufacturer felt were the best balance of performance and value for the use for which the bike was intended. The tire size and pressure rating are marked on the sidewall of the tire. CAUTION: Pencil type automotive tire gauges and gas station air hose pressure settings can be inaccutate and should not be relied upon for consistent, accurate pressure readings. Instead, use a high quality dial gauge.

WARNING: NEVER INFLATE A TIRE BEYOND THE MAXIMUM PRESSURE MARKED ON THE TIRE'S SIDEWALL. EXCEEDING THE RECOMMENDED MAXIMUM PRESSURE MAY BLOW THE TIRE OFF THE RIM, WHICH COULD CAUSE DAMAGE TO THE BIKE AND INJURY TO THE RIDER AND OTHERS. THE BEST WAY TO INFLATE A BICYCLE TIRE TO THE CORRECT PRESSURE IS WITH A BICYCLE PUMP. NEVER USE A SERVICE STATION AIR HOSE TO INFLATE A BICYCLE TIRE. IT IS DESIGNED FOR LARGER TIRES AND IT CAN EXCEED THE RECOMMENDED MAXIMUM PRESSURE AND IT MAY BLOW THE TIRE OFF THE RIM.

Tire pressure is given either as maximum pressure or as a pressure range. How a tire performs under different terrain or weather conditions depends largely on tire pressure. Inflating the tire to near its maximum recommended pressure gives the lowest rolling resistance; but also produces the harshest ride. High pressures work best on smooth, dry pavement. Very low pressure, at the bottom of the recommmended pressure range, gives the best performance on smooth, slick terrain such as hard-packed clay, and on deep, loose surfaces such as deep, dry sand. Tire pressure that is too low for your weight and the riding conditions can cause a puncture of the tube by allowing the tire to deform suffciently to pinch the inner tube between the rim and the riding surface.

Some special high-performance tires have unidirectional treads: their tread pattern is designed to work better in one direction than in the other. The sidewall marking of a unidirectional tire will have an arrow showing the correct rotation direction. If your bike has unidirectional tires, be sure that they are mounted to rotate in the correct direction.

2. The tire valve allows air to enter the tire's inner tube under pressure, but doesn't let it back out unless you want it to. There are primarily two kinds of bicycle tube valves: The Schraeder Valve and the Presta Valve. The bicycle pump you use must have the fitting appropriate to the valve stems on your bicycle. The Schraeder is like the valve on a car tire, this is the type of valve stem you should have on your bike. To inflate a Schraeder valve tube, remove the valve cap and push the air hose on you bike. To inflate a Schraeder valve tube, remove the valve cap and push the air hose or pump fitting onto the end of the valve stem. To let air out of a Schraeder valve, depress the pin on the end of the valve stem with the end of a key or other appropriate object.



Presta Valve



### Correct routine maintenance of your new bike will ensure a longer life for your bike and a safer ride for you.

Every time you ride your bike, its condition changes. The more you ride, the more frequently maintenance will be required. We recommend you spend a little time on regular maintenance tasks. The following schedules will assist you in knowing what tasks need to be performed and how often. If you have any doubts about your abilities to accomplish these tasks, we recommend you take your bike to a professional bicycle mechanic periodically to have them done.

#### Schedule1 - Lubrication

Frequency	Component	Lubricant	How to Lubricate
Weekly	chain derailleur wheels derailleurs brake calipers brake levers	chain lube or light oil chain lube or light oil oil oil	brush on or squirt brush on or squirt oil can 3 drops from oil can 2 drops from oil can
Monthly	shift levers	lithium based grease	disassemble
Every Six Months	shift levers brake cables	oil lithium based grease	2 drops from oil can disassemble
Yearly	bottom braket pedals derailleur cables wheel bearings headset seat pillar	lithium based grease lithium based grease lithium based grease lithium based grease lithium based grease lithium based grease	bicycle mechanic disassemble disassemble bicycle mechanic bicycle mechanic disassemble

23

Note: The frequency of maintenance should increase with use in wet or dusty conditions. Do not over lubricate-remove excess lubricant to prevent dirt build up. Never use a degreaser to lubricate your chain (WD-40T™)

### Schedule2 - Service Checklist

NOTE: Many instructions for adjustments can be found in the assembly portion of this manual.

Frequency	Task
Before every ride	check wheel and pedal tightness
	check tire pressure
	check brake operation
	check wheels for loose spokes, loose axle nuts or quick release
	make sure all fasteners are tightened securely
After every ride	quick wipe down with damp cloth
Weekly	lubrication as per schedule 1
Monthly	lubrication as per schedule 1
	check derailleur adjustment
	check brake adjustment
	check brake and gear cable adjustment
	check tire wear and pressure
	check wheels are true and spokes tight
	check hub, head set and crank bearings for looseness
	check pedals are tight
	check handlebars are tight
	check seat and seat post are tight and comfortably adjusted
	check frame and fork for trueness

	check all nuts and bolts are tight
Every six months	lubrication as per schedule 1 check all points as per monthly service check and replace brake pads, if required check chain for excess paly or wear
Yearly	lubrication as per schedule 1

NOTE: OWNERS ARE RESPONSIBLE FOR ALL MAINTENANCE AND SERVICE OF THE BICYCLE. FAILURE TO DO SO MAY VOID YOUR WARRANTY, CAUSE DAMAGE TO YOUR BIKE OR ITS COMPONENTS, AND MAY CAUSE AN ACCIDENT.



**Power on/off:** After press and hold **M** for 2 seconds, the meter will light up. In the power-on state, press and hold the **M** to turn off the power of the E-bike. The bike will automatically shut down after 10 minutes of inactivity.

When the instrument is turned on, it will firstly display as shown in the figure below:



**Push-Assist Model:** Press and hold the — and do not release it. After 3 seconds, the E-bike enters the Push-Assist Model. The E-bike travels at a constant speed of 6 km/h when the push-assist logo lights up. The push-assisted model can only be used when the user pushes the E-bike, please do not use when riding.



**Power-assist gear selection:** Press  $\blacksquare$  or  $\blacksquare$  to switch the E-bike power-assist gear. The default output power range of the meter is 0-5 gears. The default gear is 0 gear.



**Battery capacity display:** The battery capacity is displayed on the right in percentage. When the battery is fully charged, the power bar displays 100%, and each grid represents 10% of the battery capacity.



Real-time speed, single mileage (TRIP) display interface: After the meter is turned on, the meter will display the real-time speed and single mileage interface by default. When the speed is zero, press and hold **M** and — at the same time for 2 seconds, the current single mileage will be cleared. The single mileage will not be cleared after the meter is turned off and restarted.



**Maximum speed, total mileage (ODO) display interface:** After the meter is turned on, the default interface of the meter is switched to the maximum speed and total mileage interface with pressing **M** . The maximum speed indicates the highest speed during this ride, and the total mileage is the sum of the accumulated mileage of the E-bike.



**Average speed display interface:** Press the **M** again to switch to the average speed and interface when the meter is in maximum speed and total mileage interface. Average speed represents the average speed during this ride.



**Setting interface:** When the speed is zero, press and hold + and - for 2 seconds to enter the setting interface.

(Wheel diameter, value cannot be adjusted)

**Speed Limit Setting:** In the speed limit setting interface, you can use short press 

and 

to increase/decrease the setting. The setting range is 17-45 km/h (11-28 mph), with a default value of 32 km/h (20 mph) when shipped from the factory. After completing the setting, long press 

key to save and exit.

This setting can only adjust the speed limit for the assisted mode. The speed limit for the electric mode is fixed at 32 km/h (20 mph) and cannot be adjusted.




Backlight setting: Press and hold 

and 

at the same time for 2 seconds to enter the setting interface when the speed is zero. Press 

to switch to the backlight setting. Parameters 1, 2, and 3, indicating the brightness of the backlight, 1 is the darkest, 2 is the standard brightness, and 3 is the brightest. The default value of the meter is 3. Press and hold 


to save the settings and return to the main interface.

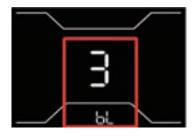


Unit setting: Press and hold ♣ and — at the same time for 2 seconds to enter the setting interface when the speed is zero. Press M to switch to enter the unit setting interface. The setting parameters are optional km/h and MPH. The default MPH representation unit is imperial. Km/h or MPH can be selected by pressing ♣ and — . km/h means the unit is metric, MPH means the unit is imperial. Press and hold to save the settings and return to the main interface.



Password enable/disable setting: Press and hold ♣ and ■ at the same time for 2 seconds to enter the setting interface when the speed is zero. After entering the general settings interface, press and hold ♣ and ■ at the same time for 2 seconds to select whether to use the power-on password or not. Initial password: 0000. After entering the password use setting, press ♣ and ■ to switch between options "y" and "n", "y" means power-on password is enabled, "n" means power-on password is disabled. After selecting "y" to enable the power-on password, it will enter the interface of modifying the power-on password. If you select "n", it will return to the general setting interface.

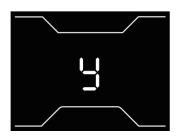

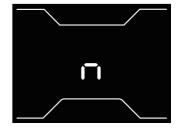

Modify password settings: After selecting whether to use power-on password, press

Modify password settings: After selecting whether to use power-on password, press

to enter the interface for modifying the power-on password, firstly, input the existing

4-digit password (PS0), press

and

to switch the number, press

to confirm, and

enter the modification interface after the 4-digit password input is correct. Enter the

new password (PS1), if the input is wrong, return to the first digit and re-enter. If you

forget the password, you can press

and hold

, and

at the same time in the

password interface to restore the default initial password (0000). After restoring the

initial password, it will automatically jump back to the general setting interface.





# **Function Mode**

- Three Riding Modes: Electric Assisted Mode, Pedal-Assisted Mode, Bicycle Mode.
- Throttle Assisted Mode: When you turn the bike on, the assist level will be at

   Press the ♣ button to increase auxiliary levels 1-5. Press the throttle to reach
   the start motor and move the bike. Throttle Assist mode Stages 1-5 assist keep
   same speed.
- Pedal-Assist Mode: When you turn the bike on, the assist level will be at level
   Press the ★ key to increase the auxiliary level to 1-5, and press the ★ key to decrease the gearing level.
- 4. **Bicycle Mode:** When riding in the off state or neutral, the motor has no power output.

# Battery Information

Before using the charger locate the voltage selector switch (li-ion chargers only) on the back of the charger. Select either 115 volts or 230 volts depending on your country of residence. Using the wrong voltage setting will permanenty damage the charger and/or electrical components on the hybrid electric bicycle.

#### **BATTERY ASSEMBLY**

- 1. Use the matching charger.
- 2. Insert the round plug into the E-Bike first and then insert the charger plug into the electrical socket.
- 3. A red light indicates the battery is charging.
- 4. A green light indicates the battery is fully charged.
- 5. The Key lock position will vary from model to model.
- 6. The battery is removable, the battery can be charged attached to the E-Bike or pulled out and charged separately.

#### CHARGING THE BATTERY

- 1. When using the charger for the first time, carefully check whether the rated output voltage of the charger is consistent with the battery voltage and check whether the charger input voltage is consistent with the grid voltage.
- 2. When charging, first put the charger in a ventilated place, then insert the charger output plug into the charging port. Plug the electrical power plug into the 100-240V 50/60Hz AC Power Supply. Be sure to keep the input plug in contact with the AC outlet.
- 3. After charging, the input plug of the charger shall be pulled out first, and then the output plug connected with E-Bike shall be pulled out. Do not leave the charge plugged in.

#### PRECAUTIONS FOR BATTERY PROTECTION

- 1. Do not place anything on the battery and charger when charging, otherwise the charger may overheat and cause serious damage.
- 2. Only use the charger supplied by the original factory to charge the battery, if you use a different charger your battery will be disqualified from warranty.
- 3. You can charge your battery at any time if the battery loses power.
- 4. If you do not use or charge your battery for an extended period of time, battery performance will decrease. If you do not plan to ride your bike for an extended period of time it is recommended to plug in and charge the battery Insert Care/Maintenance section an extended period every 4-6 weeks.
- 5. Protection can make your battery maintain about 80% of its capacity after more than 500 cycles. But overall decline is inevitable.
- 6. If the battery remains in a status not charged a long time, it will lead to permanent loss of performance.
- 7. If you want to store your battery for an extended period, please store and discharge it in a cool and dry place.
- 8. Keep the temperature between 50-70 and avoid direct sunlight. Take the battery out for charging every 30 days.
- 9. Do not intentionally short-circuit the battery which will cause very serious damage and void the warranty.
- 10. Dispose of your batteries responsibly. Research local recycling regulations.
- 11. If you have questions about battery use, maintenance, or storage, please contact customer service.
- 12. Only use the battery supplied with this electronic bike.
- 13. Never charge a lithium battery unsupervised.



# **Troubleshooting Guidance**

When the E-bike electric control system fails, the display will show the error codes, and only when the fault is removed can you exit the fault display program. *After the fault occurs, the E-bikes can't able to continue working.* 

Troubleshooting tips	Code meaning	Troubleshooting clearing
ERROR 22	The accelerator failure	Check the accelerator connection cable. If the connection cable is normal, replace the accelerator
ERROR 23	The motor troubleshooting	Check the motor connection cable. If the connection cable is normal, replace the motor
ERROR 24	The motor troubleshooting	Check the motor connection cable. If the connection cable is normal, replace the motor
ERROR 25	The Brake faulire	Check the brake connection cable, if the connection line is normal, replace the brake handle.
ERROR 30	Display communication failure	Check the display connection cable. If the connection cable is normal, replace the display

# **X** Warranty

Please contact our customer service team if you are experiencing problems or need more detailed information.

US team after-sales email: **support@gotrax.com** CA team after-sales email: **canada@gotrax.com** 

- Users should operate in accordance with the product manual. In case of any performance fault caused by production quality, the company shall perform the obligations of the three guarantees in accordance with the provisions of relevant laws and regulations of the state.
- 2. The company is still responsible for the after-sales service of the faults beyond three guarantees and the major components in the three guarantees, but there will be a cost for repair.
- 3. If the battery replacement is over the warranty time, our company will supply the battery at factory price. To ensure safety, and avoid pollution.
- 4. We do not cover physical damage due to negligent care and extreme riding.



W W W . G O T R A X . C O M

#RideGOTRAX





### (US) GOLABS, INC

GOTRAX.com 2201 Luna Rd. Carrollton, TX 75006

### (CA) Tao Motor Canada Inc.

170 Bartor Road, Unit 1 North York, Ontario M9M 2W6, Canada.