 


GO TRAX

Eco Lights and Beeping Sounds Meaning

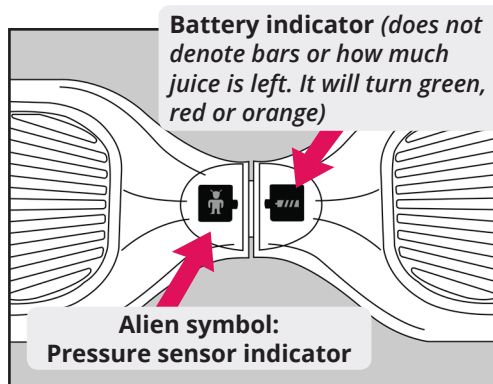 


COLOR CODE:

Green light: The board has charge in it or is juiced up


Red light: The board needs to be charged at the earliest and is running out of power. It will blink and make a beeping noise

Orange light: The board is charging. It will only blink when the board is powered ON. The board cannot function while charging

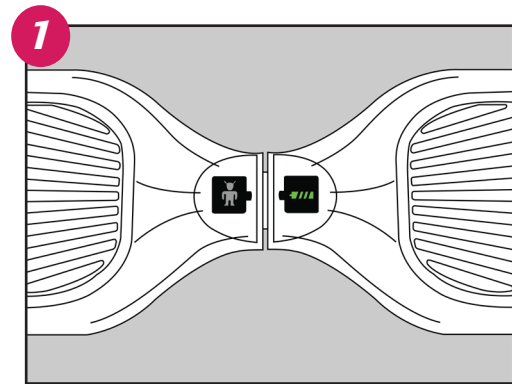


CASE 1:

 When there is no pressure/weight on the board

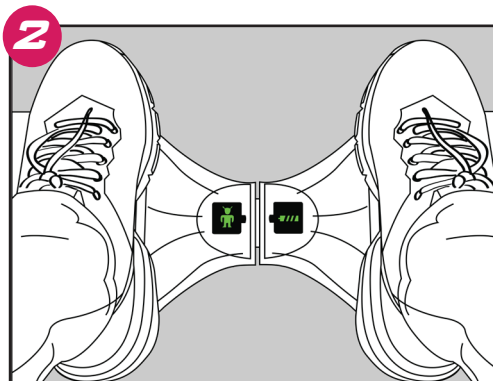

CASE 2:

 When there is pressure/weight on the rubber pads

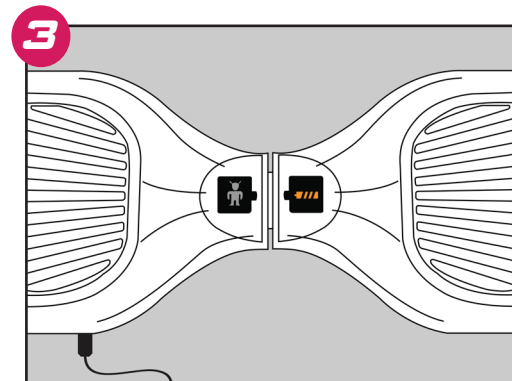

CASE 3:

The battery indicator light will blink orange when switched ON during charging