 
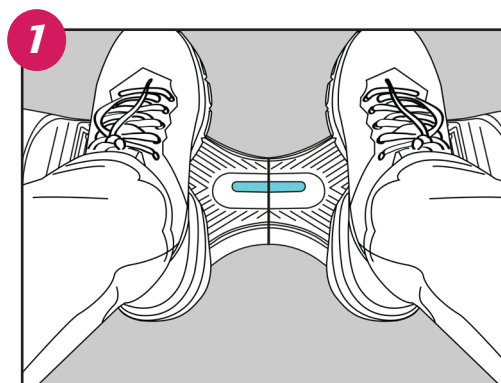 


GO TRAX

SRX Lights and Beeping Sounds Meaning

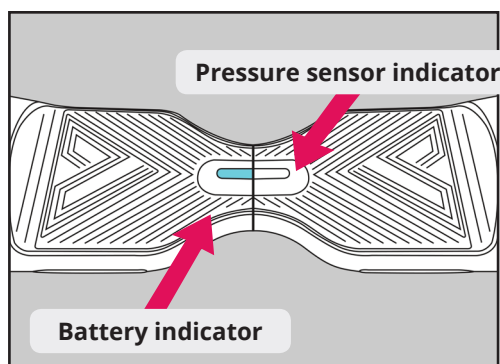

COLOR CODE:


Blue light: The board has charge in it or is juiced up

Red light: The board needs to be charged at the earliest and is running out of power. It will blink and make a beeping noise

Orange light: The board is charging. It will only blink when the board is powered ON. The board cannot function while charging


CASE 1:

Both the light indicators will glow blue when there is a certain weight on both of the rubber pads

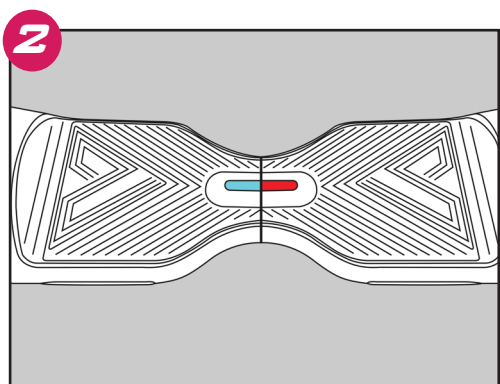

CASE 2:

The sensor indicator will turn red when the board is turned on and partial pressure is applied

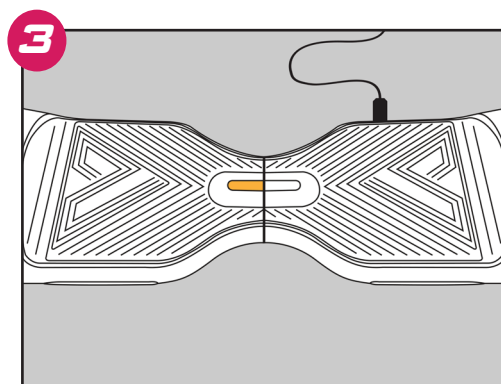

CASE 3:

The battery indicator light will blink orange when switched on while charging