 


**SWISS  
GADGET** 

# **USER MANUAL**

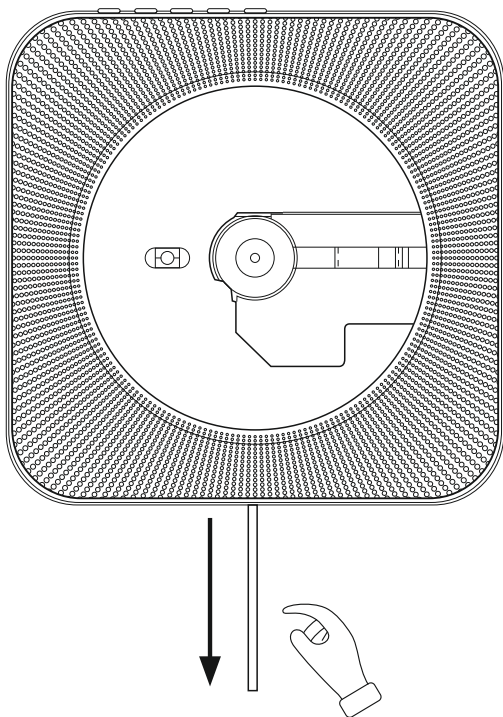

**Wall Mounted CD Player**

 
## Specifications:

1. CD format support:	CD,CD-R,CD-RW,MP3,WMA
2. FM Radio Range:	87.5KHz-108.0MHz
3. Speaker:	45mm X 2
4. Rated impedance:	4Ω
5. Speaker output:	3W x 2
6. Power supply:	AC110-220V, 50KHz/60Hz
7. Power/Switch cable length:	2.5m
8. Dimension of main unit/package:	189x189x37mm/290x205x48mm
9. Net weight/Gross weight:	540g/753g
10. Color:	white/blue/pink

## Main Features

1. Cable-pulling swith: pull the power cable to turn on/off
2. USB flash reading/playing
3. Full-band FM radio
4. Bluetooth 4.2 connection
5. Remote control
6. Standard 3.5mm audio input/output port
7. Loop Playback modes: Repeat One, Repeat All, Shuffle, Normal
8. Support A-B repeat

Press 'MODE'  
button to switch  
among: CD>  
USB>FM>AUX  
>Bluetooth



Press 'MODE'  
and hold for 3s  
to switch the  
indicator light off


VOL+  
NEXT

3.5mm audio input/output port



USB 2.0 interface

## Remote Instructions

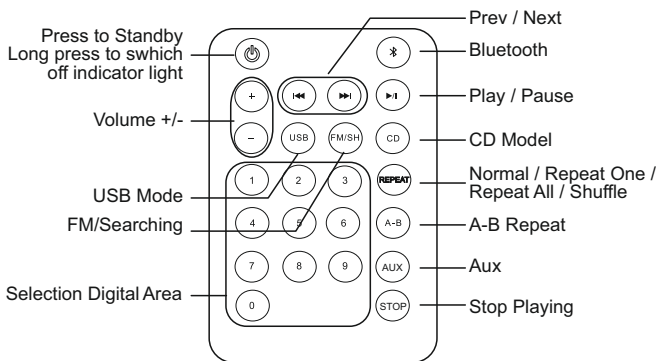 

### Bluetooth Mode Instructions

1. Press Bluetooth button on the remote to switch to Bluetooth mode, then the CD Player will be ready to pair other Bluetooth devices such as mobile phones, pads etc., and its indicator light color will change to dark blue
2. Activate the Bluetooth in your mobile phone and it will automatically search nearby Bluetooth devices to pair
3. Choose the named "CD Player" device in your mobile phone Bluetooth device list to pair
4. Your mobile phone will be paired / connected to the CD Player in a few seconds
5. Playing music on your mobile phone and the audio will be transmitted to the CD Player speaker through Bluetooth

### FM Mode Instructions

1. Press FM/SH button on the remote to switch to FM mode
2. Then the CD Player will play the preset radio station and its indicator light color will change to pink
3. Press <Prev> or <Next> button to go to previous station or next station; Or press digital keys to change to a certain station pre-stored
4. Press FM/SH button again to search all radio stations and it will automatically store the first 40 stations if there are such enough stations around; After completed the searching, it will play the first station

### USB Mode Instructions

1. Plug in a U-disk to the CD Player USB port
2. Press USB button on the remote to switch to USB mode
3. The CD Player will read and play the music in the U-disk and its indicator light color will change to grass green

## **A-B Repeat Function**

The A-B Repeat function enables playback to a specific section repeatedly by setting the start point (A) and end point (B) for the section.

- 1, Press A-B button on the remote to set the start point (A) while playing
- 2, Press A-B button on the remote to set the end point (B) while playing
- 3, Then the specified section from A to B will be played back repeatedly
- 4, Press A-B button again to exit AB repeat
- 5, Note: A-B Repeat function only works on CD and USB mode

## **AUX Mode**

1. Connect the CD Player to other Audio player devices with the included 3.5mm male-to-male audio cable
2. Press AUX button on the remote to switch to AUX IN mode, then the audio will be transmitted to the CD Player speaker, the indicator light color will be green this time

## **Trouble shooting**

1. Remote does not work
  - Check if the insulation sheet is removed from the battery slot
  - Check if the remote battery is running out
  - Make sure the remote is in the range of a reasonable distance (within 6 meters)
2. The CD Player does not work
  - Check if the pull switch is powered on
  - Check if the power cable and the USB adaptor is correctly plugged in
3. It cannot read / play CDs
  - Check if the CD is placed correctly, take it out and put it in, then try it again
  - Power off the CD Player for a few minutes, then try it again

## **WARNING**

 
 
1. Never play a cracked CD or a CD is NOT clean, that would damage the laser
2. Please remove the protection paper CD from the CD Player before powering on, otherwise, the laser could be damaged

## Installation instructions


- ① Fix the wall-mounted plate on the wall with the included 3 nails



- ② Or fix it on the wall with the included 4 screws

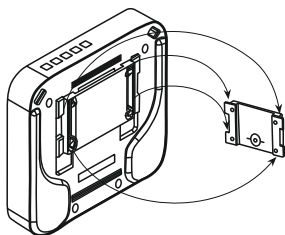

 - ③ Hang the CD Player on the wall-mounted plate

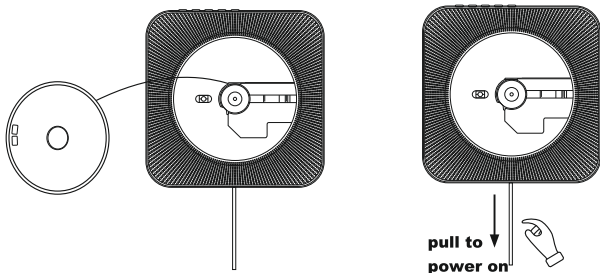

## Quick Instructions for Use

### Basic Operation:

1. Plug in the power cable to the USB adaptor
2. Remove the protection paper CD from the CD Player before powering on, otherwise, the laser could be damaged
3. Put a CD into the CD Player
4. Pull the power cable to power it on, and then it will play the CD in 5-12s
5. Press the topside "MODE" button to switch among 4 modes: "CD", "USB", "FM", and "Bluetooth"

### Accessories:

- |                                   |     |
|-----------------------------------|-----|
| 1. CD player                      | x 1 |
| 2. 5V-2A USB adaptor              | x 1 |
| 3. Remote control                 | x 1 |
| 4. Wall-mount kit                 | x 1 |
| 5. Wall-mount plate               | x 1 |
| 6. User manual                    | x 1 |
| 7. Desk stand                     | x 1 |
| 8. 3.5mm male-to-male audio cable | x 1 |

 


- CD Play
- Bluetooth Play
- Timing Set
- TF Card Play
- FM Radio
- Loop Playback
- Repeat
- USB Disk Play
- 3.5mm Audio
- IR Remote



# CLASSIC PULL SWITCH DESIGN

Gently pull the power cord to turn on/off

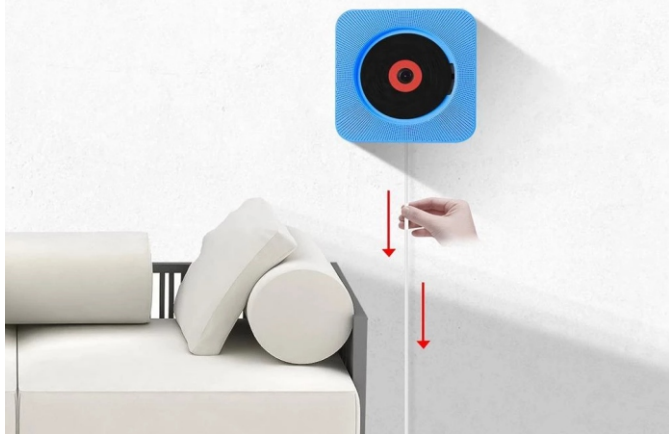

## CD PLAYER

NOVEL WALL MOUNTABLE

- CD Player
- HIFI Speaker
- A-B Repeat
- USB Port
- FM Radio
- Bluetooth

