

Size:428X100mm

SWISS GADGET

Electric Shaver
Strong Shaver

LK-8880

6-in-1

Shaving head
Hair clipper head
Vibrissa/ear hair trimmer head
Facial cleaner head
Soft face sponge
Body trimmer



MADE IN CHINA

Notes

WARNING: Separate the handheld part from the power cord before cleaning the handheld part in water.

1. This product uses a USB charging cable.
2. You can use the 5V adapter mobile phone charger, or a USB interface of cars, computers and others for charging.
3. If the charging cable is damaged, replace it with a new one to avoid danger.
4. The product shall be charged and stored between 5°C and 35°C.
5. Make sure the charge and charging cable are dry. Do not plug or unplug with wet hands to prevent electric shock.
6. Please check if the foil is damaged or deformed before use to avoid damage to your skin.
7. Clean the electric shaver with clean water, but do not soak it in water for a long time.
8. Do not use salt water, hot water above 60 °C, thinners, gasoline, alcohol or other chemicals to clean the electric shaver.
9. It's necessary to ensure to cover the electric shaver with the protective cover when you travel to protect its foil.

10. During the use and charging process, the electric shaver may be slightly heated. This is normal and please feel free to use it.
11. Please do not charge the electric shaver too long.
12. Do not store the electric shaver in direct sunlight or near other sources of heat.

How to Use



Charge

1. When the display shows "Available time, 05 minutes", the indicator light will flash, indicating that the battery is low-energy and needs charging (Fig. 1).
2. Plug the USB charging cable end into the electric shaver, then connect the USB cable to the charger and plug it into the power socket (Fig. 2), or plug the other end of the USB cable into a USB port of computers or cars.
3. When the power is turned on, the display will light

up, with scrolling numbers which will increase as the charging time extends, indicating that it's charging (Fig. 3).
4. Full charging takes about 2 hour on a continuous basis. After full charging, "FULL" and "90 min" will be displayed, indicating the shaver has been fully charged and can be used for about 90 minutes (Note: 90 means a rough available duration instead of full charging until 100) (Fig. 4).

The LED display of this product can display remaining energy. A fully charged electric shaver can provide a shaving duration up to about 90 minutes, but the actual shaving duration may be less than expected due to differences in shaving habits, cleaning habits and beard types.

⚠ The electric shaver can be used in the meanwhile it's being charged by means of USB cable connection if it still has remaining energy.

How to Use



Shave Beard and Head

1. Press the switch button to turn on the electric shaver (Fig. 5).
2. Move the electric shaver foil against the growth direction of your beard on your skin and make straight and reciprocated movements (Fig. 6).
3. Hair on your neck can also be shaved (Fig. 7).
4. Before shaving your head, clean it with warm water and keep your hair dry. For a better effect of use, please use the brush if you need to clean the shaving head during the head shaving process, and wash the shaving head after shaving is completed (Fig. 7-1).


When shaving completed Press the switch button again to turn off the electric shaver, and then cover it with the protective cover to avoid damages to the foil.

⚠ Please do not use any damaged shaving head to avoid injury to your skin; instead, replace it immediately with our original spare shaving head which can be bought where you buy your shaver.

Travel Lock

1. Press and hold the electric shaver switch button for 3 seconds, and then the electric shaver LED display indicates that the safety lock has been locked (Fig. 8).
2. Repeat the above step to unlock (Fig. 9).


How to Use

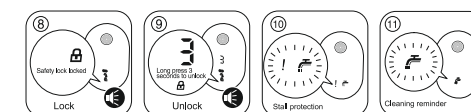

Intelligent Display of Contents

1. When the electric shaver is overloaded, it will be automatically turned off, and the LED display will indicate stall protection. At this time, it should be cleaned up before use (Fig. 10).
2. When the faucet symbol flashes on the LED display, it indicates that the electric shaver needs to be cleaned (Fig. 11).

Maintenance

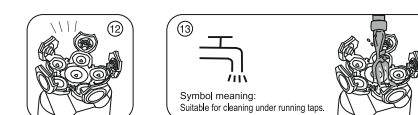

Wash and Clean with Water

1. Before cleaning, be sure to separate the electric shaver from the USB charging cable and press the switch to the off state.

2. Pinch both sides of each shaving head to lift up and open all shaving heads (Fig. 12).
3. The electric shaver can be washed directly under running tap (Fig. 13), but please do not soak it in water for a long time.
4. After washing, drain any excessive water, put it horizontally and air-dry it. Do not wipe the shaving head part with tissue or cloth, which may cause damage.
5. First air-dry the electric shaver, then cover it with the protective cover to prevent damage to the foil and avoid accumulation of dust.
6. After the head cutting is dried, first put the middle little head cutting aim at the card slot, then rotate 15 degree in a clockwise direction, finally close the edge head cutting in turn (Fig 14).



Replace Shaving Head

The shaving head should be replaced at least once every six months for a good experience. If there is no damaged caused by human factors, the shaver can have a long service life. Any damaged shaving head can only be replaced with our original double-ring six-blade shaving head.

⚠ Separate the handheld part from the power cord before cleaning the handheld part in water.

Operating Instructions for Hair Clipper

Switch off the shaver, pull it up (not screw) to unload the shaving head, and insert the flange of the hair clipper head part into the groove on the top of the shaver body. Then press down the hair clipper head part to mount it on the shaver body (a click will be heard) (Fig 15).



Trim

Note: Make sure your hair is clean and dry, and please don't use the product for wet hair just washed.

1. Before trimming, first do remember to comb hair along its growth direction with a comb.
2. Mount the comb accessory into the slots on both sides of the product (a click will be heard), and make sure it's mounted correctly (Fig 16).
3. The included combs are optional for different haircut lengths, such as 3mm 5mm and 7 mm, which can be mounted as required. To replace a comb, unload it from the groove on one side first (Fig.17).
4. Press the ON/OFF button and move the product slowly on hair. To get the best haircut effect, it's necessary to move the product against the growth direction of hair.



Clean

1. Pull out the hair clipper head and clean the trimming part with the included brush or wash the hair clipper head assembly with water.
2. Don't clean the product with such liquids as abrasives, alcohol, petrol or acetone.
3. Clean the product immediately each time it's used.

Operating Instructions for Vibrissa Trimmer

Switch off the shaver, pull it up (not screw) to unload the shaving head, and insert the flange of the vibrissa trimmer head part into the groove on the top of the shaver body. Then press down the vibrissa trimmer head part to mount it on the shaver body (a click will be heard) (Fig. 18).

Trim Vibrissa

1. Make sure your nasal cavity is clean
2. Start the ON/OFF button, insert the vibrissa trimmer tip into one of your nasal cavities slowly and meanwhile turn the tip to remove overlong vibrissa (Fig 19). The insertion depth of the tip into your nasal cavity must not exceed 0.5cm. To reduce pruritus, make sure that one side of the tip is firmly pressed against your skin.



Trim Ear Hair


1. Clean your external auditory canal to ensure there is no cerumen.
2. Start the ON/OFF button and then make the tip circle along your ear gently to remove protrudent hair on your helix (Fig.20).
3. Insert the vibrissa trimmer tip into the external auditory canal carefully. The insertion depth of the tip into your auditory canal shall not exceed 0.5m, or else your eardrum may be injured.



Clean Your Face with Facial Cleaner

Remove sebum and dirt on your face with the facial cleaner every day, which helps to keep your skin clean and healthy.

1. Make sure the device has been turned off and that the cleaning brush has been attached to the device (Fig 21).
2. Moisten the facial cleaner with water. Do not clean your face directly with a dry facial cleaner, which may irritate your skin.

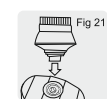

1. You can use the appliance to trim edge or shave facial hair (beard, moustache and sideburns).
2. Shave for a smooth result, trim to obtain a certain length and edge to create perfect edges and sharp lines. This appliance is not intended for shaving, edging or trimming hairs on lower body parts or scalp hair. Take your time when you first start to use the appliance. You have to acquire practice with the appliance. (Fig 22)



Accessories

The following accessories are included with the product: Charger; Brush;

Environmental Protection

1. To discard the product, please don't put it together with general domestic rubbish heaps but hand it to the officially designated recycle center for the environmental protection (Fig 23)
2. The built-in rechargeable battery contains substances which may pollute the environment, so it must be unloaded from the product or sent to the officially designated recycle center to be disposed before it is discarded. The battery should not be unloaded unless it has been used up.

1. Unplug the charger and also pull out the product's plug from the shaver.
2. Unload the battery.

Do not plug in the shaver again after unloading the battery.



Rated voltage:3.7V
Rated power:5W
Input parameter:5V --- (USB)
Charge:2 hour Expend:90 minute
Executive standard:
GB4706.1-2005/GB4706.9-2008

