

49 Key Hand-Rolled Piano Function Introduction

1. Keys: There are a total of 49 keys, ranging from C4 to C8.
2. Volume Control: Use the "Volume Up" or "Volume Down" button to adjust the volume. There are 16 levels in total.
3. Demo Mode: Press the "Demo" button to play one of six pre-recorded demos. Press "Start/Stop" to end playback.
4. Tempo Speed Control: Use the "Tempo Up" or "Tempo Down" button to adjust the playback speed. There are 32 levels in total.
5. Tone:

A) Play in Tone1 order: Piano, harp, organ, bell, guitar, violin, string, guitar.

B) Play in Tone2 order: trumpet, tuba, electric, bass, saxophone, flute, banjo, oboe, horn.

6. Sound Mode: Use the "Replay" button to choose between three different sounds: echo, mixing, and vibrato. The corresponding sound will be heard when playing the keys.
7. Rhythm Button: There are 10 rhythm buttons (RHYTHM1-10) to choose from: disco, dance, funk, ballad, fusion, bossa nova, cha-cha, waltz, march, and polka.
8. Insert Mode: When playing any rhythm, press the "Fillin" button to insert a drum sound.
9. Drum Button: Pressing the "Drum" button will toggle between drums, Tone1, and Tone2 modes.

A) In the DRUM mode, DRUM1-8 correspond to bass, snare, hi-hat, crash, cymbal, tom, cow bell, applause, and maracas.

B) In the Tone1 mode, DRUM1-8 correspond to Tone1 keys.

C) In the Tone2 mode, DRUM1-8 correspond to Tone2 keys.

10. Rhythm Edit Mode:

A) Press the "Rhythm Edit" button to enter the rhythm editor state.

B) Press drum1-8 buttons as needed.

C) Press the "Rhythm" key to replay the edited rhythm. Continue editing until the "Rhythm Edit" or "Start/Stop" button is pressed.

11. Recording Mode:

- A) Press the "Record" button to enter recording mode. The recording light will turn on.
- B) Play the keys to record your performance. You can record up to 60 buttons.
- C) Press the "Replay" button to playback your recording.
- D) Press the "Record" or "Start/Stop" button to exit recording mode. The recording light will turn off.

12. One Key One Note Function:

- A) Press the "O.K.O.N." button to enter one key one note state.
- B) Press any key to start playing the accompaniment part of the demo. The system will wait for your input.
- C) Press any key to play back the theme parts of the demo.
- D) After the current song is finished, press any key to move to the next track. Press the "Start/Stop" button or "O.K.O.N." key to exit the mode.

13. Learning Mode:

- A) Press the "Learn" button to enter learning mode.
- B) Press any key to start playing the demo.
- C) While pressing the keys, the main melody of the demo will be muted, allowing you to play along with the accompaniment.
- D) After 3 seconds of no key press, the main melody will resume playing.

14. Single Chord

- A) Press the Rhythm1-10 button.
- B) Press the Single Chord button, and a beep will be heard.
- C) Press any key from C4 to C5, and a single chord will be played.
- D) Press the START/STOP button to exit.

15. More Chord

- A) Press the Rhythm1-10 button.
- B) Press the More Chord button, and a beep will be heard.
- C) Press any three combination keys of C4 and C5, and a looping chord with more fingers will be played.