

CHANGING THE RANGE OF MY CHART RECORDER

To change the range on your recorder from one preset range to another (note: ranges of your recorder are listed on the sticker underneath the lower right of your chart):

1. Plug in the recorder (pen will move off the chart and then back onto the chart and begin recording)
2. Press and release “3” on the membrane switch. Pen will move off the chart and the LED will be solid green
3. Press and hold “1” until LED light goes out
4. Release “1”
5. Observe flashing sequence of the LED. The number of flashes indicates the range the recorder is in
 - 1 Flash = Range #1,
 - 2 Flashes = Range #2,
 - 3 Flashes = Range #3, etc.
6. Press and release “1” to move to the next range or “2” to move to the previous range
7. Once you have selected the desired range, press and release “3”
8. Pen moves onto chart and begins recording in the selected range

