


QuantumX 100/QuantumX 240


Installation Instructions

There are 2 dimming modes of the driver, each of them suitable for different application, and can not be used at the same time.


1. Dimming knob, adjust the light luminance according to different gear.

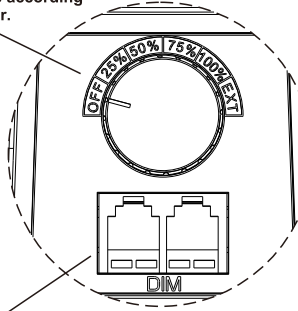



Rj12 network port can connect to two kinds of dimming controller : 0-10V, PWM.

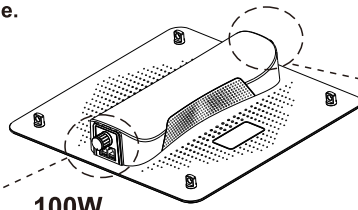

100W



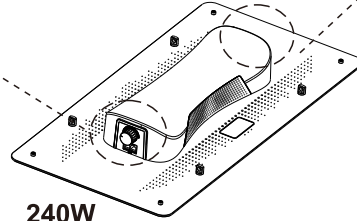


240W

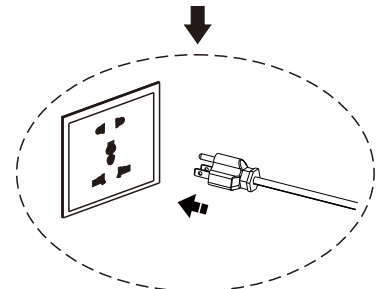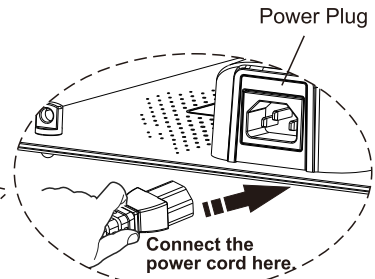


Note: If using RJ12 interface, set dimming knob to Ext.

 1.

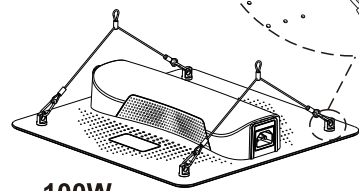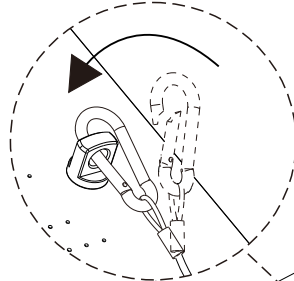


100W




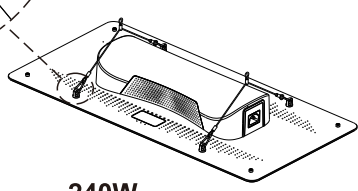


240W

2.

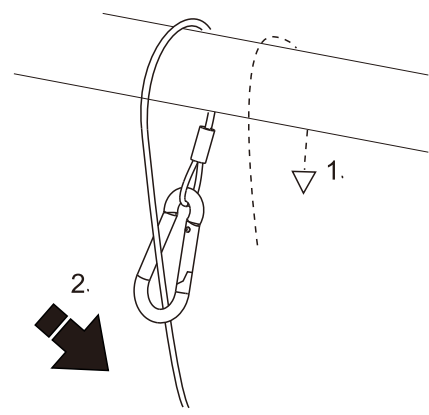

 3.

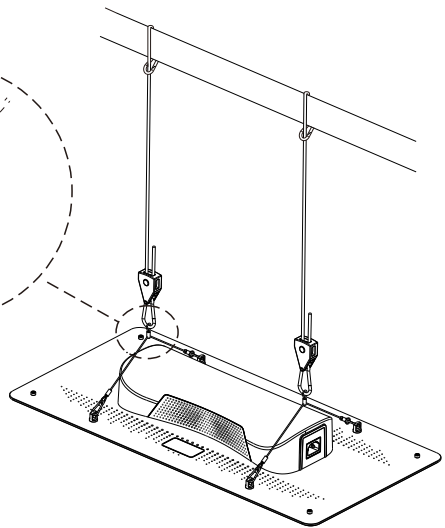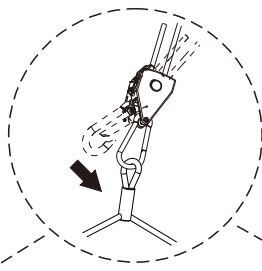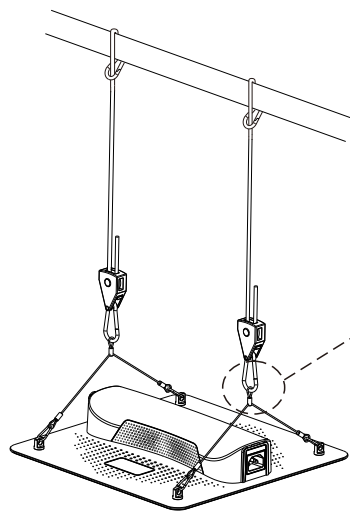

- This luminaire can be indoor use.
- The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
- For type Y attachments:
if the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.