



Thank you for purchasing the X ROCKER! We know you will enjoy your X Rocker experience as much as we do.

Welcome to the world of interactive audio. With your new X Rocker you can now not only hear your music but actually FEEL it. Whether you are listening to music, watching a movie, or playing a game, you will become a part of it.

Get ready to experience sound as you never have!

IMPORTANT: You must keep your original retail receipt as proof of purchase.

HAVE THIS ITEM NUMBER READY WHEN CONTACTING CUSTOMER SERVICE: #5118201

**Need Help? Email: service@acebayou.com Web: www.thexrocker.com
Phone: 1 931 359 2603, In Europe, call 0844 846 7511 or +44(0)118977 8181**



FEATURES

A-Control Panel

- A1-Power Indicator Light
- A2-Audio Input Jack
- A3-Audio Output for linking multiple chairs
- A4-Bass Volume Adjustment
- A5-Volume Adjustment & Power On/Off
- A6-9V DC Power Input Jack
- A7-Headphone Plug in Jack

B-Accessories Supplied



- B1-3m RCA Stereo to 3.5mm stereo plug cable(1 PC)
- B2-INPUT:100-240V AC 50/60Hz
OUTPUT:9V DC 1000mA 9W Main POWER Adapter.
- B3-RCA Female-to-Female Plug Adapter(2 PCS)
- B4-0.15m RCA stereo female to 3.5mm stereo male cable (1PC)

C-Audio Specifications

Signal-to-Noise Rate(Amplifier): Subwoofer :>50dB
Satellite :>60dB

Frequency Response: 60Hz~15kHz
Distortion: Subwoofer: <4%(F=100Hz)
Satellite: <1%(F=1 kHz)

Input: DC 9V/1A

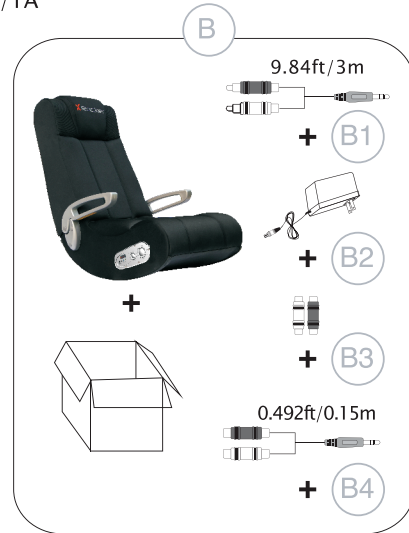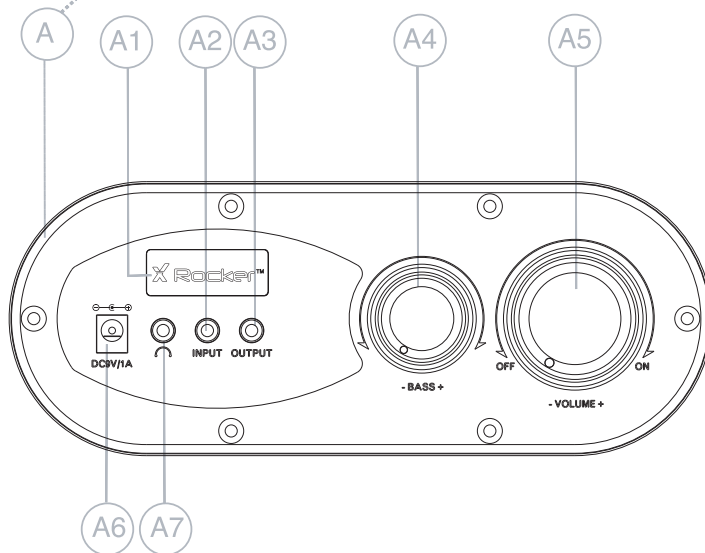

* SOME PARTS MAY VARY SLIGHTLY

Need Help? Email: service@acebayou.com Web: www.thexrocker.com
Phone:1 931 359 2603, In Europe, call 0844 846 7511 or +44(0)118977 8181

FUNCTIONS:

- Foldable construction for ease of storage and portability.
- Side control panel with volume, bass control, and input/output jacks.
- Ergonomic design with full back support.
- Headphone jack for personal use.
- Easy to clean heavy duty upholstery grade vinyl cover.

READ BEFORE USAGE:

- Always make sure hinge is locked before moving.
- Always make sure hinge is locked before sitting in the chair.
- Excessive use of audio equipment could lead to hearing loss.
- Excessive sound pressure from earphones and headphones can cause hearing loss.
- Children under the age of 13 should not use this product without adult supervision.
- Strictly for indoor use. Do not expose to direct sunlight, moisture or extreme temperatures.
- If cover becomes wet, disconnect power immediately and don't use until completely dry.
- Do not attempt to remove the cover or any components. Removal of the cover or tampering with components puts you at risk for injury or death from electrical shock.

SET UP:

1. Lift X Rocker out of box .
2. Keep the chair in the folded position and place it on the floor so that back side of the chair is facing up and the bottom of the seat is touching the floor.
3. Review the set up diagrams to familiarize yourself with the X Rocker's components, accessories, and set-up.
4. Insert pin into closure. Pull and secure the Velcro flap to hide pin and closure. Please complete 1-4 to assemble the chair.
5. Unpack the power adapter and connect it to the main power outlet, then to the power jack on the control panel (A6).
6. Please rotate the volume knob(A5) to on status and confirm the light indicator light (A1) is on.
7. Follow the connection diagrams. They show how to connect the X Rocker to the audio source of your choice .
8. Adjust the bass and volume levels to your preference---start rocking.

More information please see additional assembly instruction!

Need Help? Email: service@acebayou.com Web: www.thexrocker.com
Phone: 1 931 359 2603, In Europe, call 0844 846 7511 or +44(0)118977 8181

CONNECTION GUIDE

DIAGRAM 1 XBOX™, XBOX 360™, PLAYSTATION 3™ & WII

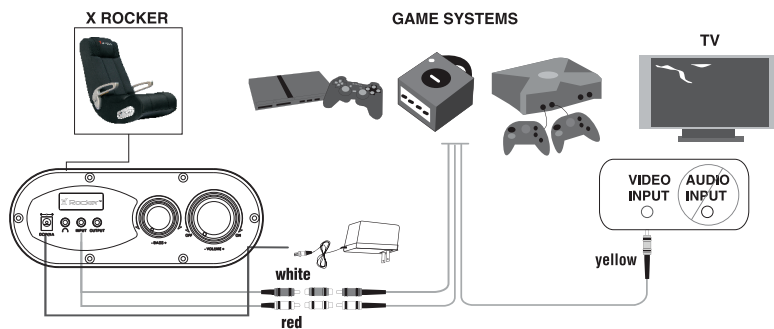


DIAGRAM 2 HOME THEATER & SATELLITE

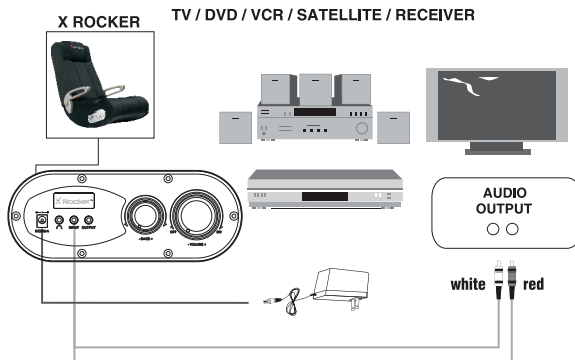


DIAGRAM 3 PORTABLE DEVICES


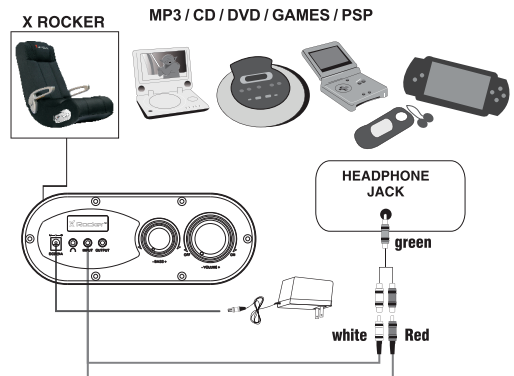


DIAGRAM 4 MULTI-USER CONNECTION

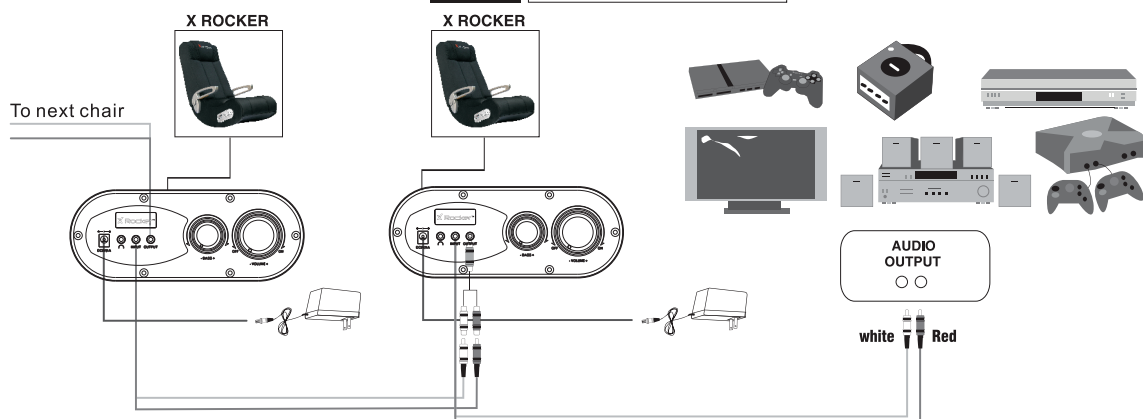

Need Help? Email: service@acebayou.com Web: www.thexrocker.com
Phone: 1 931 359 2603, In Europe, call 0844 846 7511 or +44(0)118977 8181

Wired Connection

Direct connection to game console

If you use component or AV cable to connect console to TV:



- Fit the B3 connectors to the ends of the B1 cable
- Unplug the Red and White plugs of the console's AV cable from the TV, leaving the Yellow (video) plug in place.
- Plug the Red and White plugs of the console's AV cable into the B3 connectors on the Rocker's B1 cable.

Component or AV cables are supplied with new models of PlayStation 3, X Box Elite and Wii, as well as earlier generation consoles.

If you use HDMI cable to connect to TV

Connect Rocker to one of TV's Audio Out connections. Most HD-ready TV sets have some combination of RCA, mini-plug or optical audio interfaces enabling audio connection to accessories. Many have all three.



- **RCA connection** is direct to the RCA plug terminations of the Rocker's B1 cable, but make sure you are connecting to an Audio Out pair. If your TV has only two RCA sockets and they are not marked Audio Out, they are probably input sockets and cannot send audio information to the Rocker.
- **Mini Plug connection.** Mini Plug sockets are often found on the front or side of the TV set, marked with the headset icon². Fit the RCA-to-Mini Plug adapter [B4 on instructions] to the RCA ends of your three-meter cable [B1 on instructions], converting your three-meter cable to a mini plug-to-mini plug connector. Plug one end into TV's headset socket and the other into Rocker's

mini Plug input socket. (This is same configuration as for MP3 and other portable/handheld devices.) NOTE: Audio out volume through this outlet is usually separately adjustable from speaker volume. Please consult TV's user guide for how to regulate output.

- **Optical Audio Out:** A few models of TV only have optical audio out. If you have one of these sets, you will need an optical to cable or optical to RCA coaxial adapter, sometimes called a Toslink to RCA adapter, and some connecting cables. There are several models of adapter available at reasonable prices from general electronic retailers and HD specialist shops and web sites.

Wireless Connection

- **If you use the console's Component or AV cable:** For direct connection to a game console, fit the mini-plug end of the B4 Mini Plug-RCA adapter to the Rocker's transmitter. Fit the RCA socket ends to the red and white audio plugs of the component or AV cable. If they are plugged into the TV, remove them, leaving the yellow video cable in place.
- **If you use HDMI connection to the TV:** Fit the Rocker's transmitter to an available audio-out on the TV, using the appropriate connector mini-plug to mini-plug for the headset audio-out, or mini plug-to-RCA for RCA audio-out.
- **Other sound sources:** Connect transmitter to MP3 players or handheld games using mini plug-to-mini plug connector. For other devices such as stereo amplifiers, locate the most suitable audio output. Connectors compatible with most sound sources are included with your Rocker.

Need Help? Email: service@acebayou.com Web: www.thexrocker.com
Phone: 1 931 359 2603, In Europe, call 0844 846 7511 or +44(0)118977 8181

TROUBLE SHOOTING

- Unable to connect to game console -

Most gaming consoles are shipped from the manufacturer with an Audio/ Video RCA cable. The A/V RCA cable has three RCA plugs: a video plug (yellow) and two audio plugs (red and white). If your gaming console came with an A/V RCA cable, please follow the instructions supplied by the game console manufacturer for setting up your gaming console and connecting it to the television. Please note that you must leave the red and white audio jacks on the A/V cable UNCONNECTED. Once the console is properly connected to your TV, please follow the diagram in the illustrated X Rocker Set-up guide to connect the gaming console to the X Rocker.

If your gaming console was shipped with a coaxial cable, instead of an A/V RCA cable, you must follow an alternate set-up procedure (coaxial cable is the same type of cable that is used to connect a VCR to the TV). You will quickly recognize if your gaming console uses this type of cable. It connects the gaming console directly to the television and carries both the audio and video signal over a single cable. If your gaming console uses a coaxial cable, you CAN NOT connect it directly to the X Rocker. Instead, you must

Use an intermediary A/V device (such as a TV, VCR, DVD, TiVO, etc) Please follow these steps:

- a. Connect your gaming console to the intermediary A/V device via the coaxial cable.
- b. Connect the X Rocker to the 'Audio Out' jack on the intermediary A/V device.
- c. Follow diagram 2 in the X Rocker Set-up guide to connect the X Rocker to the intermediary A/V device and finalize the setup.

If your gaming console is attached to an HD TV with an HDMI cable. You will need to connect the chair using either the audio out jacks on the back of the TV or by plugging into the headphone jack on the front of the TV.

- Unable to hear any sound from the X ROCKER -

1. Check to ensure that the power adapter is properly connected. When properly connected, the indicate light on the control panel should light up. If the indicate light does not light up, try to use another power outlet in your home.
2. Make sure that the power unit is turned on. The "X Rocker" logo power on indicator light on the control panel should be lit. If it is not, please rotate volume knob on the control panel.
3. Once you have successfully completed 1 and 2, please review the X Rocker illustrated set-up guide and make sure your audio connections are properly made. If the audio connections are made properly, please check that The volume on the hand remote is tuned on to an audible level on both the TV and the chair.
4. If you have completed 1 – 3 and still do not hear sound, try connecting another audio source (CD player, television, VCR or game console) and go through the steps again. Still not working? Help is as easy as 1,2,3:
 1. Please contact Ace Bayou Europe Service Center Via email support@x-rocker.co.uk.
 2. Call 0844 846 7511 or +44(0)118977 8181 to request assistance.
 3. Please go to www.x-rocker.co.uk for answers to frequently asked questions.

Need Help? Email: service@acebayou.com Web: www.thexrocker.com
Phone: 1 931 359 2603, In Europe, call 0844 846 7511 or +44(0)118977 8181

WARRANTY PAGE

Limited Warranty:

Ace Bayou warrants this product (including any accessories) against defects in material and workmanship for a period of 90 days from the date of first consumer purchase. This warranty is enforceable only by the original purchaser.

ALL DAMAGED OR MISSING PARTS MUST BE REPORTED WITHIN 14 DAYS OF PURCHASE.

This warranty covers all defects in material and workmanship in this product, but DOES NOT COVER the following:

1. Damage, deterioration or malfunction resulting from:
 - a. Acts of God, accident, misuse, abuse, negligence, improper installation, maintenance or operation, or failure to follow the instructions contained in this Owners Manual.
 - b. Any damage in the shipment of the products. (Claims must be presented to the carrier)
 - c. Repair, attempted repair, or modifications by anyone other than the Ace Bayou Service Center.
2. Any unit which has been modified or attempted to be modified or altered in anyway whatsoever.
3. Normal wear and periodic maintenance.
4. Any unit used for industrial or commercial purposes (including rental).
5. Products sold AS IS or WITH ALL FAULTS, or consumables (such as fuses, batteries, etc).
6. Customer instruction installation, set up adjustments or signal reception problems.

Ace Bayou will repair or replace (at its discretion) units covered by this warranty, without charge to the consumer for labor or materials. YOU ARE RESPONSIBLE FOR INITIAL SHIPPING CHARGES. However, we will pay the return shipping charges to any destination within European Union if repairs are covered by the warranty.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. ACE BAYOU SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESSED OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE LENGTH OF THIS WARRANTY.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
 2. This device must accept any interference received, including interference that may cause undesired operation.
- DO NOT SHIP ANYTHING WITHOUT CONTACTING US FIRST. DO NOT SHIP ANY PARTS OF WHOLE UNITS TO THIS ADDRESS FOR REPAIR.

For service assistance, product information, or to locate a dealer nearest you please call or write to:

In Europe	In North America
Ace Bayou EU Tel:0844 846 7511 or +44(0)118977 8181 Email:support@x-rocker.co.uk Web site:www.x-rocker.co.uk	Ace Bayou Corp PO Box 1853 Lewisburg, TN 37091 1-866-969-2603 or 931-359-2603 Email: service@acebayou.com

Need Help? Email: service@acebayou.com Web: www.thexrocker.com
Phone:1 931 359 2603, In Europe, call 0844 846 7511 or +44(0)118977 8181

