

GEL BLASTER SURGE XL

STEP 1 - HYDRATE YOUR GELLETS® !! IMPORTANT !!

Gellets™ must be submerged in water for at least two hours to fully expand to size. They also need to have plenty of water to absorb (**this is very important**) - you'll know there was plenty of water if after two hours the Gellets are still submerged in the water. Failing to completely hydrate Gellets will cause your Gel Blaster® to seem crappy.

Note: Make sure that the Gellets are prepared in an adequate sized container. Gellets will expand ten times their original size. Store hydrated Gellets away from the elements and direct sunlight.

STEP 2 - CHARGE YOUR BLASTER

Charge your blaster via the USB-C port at the bottom of your blaster. The battery power indicator located on top of your blaster will blink while charging. When all of the lights are lit and steady, the blaster is fully charged.

STEP 3 - FILL YOUR HOPPER & DRAIN YOUR GELLETS

Fill your hopper with hydrated Gellets - **make sure all water is drained from the hopper before installing on your blaster.** If too much water enters through the feedneck, it can damage your blaster internals.

STEP 4 - INSTALL HOPPER ONTO BLASTER

Remove the feedneck from your SURGE XL and screw it onto the full hopper. Flip your SURGE XL upside down so that the fins are facing the ground, then slide the feedneck onto the top rail of the SURGE XL so that the green triangle.

IMPORTANT - Make sure you slide the feedneck all the way forward until you feel and hear a "click". Failing to do so will cause your SURGE XL to misfire.

STEP 5 - OPTIONAL: ADJUST VELOCITY

If you've already installed the buttstock, remove it by pressing the green button below it and sliding the buttstock down and off. Use the green Velocity Adjustment Tool provided by pressing it onto the green adjustment knob located at the back of the blaster. Turn it counter-clockwise to bring your blaster down to as low as 170fps.

IMPORTANT - DO NOT OVER TORQUE THE ADJUSTMENT KNOB!

STEP 6 - PROTECT YOUR EYES!

Put on your provided eye protection when using your Gel Blaster SURGE XL. Make sure that others within firing distance are wearing eye protection too! Everyone! Eye protection! Wear it!

 
STEP 7 - POWER ON AND HAVE A BLAST!

Switch between Semi-Auto, 3-Shot Burst Fire, and Full-Auto with the Blaster Mode Switch.




ONE GALLON OF WATER MAKES 10,000 GELLETS®!


STATUS LIGHTS

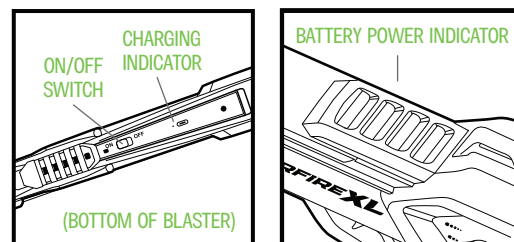


HOPPER INSTALL

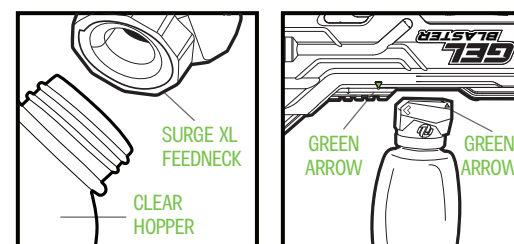 


REMOVE SWAP FINS & TIPS INSTALL

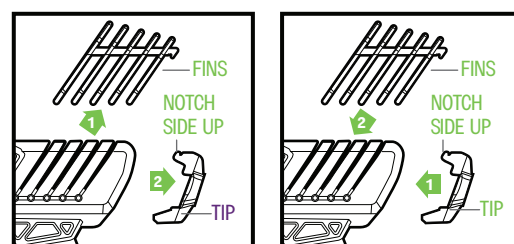 

BLASTER MODE SWITCH

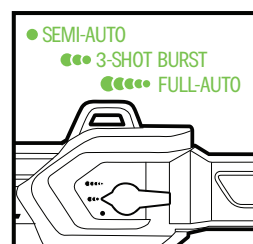 

ADJUST VELOCITY

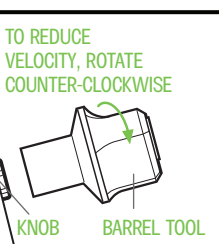 

GELLETS INSTRUCTIONS



HOW TO PROPERLY HYDRATE YOUR GELLETS®

1. Pour one 10k Gellet pack (included) into a one gallon+ container (preferably with a lid)
2. Add one gallon of water and wait at least two hours
3. Strain your full-size Gellets® of excess water
4. Fill your hopper and start blasting!

HOW TO STORE YOUR GELLETS®

Keep hydrated Gellets® ready for use whenever you want! Here's how to properly store hydrated Gellets.

1. Add water to your ammo container until all Gellets are submerged
2. Seal the container with a lid
3. Store in a cool place out of direct sunlight

MORE INFO ABOUT GELLETS®

- Gellets® expand 10x their original size!
- Removing excess water is important; wet Gellets can damage your blaster
- Avoid dehydration by making sure your Gellets are completely submerged in water when not in use
- With proper storage, standard hydrated Gellets are usable for up to 3 months!

If you have any other questions please feel free to Email the Gel Blaster team at support@gelblaster.com or call 844-GELLETS

FAQ & QUICK FIXES

Q: My hopper & feedneck keep sliding off and won't feed the Gellets into my Gel Blaster®?

A: Please make sure your feedneck is oriented correctly - the green triangles of your blaster and feedneck should be aligned. If installed correctly, the hopper and feedneck will click & lock in place.

Q: My Gellets aren't shooting correctly and are rolling out of my Gel Blaster's barrel?

A: The Gellets might not be fully hydrated. To make sure your Gellets are fully hydrated, please allow your Gellets to be submerged in water for a minimum of two hours before playing.

Q: My Gel Blaster® seems jammed?

A: Your Gel Blaster® will rarely get jammed, but if this is the case, please make sure to turn the ON/OFF switch to the OFF position. Now proceed to check the tip and barrel of the Gel Blaster. If debris is found in your Gel Blaster, remove your hopper & feedneck and spray canned air directly into the barrel forcing the debris to come out of the tip of the blaster. If the debris is still stuck, use a pipe cleaner to force the remainder out of the tip of the blaster. Never push the debris from the tip/front of the Gel Blaster towards the back, that will only jam your Gel Blaster more.

⚠ WARNING:

Do not change the coloration and markings to make it look more like a firearm. That is dangerous and may be a crime. Buyer and user have the duty to obey all laws about the use and ownership of this toy. Adult supervision required. Misuse or careless use may cause serious injury, especially to the eye.

Eye protection must be used by the user and any person within range. May be dangerous up to 100 feet. Read owner's manual before using. Recommended for ages 14 and up.

LIMITED WARRANTY, SUBROGATION WAIVER, WAIVER AND RELEASE, BINDING AGREEMENT TO ARBITRATE, CLASS ACTION WAIVER

Gel Blaster, Inc. warrants this Gel Blaster® for a period of one month from the date of consumer purchase to be free from defects in material and workmanship. Gel Blaster, LLC's obligation under this warranty is limited to repair or replacement of the purchased product only (although Gel Blaster, LLC may determine to issue a refund, in its sole and exclusive discretion), and under no circumstances shall Gel Blaster, LLC be liable for any loss, damage, injury, cost of repair, consequential damages, incidental damages, or punitive, treble, or exemplary damages of any kind in connection with the sale, use, failure, or repair of any product purchased from Gel Blaster, LLC, even if such damages are caused by the negligence of the released party, whether sole or in combination with others. You hereby waive any claim by an insurance carrier or other person or entity by way of subrogation, and you hereby assign any and all such subrogation claims to Gel Blaster, LLC.

Gel Blaster, LLC disclaims any warranty of fitness for a particular purpose and any implied warranty of merchantability. All implied warranties are hereby disclaimed, and you agree that the only warranty provided by Gel Blaster, LLC to you is the above.

Gel Blaster, LLC's liability for any and all claims arising out of or connected with the Gel Blaster® shall be limited to the amount paid by consumer for the product plus the sum of \$100.00.

You and Gel Blaster, LLC agree to mandatory, binding arbitration for any and all claims or causes of action between the parties arising out of or in connection with your purchase or use of the Gel Blaster®, its accessories, or otherwise with respect to any claims between you and Gel Blaster, LLC. The arbitration shall take place under the rules of the American Arbitration Association, Consumer Arbitration Rules, before a single arbitrator. The Arbitration shall take place in Dallas, Texas. You understand and agree that you are waiving your rights to a trial by jury. You agree that any claim you have or may ever come to have against Gel Blaster, LLC must be submitted on an individual basis, and you hereby waive the right to assert such claim collectively, such as in a class or mass action. As a condition precedent to filing arbitration, you must contact Gel Blaster, LLC with any claim or dispute, which must be mediated before a mutually agreeable mediator in Dallas, Dallas County, Texas.

You agree to the foregoing terms when you first charge or otherwise seek to use your Gel Blaster® or its accessories.



WARNING: The Gel Blaster is not intended to get wet. Don't submerge your Gel Blaster in water, and make sure your Gellets are fully strained of excess water. This will protect the battery and circuitry within.

**** The Gel Blaster® SURGE XL provides hours of playtime per charge using a powerful lithium polymer battery! But with that power comes the responsibility to take care of your battery. Abuse, neglect, or misuse can ruin your battery, shorten your playtime, or even cause a fire. If your blaster won't take a charge, cease use and charging! Contact support@gelblaster.com**

©2022 Gel Blaster, Inc. All Rights Reserved.