

KIDS **CAMPARK Q3** CAMERA

User Manual

V1108

 
Thank you for purchasing our Campark Q3 digital camera, please read these safety notifications before starting with the camera.

This manual contains camera-related information and common operation instructions, please keep it for further reference.

Safety Notification:

- This product may contain small objects, please proceed with caution.
- Before using this camera, please insert the memory card, and format the memory card in camera menu first.
- Please use high quality Micro SD card, 16GB or 32GB cards are recommended.
- This camera is powered with 3 * AAA batteries, please be careful with the battery polarity, DO NOT install the battery in wrong direction.
- Do not expose the camera to moisture and keep the camera dry.
- DO NOT cover or cover or wrap the camera.
- Keep the camera in a well ventilated area.
- Unplug the cable connected to the camera before using the camera.
- Be sure the camera lens is clean and there is nothing blocking the lens.

Button Function and Connectors:

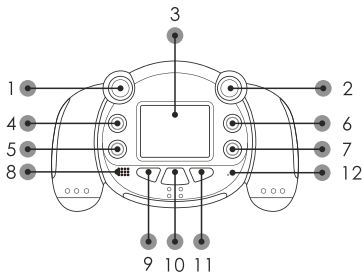

1/2. View Finder

3.Screen

4.Mode

5.Delete

6.Menu

7.Power

 
8.Speaker

9.UP

10.OK

11.Down

12.Micphone

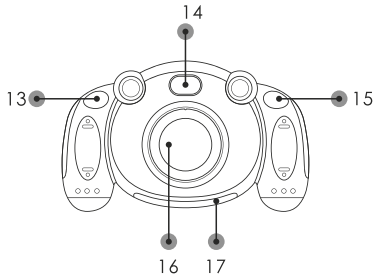


13.Shutter

14.Flash Light

15.Photo Frame

16.Lens

 17.Battery Cover

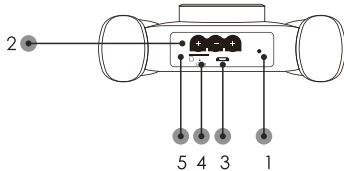

1.Screw Hole

2.Battery Compartment

3.Micro USB Connector

4.Reset

5.Micro SD Card Slot


Button Function and Connectors:

Button	Function
Power	Long Press to turn ON / OFF the camera. In standby, short press to turn ON / OFF the flash light.
Menu	In Photo Mode and Video Mode, short press once to enter Photo and Video setup, short press twice to enter General Setup Mode.
Mode	Short press to switch mode between Photo / Video / Playback
Delete	In playback, short press to delete file.
UP	In Photo Mode, short press to select photo frame. In Setup menu, short press to scroll through menu.
DOWN	In Photo Mode, short press to select photo frame. In Setup menu, short press to scroll through menu.
OK	Confirm selection and adjustment. In playback mode, Short press to start playing video file
Shutter	Short press to take photo and start video recording.
Photo Frame	In Photo Mode, short press to select photo frame.
Reset	Press to reset the camera to factory default status.

Basic Operation

Install the AAA battery

 - Unscrew the battery cover screw, and open the battery cover.
- Follow the diagram and install the battery in the battery compartment (according to the positive and negative signs)

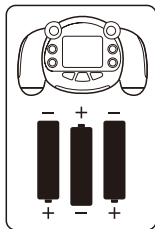

- Install the battery cover back and fasten the screw.

Install the memory card.

- Unscrew the battery cover screw, and open the battery cover.
- Insert the memory card in the right direction. Install the battery cover back and fasten the screw

Power ON and Power OFF the camera.

After installing the battery and memory card, the camera is ready to work, simply press and hold the power button until the screen lights up, the camera is on.

Under any mode press and hold the power button will turn off the camera.

Take a Photo

In Photo Mode, short press the Shutter button to take a photo.

Notification:

- 1.Please use high quality battery, battery quality directly affects the life of the camera.
- 2.This camera does not charge battery. (Even with rechargeable batteries)
- 3.Please insert the memory card before the camera is turned on.
- 4.The camera supports Max 32GB memory card.

Working Mode

The Q3 camera works at 3 modes, Photo Mode / Video Mode / Playback mode. You can use the Mode button to switch between them.

A.Photo Mode

When you power on the camera, you will automatically enter Photo mode. Under this mode, you can press the Shutter button to take photos, press the Photo Frame button to apply photo frames, and short press the Power button to turn on the flash light.

Photo Mode Setup Option

Photo Size: Adjust Photo resolution, 3MP default, 3M/2M/1.3M/VGA available.

Camera Timer: Setup timer shutter, so the camera will take the photo a few seconds later when you press the shutter. 3S / 5S available.

B.Playback mode

In Photo mode, short press Mode button to enter Playback mode, under this mode, you can view the photo taken and recorded videos. Short press OK button to start playing the video. Short press Delete button to delete files.

C.Video Mode

Under Photo Mode, short press Mode button twice to enter video mode, under this mode, you can use the Shutter button to start recording a video.

Video Mode Setup Option

Video Size: Adjust video resolution, VGA default, 720P/VGA available.

Time Stamp: Mark time and date in video, ON / OFF available.

Motion Detection: With this function on , the camera will automatically start recording when it detects movement in the lens range.ON / OFF available.

Video Time: Setup the video length, 1 min / 3 min / 5 min available.

D.Setup Mode

Under Photo Mode and Video Mode, press the Menu button twice to enter General Setup. In this menu, you can change the basic function setup about the camera.

General Setup Menu Option

Format: Use this option to format the memory card.

Language: Change camera menu language, English / Chinese / Japanese / French / German / Korean / Italian / Portuguese / Russian available.

LCD Auto Off: Setup the time so the camera will automatically turn off screen display when there is no operation for the preset time. 1 min / 3 min / 5 min available.

Auto Off : Setup the time so the camera will automatically power off when there is no operation for the preset time. 1 min / 3 min / 5 min available.

SYS Reset: System Reset, Choose to reset camera to factory default status.

Light Frequency: Setup light frequency according to local regulation. 50Hz / 60Hz available.

Date Input: Choose to setup local time. Use UP and DOWN to adjust specific number, press OK to confirm change and move to next.

USB: Choose to select the function to apply when the camera is connected to a computer. PC Cam / Disk Drive available.

Maintenance and safety

Camera

1. Keeping the lens clean can help you take clear, clear photos at the most likely focal length. Gently wipe the prints and dust on the lens and LCD screen with a dry, soft gauze.
2. Wipe the surface of the camera with a clean, dry cloth. Do not use a rough cloth that will scratch the surface of the camera.
3. Don't put the camera in high heat for a long time or in a very warm environment (such as tool bags, suitcases, etc.)

Memory card

1. To ensure best functionality, please use branded high quality Micro SD card.
2. To avoid data loss, do not expose the card to high heat, humidity, or static electricity.
3. Format the memory card before using.

Security prevention

- a. In order to avoid the danger of electric shock. Do not open the camera or repair it yourself.
- b. Keep the camera dry. Do not expose the camera to excessively humid conditions that may cause camera malfunction.
- c. If moisture enters the camera, stop using it immediately. It must be completely dry in the air before reusing the camera.

Not having a positive experience?

support@campark.cc

We will offer prompt and authoritative reply within 24 hours, and try our best to resolve your issue ASAP. More Safe Guarantee with campark. If you are not satisfied with our product, kindly tell us about your thought for improving. That will be much appreciated and helpful.

