

KIDS CAMPARK Q4 CAMERA

User Manual

 
Thank you for purchasing our Campark Q4 digital camera, please read these safety notifications before starting with the camera.

This manual contains camera-related information and common operation instructions, please keep it for further reference.


Safety Notification:

- This product may contain small objects, please proceed with caution.
- Before using this camera, please insert the memory card, and format the memory card in camera menu first.
- Please use high quality Micro SD card, 16GB or 32GB cards are recommended.
- This camera is powered with 4 * AA batteries, please be careful with the battery polarity, DO NOT install the battery in wrong direction.
- Do not expose the camera to moisture and keep the camera dry.
- DO NOT cover or wrap the camera.
- Keep the camera in a well ventilated area.
- Unplug the cable connected to the camera before using the camera.
- Be sure the camera lens is clean and there is nothing blocking the lens.


Button Function and Connectors:

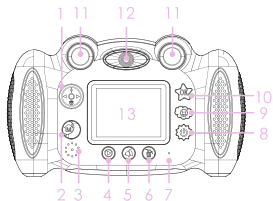

 
- 1.Direction Button
- 2.Home Button
- 3.Speaker
- 4.Playback Button
- 5.Voice Changer Button
- 6.Delete Button
- 7.Status Indicator

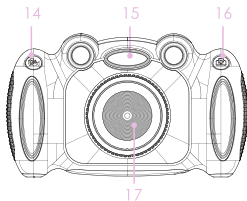

 - 8.Power Button
- 9.Photo Frame Switch
- 10.OK Button
- 11.Viewfinder
- 12.Rear Lens
- 13.Screen
- 14.Shutter



 - 15.Flash Light
- 16.Front / Rear Lens Switch
- 17.Front Lens
- 18.Battery Cover Screw
- 19.Micro USB
- 20.Micro SD Card Slot
- 21.Battery Compartment

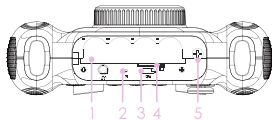

- 1. Battery Compartment
- 2. Reset
- 3. Micro USB Connector

- 4. Micro SD Card Slot
- 5. Screw Hole

Camera button Function


Button	Function
Direction Button	Move the cursor around to choose menu and adjust values.
UP	In Photo Mode, short press to turn ON / OFF flash light In Photo Mode, long press to zoom in.
Down	In Photo Mode, short press to turn ON / OFF timer photo In Photo Mode, long press to zoom out.
Left / Right	Switch different photo frames.
Home	Return to home page
Playback	In photo or video recording mode, short press to enter file playback.
Voice Changer	In voice recording playback, short press to change the voice.
Delete	In photo or video playback mode, short press to delete selected file.

OK	Confirm selection and adjustment. In playback mode, Short press to start playing video files.
Photo Frame	In Photo Mode, short press to activate photo frame.
Power	Short Press to turn on the camera, Long Press to turn OFF the camera.
Shutter	Short press to take photo and start video recording.
Front / Rear Lens Switch	In photo or video recording mode, short press to switch between front and rear lens.
Reset	Press to reset the camera to factory default status.

Basic Operation

Install the AAAA battery

 - Unscrew the battery cover screw, and open the battery cover.
- Follow the diagram and install the battery in the battery compartment (according to the positive and negative signs)

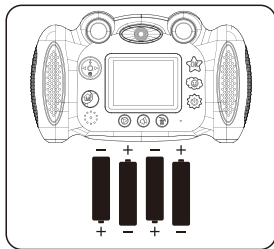

- Install the battery cover back and fasten the screw.

Install the memory card.

- Unscrew the battery cover screw, and open the battery cover.
- Insert the memory card in the right direction. Install the battery cover back and fasten the screw

Power ON and Power OFF the camera.

After installing the battery and memory card, the camera is ready to work, simply press the power button and the screen will light up, the camera is on.

In the home page. press and hold the power button will turn off the camera.

Home Page

After turning on the camera. It will automatically enter Home Page. In this page, you can use the direction rocker to choose different mode option.

Notification:

- 1.Please use high quality battery, battery quality directly affects the life of the camera.
- 2.This camera does NOT charge the battery. (Even with rechargeable batteries)
- 3.Please insert the memory card before the camera is turned on.
- 4.The camera supports Max 32GB Micro SD card.

Home Page and Main Function



Photo Mode



In Photo Mode, you can take high resolution photos with the Shutter button, also you can:

1. Press the Photo Frame Button to activate photo frame, use the Left/Right button to choose different photo frames.
2. Press the Lens Switch Button to switch front and rear lens
3. Press UP button to turn ON / OFF flashlight.
4. Press Down Button to turn ON/OFF timer photo.

Video Mode



In Video Mode, you can press the Shutter button to start / stop video recording.

Game Mode



In Game Mode, press the left and right to choose different mini games, and press OK to enter game.

Voice Recording Mode



In Voice Recording Mode, you can press the Shutter button to start and stop voice recording.

Then press Shutter or OK button to start voice playback, while voice playback, press the Voice Changer button to change voice.

Playback Mode



In Playback Mode, you can see all the photos and videos recorded.

There are 4 folders. A for front lens files, B for rear lens files, 2 individual folders stands for Photo and Video.

Setup



In Setup Mode, you can change all the setup options and configuration according to fit your needs.

Setup Menu:

Menu	Value	Function
Resolution	8MP / 5MP / 3MP	Change Front lens photo resolution
Video Resolution	640*320 / 320*240	Change Front lens video resolution
Wallpaper	1/2/3/4	Change different home page wallpaper
Screensaver	1 Min / 2 Min / 3Min / OFF	Setup the screen saver activated time
Power Frequency	50Hz / 60Hz	Setup power frequency
Time	N/A	Setup local time and date
Date	N/A	Setup local time and date
Time-Lapse	ON / OFF	
Volume	Adjustable	Adjust camera speaker volume
Language	English	Menu Language

Link to USB	Yes /No	Connect the camera to your PC
Format	Yes /No	Format the memory card
Reset All	Yes /No	Reset the camera to default status
Edition	N/A	Check firmware version

Maintenance and safety

Camera

1. Keeping the lens clean can help you take clear, clear photos at the most likely focal length. Gently wipe the prints and dust on the lens and LCD screen with a dry, soft gauze.
2. Wipe the surface of the camera with a clean, dry cloth. Do not use a rough cloth that will scratch the surface of the camera.
3. Don't put the camera in high heat for a long time or in a very warm environment (such as tool bags, suitcases, etc.)

Memory card

1. To ensure best functionality, please use branded high quality Micro SD card.
2. To avoid data loss, do not expose the card to high heat, humidity, or static electricity.
3. Format the memory card before using.

Security prevention

- a. In order to avoid the danger of electric shock. Do not open the camera or repair it yourself.
- b. Keep the camera dry. Do not expose the camera to excessively humid conditions that may cause camera malfunction.
- c. If moisture enters the camera, stop using it immediately. It must be completely dry in the air before reusing the camera.

Not having a positive experience?

support@campark.net

We will offer prompt and authoritative reply within 24 hours, and try our best to resolve your issue ASAP. More Safe Guarantee with campark. If you are not satisfied with our product, kindly tell us about your thought for improving. That will be much appreciated and helpful.

