

正面

WiFi Smart Camera
Instruction Manual

Device Installation and Configuration

Description
Light Sensor: Collect ambient luminosity value, turn on the infrared light when the current illuminance is less than 3 Lux.
Reset button: The working state of the device, press 10 seconds to restore factory settings, and the camera will have a voice prompt broadcast.
SD card slot: TF card, storage video and playback video.
DC power supply: Power input
Network port: Connect the Lan cable.

1. Download "iCSee" APP
Search for "iCSee" app in App Store / Google Play Store, or scan the QR code below to download.

Scan QR code to download APP

2. Sign up and log in

a.If you already have an account, please log in.
b.If you don't have an iCSee account yet, please click sign up to go to the registration page.

3. Add device.

1. Click the "+" in the upper right corner to add a device.

2. Select the list "WiFi Camera"

3. Connect the camera to the power adapter, then click "Next"

4. Connect your phone to the same WiFi which your camera will be connecting to, then press "Confirm"

5. Put the QR code generated by the App in front of the camera's short focal lens.

6. Set password → Pick a name → Configure Guide

7. The connection is successful.

The correct posture for QR Code scanning.

Note: This camera has two lenses, please place the QR code in front of the short focal lens when scanning the QR code, the long-focus lens cannot scan the QR code.

背面

4. Instructions

1.Zoom description

- Click the zoom button on the real-time preview screen to zoom the screen in real time(Figure 8, 9).

2.Picture in picture description

- Click the picture-in-picture icon in the lower right corner of the real-time preview screen (Figure 10) to display the close-up view of the picture-in-picture Real-time view of distant view (Figure 11), picture-in-picture supports close-range and distant view switching.

3.How to insert the micro SD memory card correctly

- Micro SD memory card requirements.
 - Only FAT32 format is supported
 - Maximum memory capacity:128GB
 - Micro SD memory card size:1.5x1.1cm
- Insert the SD memory card in the correct direction.
 - The gold part is inserted in the same direction as the camera, with one side of the gold part facing the direction of the slot.
- Push it in until it reaches the bottom.
 - You will need to push in until you hear a clicking sound. Release and it will hold in place.

4.Finish installing the SD memory card

- When you need to remove it, push in the card gently until it disengages from the memory card slot.
- Grab the end of the card and pull it out of the slot.

6.How to Reset the camera

- Please first power in on. Wait one minute for the camera to rotate and self-test.
- Open the cap and press the "reset button" for more than 5 seconds there will be beep sound and the camera self-test and reset.

7. Troubleshooting

Q: Can't turn on the power? The camera does not work?
The camera does not have batteries, you need to connect the camera to the power adapter. When you power it on, wait a minute, the security camera will rotate and self-test, indicating that it can work properly. If not, please contact us.

Q: WiFi not compatible?
Only support 2.4GHz WiFi, it is not compatible with 5GHz WiFi! If your WiFi is dual-band, please separate it independently.
Note: For a faster connection, plug into the socket with the included adapter, and then hang it on a wall.

Q: Is a 5g router supported?
If you use a 5g router, 5G and 2.4G use the same connection hotspot (that is, SSID is the same), you can connect directly. If 5G and 2.4G are not the same connection hotspot (that is, SSID is different, generally SSID of 2.4G is xxxxx-2.4G, SSID of 5G is xxxxx-5G), please connect the WiFi of mobile phone to hotspot of xxxxx-2.4G of router before configuring the camera.

Q: Screen flip? Motion tracking reverse movement?
When you install it upside down, you need to flip the screen ("live screen" → "direction" → Find the button below "preset").
Please note: Due to a version issue, some machines will move the motion tracking in reverse after screen flip, please take a screenshot of your device information and send it to the seller via Amazon to fix this bug.

Q: Why can't my phone receive alert notifications?

- Please make sure you have turned on the motion detection smart alarm switch and set the appropriate alarm sensitivity.
- Please make sure your phone system permissions allow our App's to perform message pushes.
- Please confirm to open the message push settings in the App, open the App, click "Device" → "Settings" → "Smart Alarm" → "Open" → "Event Push".

Q: Why do the cameras pop up frequently at night to detect alarms?
Please turn off the "Auto Track" function and turn on the "Human Detection" function.

Q: Can I use all the functions of the camera for free?
Except for the cloud storage function, all other functions are free and no charge is required.

Q: If forget the password, how to find it?

- Press reset button on the camera for over 10 seconds, and start up of voice prompt.
- Go to connect the camera on APP again.

Q: About Cloud service

- There's a charge for this function.
- If you don't need it, don't open this function.

Q: About Recording/ SD Card

- Currently, the camera supports FAT32 format TF Card, max supports 128G. When the TF Card is full, it will delete earlier videos automatically and loop the recording.
- NVR can also be used for video recording management of multiple cameras.

8. Special Statement

- The product is based on the actual product, the manual is for reference only.
- The mobile APP and device firmware version support updates, users can upgrade through the APP.
- Please do not install this device in a moist, dusty, high temperature, flammable/explosive places and places easily accessible to children.

If you have any questions or problems
Please contact us by SC@yoomail.com
We will offer prompt and authoritative reply within 24 hours and try our best to resolve your problem ASAP.

材质:120g双胶纸
SIZE:100X150MM