

X15 True 4K Ultra HD Action Camera

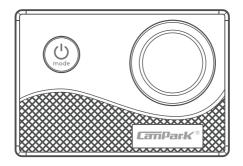




Accessories Introduction

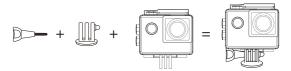



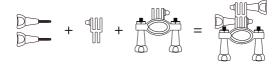

Precaution


- Thank you for choosing Campark X15 camera. Please carefully read the manual before using, and keep it at a safe place for future reference.
- The compilation of the user manual refers to the latest information. The manual quotes captured screen displays and graphics, with the aim to introduce the digital camera through detailed and direct methods. Due to system update and product batch, those captured screen displays and graphics indicated in the manual may differ from the actual camera you received.

Camera Maintenance

- When you are not using the camera for some time, please keep it in a dry place and avoid direct sun light.
- Use protective cases to avoid the scratches on lens and screen.
- Please clean the lens with soft clothes or tissue, DO NOT use organic solvent to clean the lens.
- DO NOT touch the lens with your fingers or other hard subjects.

- Please put the camera in the waterproof case when using in moist or dusty place, in case of any leakage.
- Avoid dropping or bumping the camera.
- DO NOT use the camera in high temperature environment for a long time.
- The camera will get warmer while working, that is normal.
- Please do not put heavy objects onto the screen. It may scratch or crush the screen.

Button Function and Interfaces:

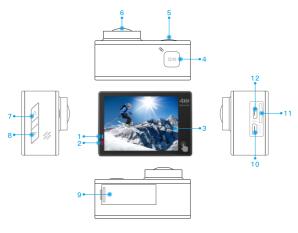

1. Status Indicator	5.Power / Mode	9. Battery Cover
2. Charging Indicator	6. Lens	10. HDMI Output
3. LCD Touch Screen	7. UP	11. Micro SD Card Slot
4. OK / Shutter	8.Down/WiFi Switch	12. Micro USB

Keys/Indicators	Function
Power / Mode	a: Press & Hold to turn ON / OFF the camera. b: Short press to enter mode choosing c: Under menu mode, short press to return to video more. d: In Playback, short press to return to Video Recording/Photo mode.
OK / Shutter	a:Short press to Start / Stop recording; b:Short press to take a photo; c:In Playback Mode Start/Stop playing video;
UP	a:In standby, short press to enter playback. b.In Playback, short press to select media files. c.In setup menu, short press to select options and adjust values.
Down	a: In standby, short press to enter setup menu. b.In standby, long press to turn on WiFi. c.In Playback, short press to select media files. d.In setup menu, short press to select options and adjust values.

How to start:

A.Charge the detachable Li-ion battery

- 1.Use a 5V/2A standard USB adapter to charge the camera via USB cable, or connect the camera to your computer to charge the camera.
- 2.Normally it will take about 2~3 hours to fully charge the camera

B.How to use memory card.

- 1.The camera uses Micro SD card as storage, capacity up to 64GB supported, and to ensure normal function, please use high speed memory card, Class 10 or above cards are recommended.
- 2.Before using the camera please insert the memory card first, and format the memory card in setting menu before using.
- 3.This camera does not support Hot swap, turn off the camera before inserting or taking out the memory card.
- 4.Insert the memory card as indicated by the icon into the slot until the card totally inside.
- 5.To remove the memory card, gently press the edge of the memory card until it pops out.

C.Power ON / OFF

- Power on: Keep pressing the Power key for 3s till the screen is on.
- 2. Power off: keep pressing the camera for 3s to power off
- 3.Auto power off: The camera will turn off after the camera is idle for a certain time (Default time is 3mins)
- 4.Low power: When the camera is in low power, battery symbol shows blank. Please charge the camera in time. Or The camera will turn off automatically.

Button Function and Interfaces:

Video Mode:



Nideo Mode Icon
 Recording Time
 Remaining
 Recording Time
 4.Audio Status
 5.Power Status
 6.Image
 Stabilizer Icon
 7.Playback
 8.Working Mode

9.Setup

Playback Mode:




1.Video Resolution 2.Playing Time 3.Video Length 4.Power Status 5.Play 6.Return 7.Video Count 8.Delete

Setup Menu:



1.Video Mode Setup 2.General Setup 3.Exit

Work Mode:

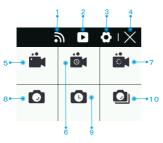

- 1.WiFi
- 2.Playback
- 3.Setup
- 4.Fxit
- 5.Normal Video
- 6.Time Lapse Video
- 7.Slow Motion
- 8.Normal Photo
- 9.Time Lapse Photo
- 10.Burst Photo

Working Mode

The X15 camera mainly works in 3 modes : Video Recording Mode / Photo Mode / Playback Mode.

Video Recording Mode:

- The camera will automatically enter video recording mode when powered on.
- In Video Recording Mode, you can short press the OK/ Shutter button to start video recording, and press the OK/ Shutter button again to stop video recording.
- In Video Recording Mode, you can touch the Playback Icon and the Setup Icon to enter Playback and Setup. Slide horizontally to switch to Photo Mode.

Photo Mode:

- In Video Recording Mode, Slide horizontally to switch to Photo Mode.
- In Photo Mode, you can short press the OK/Shutter button to take a photo, and touch the Playback Icon and the Setup Icon to enter Playback and Setup. Slide horizontally to switch to Video Recording mode.

Playback Mode:

- In Video Recording Mode and Photo Mode, press the playback icon to enter Playback Mode.
- In Playback, you can view and manage all the recorded video and photos.

Setup Mode:

- In Video Recording Mode and Photo Mode, press the Setup icon to enter Setup Mode.
- There are video mode setup, photo mode setup menu and system setup menu, you can configure the parameters for the specific mode.

Setup Menu Options

Mode	Menu	Options	Application
	Resolution	4K 25fps / 2.7K 30fps / 1080P 60fps / 1080P 30fps/ 720P 120fps/ 720P 60fps/	Adjust video resolution, with higher resolution, the video will be clearer.
i	Image Stabilization	ON / OFF	Turn ON Image Stabilizer to enhance video stability.
Video	Loop Video	ON / OFF	Turn ON/OFF loop recording
Video	Time Lapse	1 sec / 3 sec/ 5 sec/ 10 sec/ 30 sec/ 1 min	Adjust time lapse video frame gap.
	Time Stamp	ON / OFF	Turn ON / OFF time stamp in video
	Voice Rec	ON / OFF	Turn ON / OFF audio recording.
	Resolution	16MP / 12MP / 8MP / 5MP / 4MP	Adjust photo resolution, with higher resolution, the photo will be clearer.
Photo	Burst Photo	3 Photos	Turn on to take 3 photos in one shot
	Time Lapse	2 sec / 3 sec / 5 sec / 10 sec / 20 sec / 30 sec / 60 sec /	Adjust photo time lapse gap.

	Continuous Lapse	ON / OFF	Turn ON / OFF Continuous photo Lapse	
Photo	Time Stamp	ON / OFF	Turn ON / OFF time stamp in photo.	
	Exposure	-2.0/-1.7/-1.3/-1.0/ -0.7/-0.3/0/+0.3/ +0.7/+1.0/+1.3/ +1.7/+2.0	Adjust exposure according to using conditions to adjust picture brightness.	
	Power Frequency	Auto / 50 Hz / 60Hz	Choose the right power source frequency accordingly.	
Langu	Language	English / Chinese / Japanese / Korean / Russian / German / French /Italian / Spanish	Adjust camera menu language.	
General	Date & Time	Setup local time		
Setup	Sound Indicator		Setup camera operation sound	
	Upside Down	Yes/NO	Turn ON to rotate the image by 180°.	
	Screen Saver	OFF / 1 minutes / 3 minutes / 5 minutes	Set time for the screen saver to activate.	

General Setup	Power Save	OFF / 1 minutes / 3 minutes / 5 minutes	Set the time the camera will automatically power off after idle.	
	Format	Format the memory card		
	Reset	Reset the camera to factory default status		
	Version	Choose to check device information.		

Featured Function

Loop Video

Loop Video is not available under 4K or 2.7K resolution.

With loop video on, the camera will keep recording video in 10 minutes footage, and loop back to the earliest footage when memory card fills up.

Time Lapse

Time Lapse is not available under 4K or 2.7K resolution.

Under Time Lapse Video Mode, you can directly record time lapse video with adjustable frame gap.

Screen Saver

With screen saver on, after the camera is idle for preset time, the camera will automatically turn off screen display to save power.

WiFi Connection and APP

- 1.The X15 camera has built—in WiFi function, you can connect it to your smart phone and remotely control the camera and share the recorded moments.
- Before using WIFI function, please install "iSmart DV" APP on your smart phone.
- 3.You can search "iSmart DV" in Google Play Store / Apple APP Store, or you can scan the QR code below to get the APP.



Android App Download



IOS App Download

How to Connect:

1.Power on the camera, and the camera will enter video recording mode automatically, Press and hold the "Down" button to turn on WiFi on the camera, and you can see the WIFi information on screen

NOTE:

The hotspot of the camera is named "Campark X15", and the default password is "1234567890".











- 2.Turn on the WiFi on your smartphone, find the camera hotspot and connect to it.
- 3.After successful connection, open the "iSmart DV" APP on your smart phone, and choose to connect the camera, then you will enter live view and control panel.
- 4.With the APP, you can use your smartphone to remotely control the camera, download the recorded files, and change the settings.

Specification

Model:	Campark X15
Display	2.0 inch LCD Screen Display
Lens	170° High Resolution Wide Angle Lens
Video Resolution	4K 25fps / 2.7K 30fps / 1080P 60fps / 1080P 30fps/ 720P 120fps/ 720P 60fps
Video Format	MOV
Video Compression	H.264
Loop Recording	Supported
Time Lapse	Supported
Photo Resolution	16MP / 12MP / 8MP / 5MP / 4MP
Photo Format	JPG
Burst Photo	Supported
Data Interface	Micro USB / HDMI
Storage	Micro SD Card (Up to 64GB supported)
Micphone	Built-in
Speaker	Built-in
External Power	DC 5V /2A
Battery Capacity	3.7V / 1050mAh
Charging Time	2~4 Hours
Language	English / Chinese / Japanese / Korean / Russian / German / French / Italian / Spanish

Compatible OS	Windows XP/7/8/10; Mac OS 10.5 or above
Working Temperature	-10°C ~ 55°C
Storage Temperature	−20°C ~ 70°C
Relative humidity	5% ~ 95% (No frost)

Common Problems and Solutions:

Q: The camera can not turn on.

A:

First, check the battery status, charge the battery before using the camera.

Try to connect a DC 5V/2A external power supply, the camera is designed to be able to work on external power supply.

Q:The camera crashes during using.

A:

If this happens occasionally, it's largely due to the working environment or practices that the camera is being used in. If this happens very frequently, please check the memory card speed, the X15 camera records UHD video, it requires high speed memory card, make sure you are using C10 or above high speed memory card.

Q: The camera is warming during normal use

A:

The X15 camera process very high volume data during recording, the main chipset will generate certain heat, and the camera is relatively sealed, it will have certain amount of heat during use.

Temperature of $10\sim20^\circ\!C$ above room temperature is to be expected.

Q: Video playback is not smooth, video is blurred / Red and blue stripes.

A:

Make sure it's using a high quality Class 10 or above memory card. The recommended capacity is over 8 GB. Format the memory card on the camera before using.

If You Have Any Questions or Problems. Pease contact us by

USA&canda support@campark.net
Europe eu.support@campark.net
UK uk.support@campark.net
Australia au.support@campark.net

We will offer prompt and authoritative reply within 24 hours and try our best to resolve your problem ASAP.

More Safe Guarantee with CAMPARK!

If you are not satisfied with our product. Please tell us about your thought. That will be much appreciated.