



OPERATOR'S MANUAL

MANUEL D'UTILISATION

MANUAL DEL OPERADOR

20 VOLT CHEMICAL SPRAYER


PULVERISATEUR DE PRODUITS

CHIMIQUES DE 20 V

ROCIADOR DE SUSTANCIAS

QUÍMICAS DE 20 V

UGS01

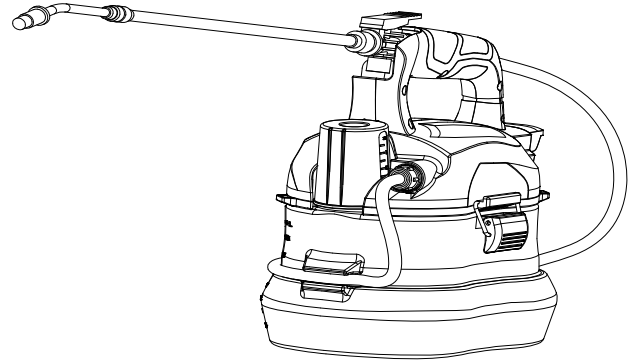

ACCEPTS ALL ONE+ BATTERY PACKS
COMPATIBLE AVEC TOUS LE PILES ONE+
ACEPTA TODOS LOS PAQUETES DE BATERÍAS ONE+

Your chemical sprayer has been engineered and manufactured to our high standard for dependability, ease of operation, and operator safety. When properly cared for, it will give you years of rugged, trouble-free performance.

▲ WARNING: To reduce the risk of injury, the user must read and understand the operator's manual before using this product.

SAVE THIS MANUAL FOR FUTURE REFERENCE

Le pulverisateur de produits -chimiques a été conçue et fabriquée conformément à nos strictes normes de fiabilité, simplicité d'emploi et sécurité d'utilisation. Correctement entretenue, elle vous donnera des années de fonctionnement robuste et sans problème.

Su rociador de sustancias químicas ha sido diseñada y fabricada de conformidad con las estrictas normas para brindar fiabilidad, facilidad de uso y seguridad para el operador. Con el debido cuidado, le brindará muchos años de sólido y eficiente funcionamiento.


▲ AVERTISSEMENT :
Pour réduire les risques de blessures, l'utilisateur doit lire et veiller à bien comprendre le manuel d'utilisation avant d'employer ce produit.

▲ ADVERTENCIA:
Para reducir el riesgo de lesiones, el usuario debe leer y comprender el manual del operador antes de usar este producto.

**CONSERVER CE MANUEL POUR
FUTURE RÉFÉRENCE**

**GUARDE ESTE MANUAL PARA
FUTURAS CONSULTAS**

Fig.1

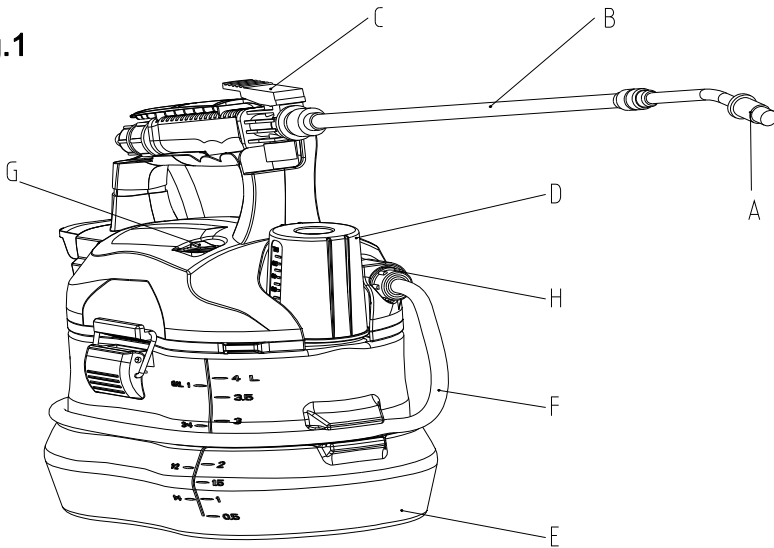

A - Adjustable nozzle (buse réglable, boquilla ajustable)

D - Measuring cap (bouchon mesureur, medidora tapa)

B - Spray wand (lance de pulvérisation, tubo rociador)


E - Tank (réservoir, tanque) F - Hose (tuyaux, manguera)

C - Trigger with lock-on (gâchette avec verrouillage, gatillo con seguro)

G - On/off button (bouton marche/arrêt, botón de encendido/apagado)

H - Cap (bouchon, tapa)

Fig.2

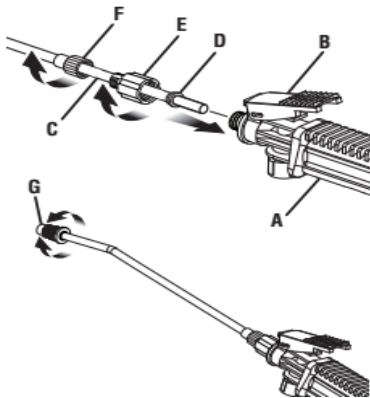

A - Handle (poignée, mango)

B - Trigger with lock-on (gâchette avec verrouillage, gatillo con seguro)

C - Spray wand (lance de pulvérisation, tubo rociador)


D - O-Ring (joint torique en O, anillo en "O")

E - Cap (bouchon, tapa)

F - Nut (écrou, tuerca)

G - Adjustable nozzle (buse réglable, boquilla ajustable)

Fig.3

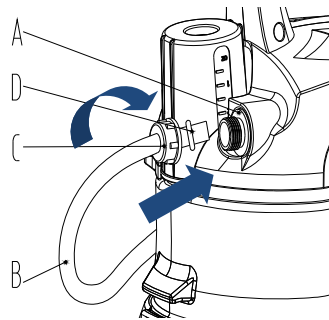


A - Tank (réservoir, tanque)

B - Hose (tuyaux, manguera)

C - Nut (écrou, tuerca)

D - Hose end (bout du tuyau, extremo de la manguera)

Fig.4

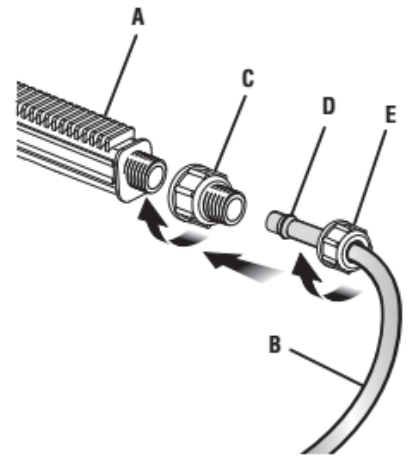

A - Handle (poignée, mango)


B - Hose (tuyaux, manguera)

C - Cap (capuchon, tapa)

D - Hose end (bout du tuyau, extremo de la manguera)


E - Nut (écrou, tuerca)

Fig.5

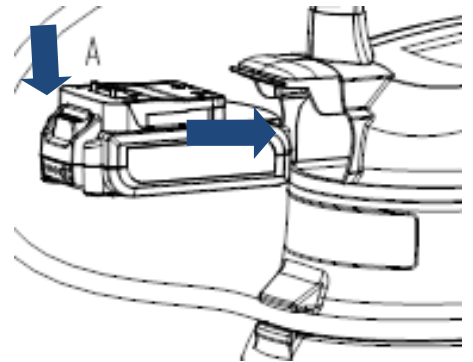


A - Depress latches to release battery pack (appuyer sur les loquets pour libérer le blocs-pile, para soltar, el paquete de batería oprima los pestillos)

Fig.6

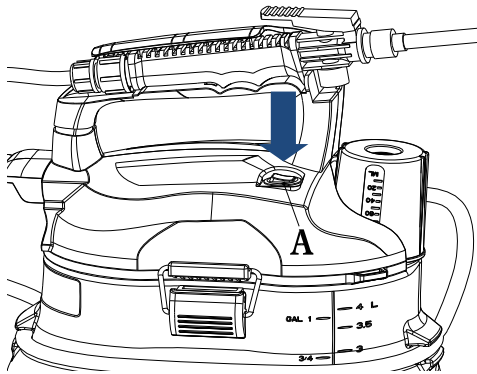

A - On/off button (bouton marche/arrêt, botón de encendido/apagado)

Fig.7

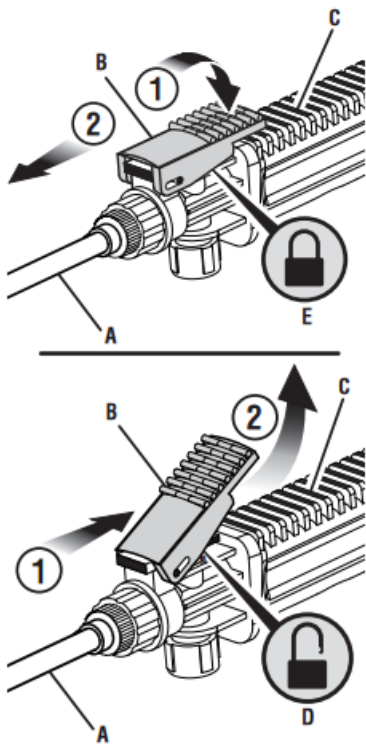

A - Spray wand (lance de pulvérisation, tubo rociador)

B - Trigger with lock-on (gâchette avec verrouillage, gatillo con seguro)

C - Handle (poignée, mango)


D - To release (pour relâcher, para soltar)

E - To lock (pour verrouiller, para asegurar)

Fig.11

Fig.8

Fig.10

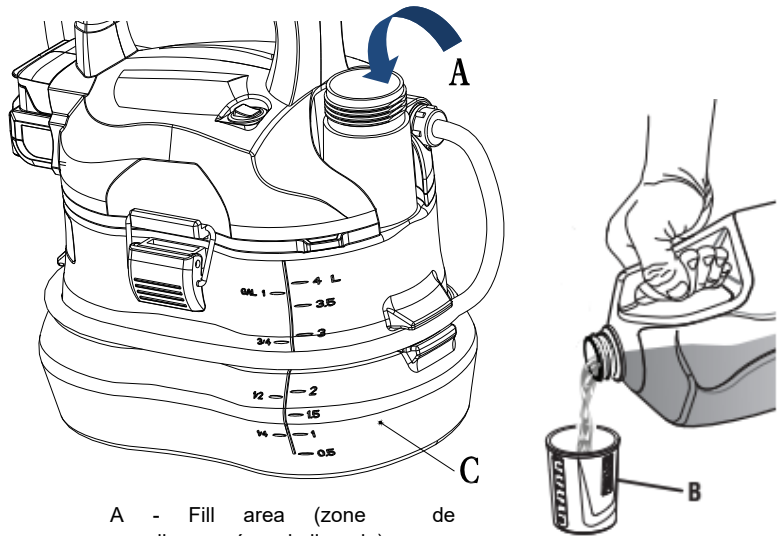


A - Fill area (zone de remplissage, área de llenado)

B - Measuring Cap (bouchon mesureur, medidora tapa)

C - Tank (réservoir, tanque)


Fig.9

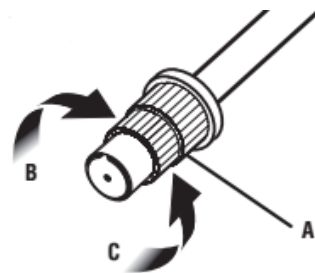


A - Adjustable nozzle (buse réglable, boquilla ajustable)

B - Tighten for fan spray (serrer pour jet en éventail, apriete para rociar en abanico)

C - Loosen for stream (dévisser pour jet, afloje para formar un chorro)

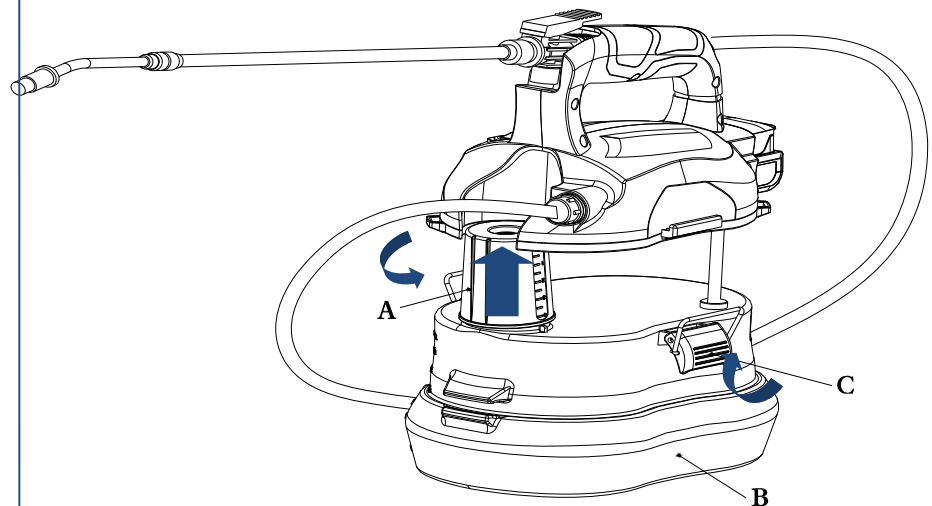

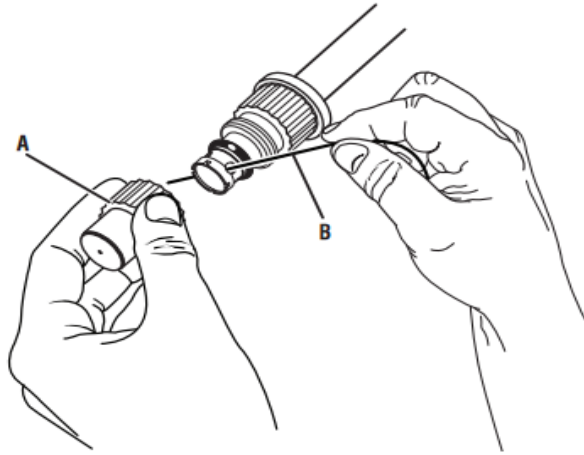

A - Adjustable nozzle (buse réglable, boquilla ajustable) B - Wire (fil, alambre)

TABLE OF CONTENTS

Introduction	2
Important Safety Instructions	3
Specific Safety Rules	4-5
Symbols	6
Features	7
Assembly	7-8
Operation	8-10
Maintenance	10-11
Warranty	12
Parts Ordering and Service	13

INTRODUCTION

This product has many features for making its use more pleasant and enjoyable. Safety, performance, and dependability have been given top priority in the design of this product making it easy to maintain and operate.

IMPORTANT SAFETY INSTRUCTIONS



WARNING:

READ THESE INSTRUCTIONS. Failure to follow all instructions listed below, may result in electric shock, fire and/or serious personal injury.

READ ALL INSTRUCTIONS BEFORE USING APPLIANCE

Know your chemical sprayer. Read and understand the operator's manual and observe the warnings and instruction labels affixed to the tool.

Do not operate the product in explosive in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.

Avoid bystanders or children in the area while operating this product. Exposure to some chemicals can be hazardous.

This product is suitable for indoor and outdoor use.

Stay alert and use common sense while operating this product. Do not use when you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating this product may result in serious bodily injury.

Dress properly. Do not wear loose clothing or jewelry. Contain long hair. Keep your hair, clothing, and gloves away from moving parts. Loose clothes, jewelry, or long hair can be caught in moving parts.

Use safety equipment. Always wear eye protection with side shields or goggles and a dust mask. Protect eyes, skin and lungs against drifting spray and during mixing, filling, and cleaning.

Do not overreach. Keep proper footing and balance at all times. Do not use on a ladder or unstable support. Stable footing on a solid surface enables better control of the product in unexpected situations.

Do not use the product if the switch does not turn on and off. Any product that cannot be controlled with the switch is dangerous and must be repaired.

Do not use the product if the switch does not turn on and off. Any product that cannot be controlled with the switch is dangerous and must be repaired.

Store the product out of reach of children and do not allow persons unfamiliar with the product or these instructions to operate the product.

Keep the sprayer and its handle dry, clean and free from oil and grease. Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum-based products, or any strong solvents to clean your tool. Following this rule will reduce the risk of loss of control and deterioration of the enclosure plastic.

Use this product in accordance with these instructions and in the manner intended, taking into account the working conditions and the work to be performed. Use of the product for operations different from those intended could result in a hazardous situation.

Avoid accidental starting. Ensure the switch is in the off position before inserting battery pack. Inserting the battery pack into products that have the switch on invites accidents.

Use the product only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.

Use battery only with charger listed. For use with 18V nickel-cadmium and 18V lithium-ion battery packs, see tool/appliance/battery pack/charger correlation supplement 987000-432.

When battery pack is not in use, keep it away from other metal objects like paper clips, coins, keys, nails, screws, or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

Under abusive conditions, liquid may be ejected from the battery, avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

Have this product serviced by a qualified repairman using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

When servicing the product, use only identical replacement parts. Follow instructions in the Maintenance section of this manual. Use of unauthorized parts or failure to follow Maintenance instructions may create a risk of shock or injury.

SPECIFIC SAFETY RULES

IMPORTANT SAFETY INSTRUCTIONS

DANGER:

Risk of fire or explosion. Do not spray flammable liquids such as gasoline. Look for this symbol reference on the container.

WARNING:

Some spray created from products used with the sprayer contains chemicals known to the State of California to cause cancer, birth defect or other reproductive harm. Some examples of these chemicals are:

- compounds in fertilizers;
- compounds in insecticides, herbicides, and pesticides;
- arsenic and chromium from chemically treated lumber.

Follow directions on containers of all such products. To reduce your exposure to these chemicals, wear approved safety equipment such as face masks that are specially designed to filter out sprays, gloves, and other appropriate protective equipment.

Before using any pesticide or other spray materials in this sprayer, read the label on its original container thoroughly and follow its directions. Some spray materials are dangerous and should not be used in this sprayer, as they can damage the sprayer and cause serious bodily injury or property damage.

ELECTRIC SHOCK HAZARD

Never spray toward electrical outlets.

Do not use commercial grade chemicals or chemicals for commercial or industrial purposes. Use only consumer grade water-based lawn and garden chemicals.

Do not pour hot or boiling liquids into the tank.

These can weaken or damage the hose or tank.

Spray area must be well ventilated.

Avoid spraying on windy days. Spray can be accidentally blown onto plants or objects that should not be sprayed.

Store the sprayer in a secure, well-ventilated indoor space with the fluid tank empty.

Do not use caustic (alkali) self-heating or corrosive (acid) liquids in this sprayer. These can corrode metal parts or weaken the tank and hose.

Know the contents of the chemical being sprayed. Read all Material Safety Data Sheets (MSDS) and container labels provided with the chemical. Follow the chemical manufacturer's safety instructions.

Do not charge battery tool in a damp or wet location. Following this rule will reduce the risk of electric shock.

Do not leave residue or spray material in the tank after using the sprayer. Clean after each use.

Do not smoke while using the sprayer, or spray where spark or flame is present.

Risk of injection. Do not discharge directly against skin.

To reduce the risk of electric shock, do not put the sprayer into water or other liquid. Do not place or store the sprayer where it can fall or be pulled into a tub or sink.

MAINTENANCE OF PRODUCT

Thoroughly inspect both the inside and outside of the sprayer and examine the components before each use. Check for cracked and deteriorated hoses, leaks, clogged nozzles, and missing or damaged parts. If damaged, have the product repaired before use. Many accidents are caused by poorly maintained products.

Disconnect the battery from the unit before draining, cleaning, or storing the sprayer. Such preventive safety measures reduce the risk of accidental startup.

Always wear eye protection with side shields or goggles marked to comply with ANSI Z87.1. Failure to do so could result in fluids entering your eyes resulting in possible serious injury.

Protect your lungs. Wear a face or dust mask when using the sprayer. Following this rule will reduce the risk of serious personal injury.

Battery tools do not have to be plugged into an electrical outlet; therefore, they are always in operating condition. Be aware of possible hazards when not using your battery tool or when changing accessories. Remove battery pack when tool is not in use. Following this rule will reduce the risk of electric shock, fire, or serious personal injury.

Do not place battery tools or their batteries near fire or heat. This will reduce the risk of explosion and possibly injury.

Do not crush, drop or damage battery pack. Do not use a battery pack or charger that has been dropped or received a sharp blow. A damaged battery is subject to explosion. Properly dispose of a dropped or damaged battery immediately.

Batteries can explode in the presence of a source of ignition, such as a pilot light. To reduce the risk of serious personal injury, never use any cordless product in the presence of open flame. An exploded battery can propel debris and chemicals. If exposed, flush with water immediately.

For best results, your battery tool should be charged in a location where the temperature is more than 50°F but less than 100°F. To reduce the risk of serious personal injury, do not store outside or in vehicles.

SPECIFIC SAFETY RULES

Under extreme usage or temperature conditions, battery leakage may occur. If liquid comes in contact with your skin, wash immediately with soap and water. If liquid gets into your eyes, flush them with clean water for at least 10 minutes, then seek immediate medical attention. Following this rule will reduce the risk of serious personal injury

Do not use battery-operated appliance in rain.

Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause burns

Do not dispose of the battery(ies) in a fire. The cell may explode. Check with local codes for possible special disposal instructions.

Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.

Avoid Dangerous Environment - Don't use appliances in damp or wet locations.

Use Right Appliance - Do not use appliance for any job except that for which it is intended.

Don't Force Appliance - It will do the job better and with less likelihood of a risk of injury at the rate for which it was designed.

Store Idle Appliances Indoors - When not in use, appliances should be stored indoors in dry, and high or locked-up place - out of reach of children.




Maintain Appliance With Care - Keep clean for best performance and to reduce the risk of injury. Follow instructions for changing accessories. Inspect appliance cord, and if damaged, have it repaired by an authorized service facility. Keep handles dry, clean, and free from oil and grease.

Check Damaged Parts - Before further use of the appliance, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other condition that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless indicated elsewhere in this manual.







SAVE THESE INSTRUCTIONS

SYMBOLS

The following signal words and meanings are intended to explain the levels of risk associated with this product.

SYMBOL	SIGNAL	MEANING
	DANGER:	Indicates a hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING:	Indicates a hazardous situation, which, if not avoided, could result in death or serious injury.
	CAUTION:	Indicates a hazardous situation, that, if not avoided, may result in minor or moderate injury.
	NOTICE:	(Without Safety Alert Symbol) Indicates information considered important, but not related to a potential injury (e.g. messages relating to property damage).

Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product better and safer.

SYMBOL	NAME	DESIGNATION/EXPLANATION
	Safety Alert	Indicates a potential personal injury hazard.
	Read Operator's Manual	To reduce the risk of injury, user must read and understand operator's manual before using this product.
	Eye Protection	Always use eye protection with side shields or goggles marked to comply with ANSI Z87.1.
	Wet Conditions Alert	Do not expose to rain or use in damp locations.
	Hot Surface	To reduce the risk of injury or damage, avoid contact with any hot surface.
	Recycle Symbols	This product uses nickel-cadmium (Ni-Cd) and lithium-ion (Li-ion) batteries. Local, state or federal laws may prohibit disposal of batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.
V	Volts	Voltage
— — —	Direct Current	Type or a characteristic of current
PSI	Pressure	Pressure is measured in pounds per square inch

FEATURES

PRODUCT SPECIFICATIONS

Tank Capacity.....1 gal.

Motor..... 20 Volt DC

KNOW YOUR CHEMICAL SPRAYER

See Figure 1.

The safe use of this product requires an understanding of the information on the product and in this operator's manual as well as a knowledge of the project you are attempting. Before use of this product, familiarize yourself with all operating features and safety rules.

ADJUSTABLE SPRAY NOZZLE

The nozzle adjusts the flow of liquid from a stream to a fan spray

MEASURING CAP

The measuring cap can be used to measure up to 4 oz. of liquid.

Spray Pressure45 psi

PUMP-FREE SPRAYING

The battery-powered sprayer keeps fluid continuously cycling through the tank to allow pump-free spraying.

TANK

The tank is marked for measuring up to one gallon of liquid. There is room for adding an additional 4 oz. that may be measured and poured from the cap.

TRIGGER WITH LOCK-ON

The trigger can be locked-on for continuous spraying.

ASSEMBLY

UNPACKING

Carefully remove the product and any accessories from the box. Make sure that all items listed in the packing list are included.

WARNING:

Do not use this product if any parts on the Packing List are already assembled to your product when you unpack it. Parts on this list are not assembled to the product by the manufacturer and require customer installation. Use of a product that may have been improperly assembled could result in serious personal injury.

Inspect the product carefully to make sure no breakage or damage occurred during shipping.

Do not discard the packing material until you have carefully inspected and satisfactorily operated the product.

If any parts are damaged or missing, please call 574-8772-7213 for assistance.

PACKING LIST

Chemical Sprayer

Hose

Cap

Spray Wand Assembly (Incl. o-ring, cap, and nut)

Handle

Operator's Manua

WARNING:

If any parts are damaged or missing do not operate this product until the parts are replaced. Use of this product with damaged or missing parts could result in serious personal injury.

WARNING:

Do not attempt to modify this product or create accessories not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.

ASSEMBLY

WARNING:

To prevent accidental starting that could cause serious personal injury, always remove the battery pack from the product when assembling parts.

CONNECTING THE SPRAY WAND TO THE HANDLE See Figure 2.

Insert the spray wand into the the handle as shown. Slide the o-ring down until it touches the handle. Thread the cap onto the handle and tighten securely.

Rotate the nozzle until it is aligned with the handle (pointing down) and ready for use.

Slide the nut onto the cap and tighten securely.

Pull on the spray wand to be certain it is properly secured.

Place the assembled handle into the handle storage area.

ATTACHING THE HOSE

See Figures 3 - 4.

To attach the hose to the tank:

Slide the nut on the hose away from the hose end. Insert the hose end into the opening on the tank as shown. Make sure the connection is secure. Slide the nut over the opening and hose end. Handtighten. Do not overtighten.

To attach the hose to the handle:

The hose comes preassembled to the handle. If it becomes loose, follow the instructions below. Thread the cap onto the handle and tighten securely.

Slide the nut on the hose away from the hose end.

Insert the hose end into the opening on the cap. Make sure the connection is secure.

Slide the nut over the hose and cap. Hand tighten. Do not overtighten.

OPERATION

WARNING:

Do not allow familiarity with the product to make you careless. Remember that a careless fraction of a second is sufficient to inflict serious injury.

WARNING:

Always wear eye protection with side shields or goggles marked to comply with ANSI Z87.1. Failure to do so could result in fluids entering your eyes resulting in possible serious injury.

WARNING:

Do not use any attachments or accessories not recommended by the manufacturer of this product. The use of attachments or accessories not recommended can result in serious personal injury.

WARNING:

Use safety equipment. Protect your eyes, skin, and lungs while mixing, filling, spraying, and cleaning. Failure to do so may result in serious personal injury and damage to property.

NOTICE:

Before each use, inspect the entire product for damaged, missing, or loose parts such as screws, nuts, bolts, caps, etc. Tighten securely all fasteners and caps and do not operate this product until all missing or damaged parts are replaced. Please contact customer service or a qualified service center for assistance.

APPLICATIONS

You may use this product for the purpose listed below:

For use with most consumer grade home and garden chemicals, such as insecticides, fungicides, weed killers, and fertilizers.

OPERATION

INSTALLING/REMOVING

BATTERY PACK *See Figure 5.*

WARNING:

Always remove battery pack from your tool when you are assembling parts, making adjustments, cleaning, or when not in use. Removing battery pack will prevent accidental starting that could cause serious personal injury.

To install:

Align the raised rib on the battery pack with groove in the battery port and place the battery pack in the tool.

Make sure the latches on each side of the battery pack snap in place and that the battery pack is secured in the tool before beginning operation.

To remove:

Depress the latches on both sides of the battery pack to release the battery pack and remove it from the tool.

WARNING:

Risk of fire or explosion. Spray area must be well-ventilated and away from sparks or flames.

TURNING THE SPRAYER

ON/OFF *See Figures 6 - 7.*

To turn the sprayer ON, depress the ON/OFF button.

To start the flow of liquid at the spray wand, depress the trigger.

To stop the flow of liquid at the spray wand, release the trigger.

To turn the sprayer OFF, depress the ON/OFF button again.

LOCK-ON

See Figure 7.

The lock-on feature is convenient when spraying for an extended period of time or when covering a large area.

To lock-on, depress the trigger and slide it forward.

To release the lock-on, depress the trigger and slide it backward.

NOTE: Make sure the trigger is not locked on before inserting the battery pack into the sprayer.

FILLING THE

TANK *See Figure*

WARNING:

Always follow the chemical manufacturer's instructions printed on their product labeling for use, cleaning, and storage. Clean thoroughly after each use, following the instructions in the *Maintenance* section of this manual. Chemicals should be stored out of the reach of children. Failure to do so may result in serious personal injury.

Liquids to be sprayed must be as thin as water.

Thicker liquids will not spray properly.

Do not overfill the tank.

Remove the battery pack.

Unscrew the measuring cap and remove it from the tank.

Fill the tank with the desired amount of water (up to 1 gallon).

Measure the recommended amount of liquid. The cap may be used for measuring up to 4 oz.

Carefully pour the liquid into the tank. Rinse the measuring cap with clean water. Screw the cap back onto the sprayer, making sure it is tightened securely.

Reinstall the battery pack.

Spray solutions may be premixed and poured into the sprayer, using a funnel if needed.

NOTE: If using a measuring container other than the cap, or if using a funnel to fill the tank, be sure to thoroughly clean and rinse these items after use. If premixing the spray solution, rinse the container used for mixing.

NOTICE:

It is important to thoroughly clean the unit after each use. Allowing liquid to remain in an idle tool for an extended period may cause its moving pieces and connectors to seize up.

ADJUSTING THE SPRAY NOZZLE

See Figure 9.

The spray nozzle can be adjusted from a stream to a fan spray.

Remove the battery pack from the tool.

Loosen the nozzle for a stream.

Tighten the nozzle for a fan spray.

OPERATION

SPRAYING HOME-AND-GARDEN

CHEMICALS See Figures 10 - 11.

Install the battery pack into the tool.

Depress the ON/OFF button to start the motor.

The sprayer may be operated with the handle resting in the handle storage area as shown in figure 10, or you may remove and hold the handle as shown in figure 11. Aim the sprayer nozzle directly at the plants or objects you wish to spray.

NOTE: Make sure to stand far enough from the object being sprayed to prevent the spray from splashing back onto you.

Depress the trigger to start the spray. Release the trigger to stop the spray. Always empty, clean, and drain the tank after every use as directed in the Maintenance section.

Thoroughly clean the chemical sprayer before storing or before switching to a different chemical. See **Cleaning the Unit** later in this manual.

When you are finished with the sprayer, thoroughly wash your hands and any area where skin has been exposed to the spray.

OPERATING TIPS

Never point the spray end of the wand at yourself or others.

Avoid spraying on windy days. Spray can be accidentally blown onto plants or objects that should not be sprayed.

Never spray in the direction of people or animals; always spray downwind.

Especially in warmer weather, spray in the early morning or late afternoon. Excessive heat can evaporate the spray before it settles. Never smoke, eat, or drink while operating the sprayer.

MAINTENANCE

WARNING:

To avoid serious personal injury, always remove the battery pack from the tool when cleaning or performing any maintenance.

WARNING:

Always wear eye protection with side shields or goggles marked to comply with ANSI Z87.1. Failure to do so could result in fluids entering your eyes resulting in possible serious injury.

WARNING:

When servicing, use only identical replacement parts. Use of any other parts may create a hazard or cause product damage.

NOTICE:

Periodically inspect the entire product for damaged, missing, or loose parts such as screws, nuts, bolts, caps, etc. Tighten securely all fasteners and caps and do not operate this product until all missing or damaged parts are replaced. Please contact customer service or a qualified service center for assistance.

GENERAL MAINTENANCE

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.

WARNING:

Do not at any time let brake fluids, gasoline, penetrating oils, etc., come in contact with plastic parts. Chemicals can damage, weaken, or destroy plastic which may result in serious personal injury.

MAINTENANCE

CLEANING THE

UNIT See Figure 12

WARNING:

Always store and dispose of chemicals properly. Disposal of contaminated rinse water should be performed according to local ordinances and bylaws.

DRAINING THE TANK

If there is any liquid left in the tank after spraying, the tank should be drained before cleaning.

Remove the battery pack.

Remove the motor housing from the tank by lifting up and releasing the latches on each end of the unit.

Drain the contents through the fill area. **NOTE:** Drain the contents back into the original container. Do not store chemicals in the tank.

CLEANING THE TANK

Fill the tank about one-third full with clean water. A small amount of mild household detergent may be added.

NOTE: Never use flammable chemicals or abrasive cleaning agents to clean the tank.

Wipe the outside of the tank with a clean, dry cloth.

Reattach the motor housing to the tank. Make sure the latches are closed.

Reinstall the battery pack. Spray until the tank has been emptied. Make sure to direct the spray toward an area that will not be damaged by the spray solution.

Refill and repeat the procedure with clean water. It may be necessary to rinse the tank more than once, then drain again as directed above.

Allow all pieces to completely dry before reinstalling parts and storing the unit.

CLEANING THE NOZZLE

See Figure 13.

If the nozzle becomes plugged, use the steps below to clear.

Remove the battery pack. nU screw and remove the nozzle from the spray wand.

Push a small wire through the cross holes to clear any debris. If necessary, rinse the cross holes and nozzle with clean water.

Wipe the nozzle and cross holes with a clean dry cloth and reinstall the nozzle.



WARNINGS!

This Product May Contain A Chemical Known To The State of California To Cause Cancer, Or Birth Defects Or Other Reproductive Harm.

WARRANTY

LIMITED WARRANTY STATEMENT

UKOKE TECH INC., warrants to the original retail purchaser that this UKOKE™ brand outdoor product is free from defect in material and workmanship and agrees to repair or replace, at UKOKE TECH INC.'s, discretion, any defective product free of charge within these time periods from the date of purchase.

Three years if the product is used for personal, family or household use;

90 days, if used for any other purpose, such as commercial.

This warranty extends to the original retail purchaser only and commences on the date of the original retail purchase. Any part of this product found in the reasonable judgment of UKOKE TECH INC. to be defective in material or workmanship will be repaired or replaced without charge for parts and labor by an authorized service center for UKOKE™ brand outdoor products.

The product, including any defective part, must be returned to an authorized UKOKE service center within the warranty period. The expense of delivering the product to the service center for warranty work and the expense of returning it back to the owner after repair or replacement will be paid by the owner. UKOKE TECH INC.'s, responsibility in respect to claims is limited to making the required repairs or replacements and no claim of breach of warranty shall be cause for cancellation or rescission of the contract of sale of any UKOKE™ brand outdoor product. Proof of purchase will be required by the dealer to substantiate any warranty claim. All warranty work must be performed by an authorized service dealer.

This warranty is limited to ninety (90) days from the date of original retail purchase for any UKOKE™ brand outdoor product that is used for rental or commercial purposes, or any other income-producing purpose. This warranty does not cover any product that has been subject to misuse, neglect, negligence, or accident, or that has been operated in any way contrary to the operating instructions as specified in this operator's manual. This warranty does not apply to any damage to the product that is the result of improper maintenance or to any product that has been altered or modified. The warranty does not extend to repairs made necessary by normal wear or by the use of parts or accessories which are either incompatible with the UKOKE™ brand outdoor product or adversely affect its operation, performance, or durability. In addition, this warranty does not cover:

- A. Tune-ups – Spark Plugs, Carburetor, Carburetor Adjustments, Ignition, Filters
- B. Wear items – Bump Knobs, Outer Spools, Cutting Lines, Inner Reels, Starter Pulleys, Starter Ropes, Drive Belts, Tines, Felt Washers, Hitch Pins, Mulching Blades, Blower Fans, Blower and Vacuum Tubes, Vacuum Bag and Straps, Guide Bars, Saw Chains

ALL IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE STATED WARRANTY PERIOD. ACCORDINGLY, ANY SUCH IMPLIED WARRANTIES INCLUDING MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR OTHERWISE,

ARE DISCLAIMED IN THEIR ENTIRETY AFTER THE EXPIRATION OF THE APPROPRIATE THREE-YEAR OR NINETY-DAY WARRANTY PERIOD. UKOKE TECH INC.'S, OBLIGATION UNDER THIS WARRANTY IS STRICTLY AND EXCLUSIVELY LIMITED TO THE REPAIR OR REPLACEMENT OF DEFECTIVE PARTS AND UKOKE TECH INC., DOES NOT ASSUME OR AUTHORIZE ANYONE TO ASSUME FOR THEM ANY OTHER OBLIGATION. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. UKOKE TECH INC., ASSUMES NO RESPONSIBILITY FOR INCIDENTAL, CONSEQUENTIAL, OR OTHER DAMAGES INCLUDING, BUT NOT LIMITED TO, EXPENSE OF RETURNING THE PRODUCT TO AN AUTHORIZED UKOKE SERVICE CENTER AND EXPENSE OF DELIVERING IT BACK TO THE OWNER, MECHANIC'S TRAVEL TIME, TELEPHONE OR TELEGRAM CHARGES, RENTAL OF A LIKE PRODUCT DURING THE TIME WARRANTY SERVICE IS BEING PERFORMED, TRAVEL, LOSS OR DAMAGE TO PERSONAL PROPERTY, LOSS OF REVENUE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, OR INCONVENIENCE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

This warranty applies to all UKOKE™ brand outdoor products manufactured by or for UKOKE TECH INC., and sold in the United States and Canada.

**OPERATOR'S MANUAL
MANUEL D'UTILISATION / MANUAL DE OPERADOR
20 VOLT CHEMICAL SPRAYER
20 V PULVERISATEUR DE PRODUITS CHIMIQUES
20 V ROCIADOR DE SUSTANCIAS QUÍMICAS**

• **PARTS AND SERVICE:**

HOW TO OBTAIN REPLACEMENT PARTS: A replacement parts list is available online at Ukoke.com/Amazon.com/Walmart.com/newegg.com. Replacement parts can be purchased online or by calling Ukoke Customer specialist (909)-734-6812 or by Email: Service@ukoke.com

Replacement parts can also be obtained at one of our Return centers.

HOW TO LOCATE A Return CENTER: Return centers can be located at 19575 E. Walnut Dr S, #C16/C17, CITY OF INDUSTRY, California 91748. Ukoke Customer specialist (909)-734-6812 or by Email: Service@ukoke.com

.....