


RS32ea

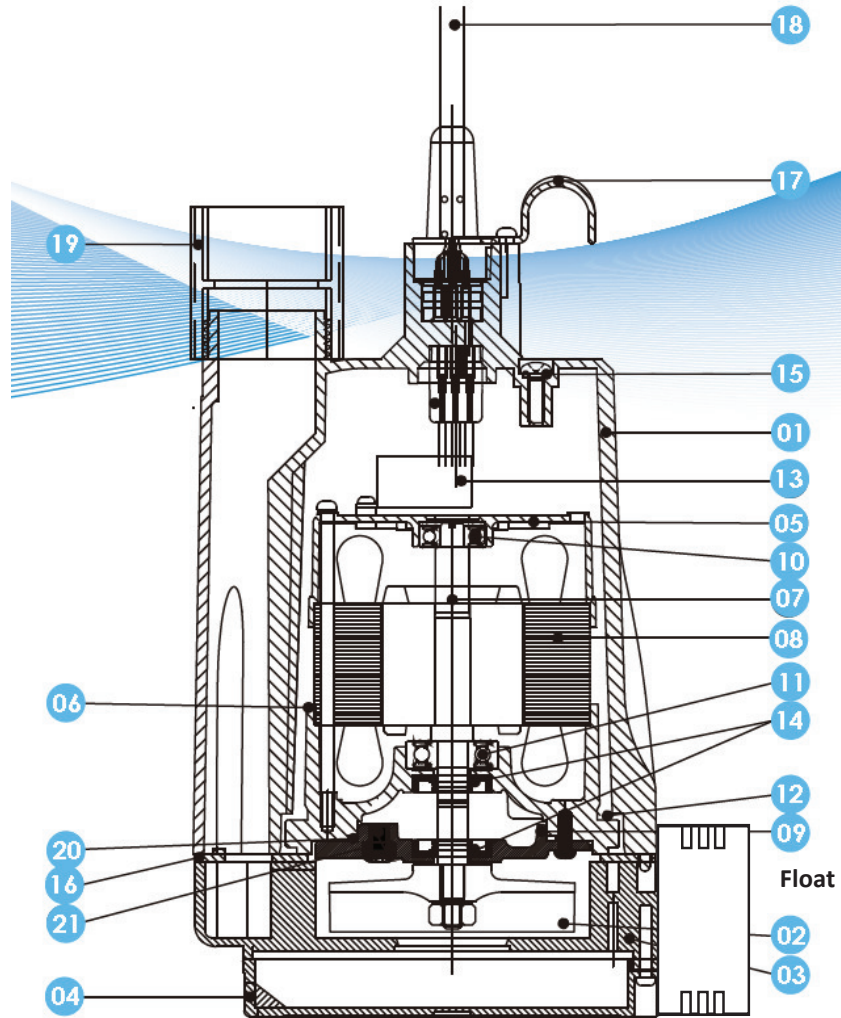

No.	Part name	No.	Part name	No.	Part name
1	Motor Housing	8	Stator	15	O-Ring
2	Impeller	9	Oil Seal Cover	16	Packing
3	Pump Casing	10	Upper Bearing	17	Handle
4	Strainer	11	Lower Bearing	18	Power Cable
5	Upper bearing cover	12	Packing	19	Non-Return Valve
6	Lower Bearing Cover	13	Capacitor	20	O-Ring
7	Shaft	14	Oil Seal	21	O-Ring